

INSTALLATION INSTRUCTIONS

C-VSW-2300-TRNST

2020-2026 Ford Transit Van

Vehicle-Specific Console (12” Inches Wide)

TOOLS REQUIRED:

T-20 Torx driver T-40 Torx driver 7/16 Wrench


PARTS and MOUNTING HARDWARE:

<u>QTY</u>	<u>DESCRIPTION</u>	<u>PART#</u>
2	Speaker grill	12662
12	#8 x 3/8” Torx screws	13405
1	Driver side trim panel	54735
1	Passenger side trim panel	54736
1	Rear mounting bracket	54738
4	Side mounting bracket	54739
1	Front mounting bracket	54742
1	Electronic tray	54745
26	1/4" Serrated nut	16013
26	1/4" x 3/4" Carriage bolt	16223
1	1/4" Hex nut kit	25520 (Includes 12 nut)

Always!

- Read all instructions before installing any Havis, Inc. products.
- **Check for obstructions (Wires, brake lines, fuel tank, etc.) before drilling any holes!**
 - Use hardware provided with install kit

C-VSW-2300- TRNST

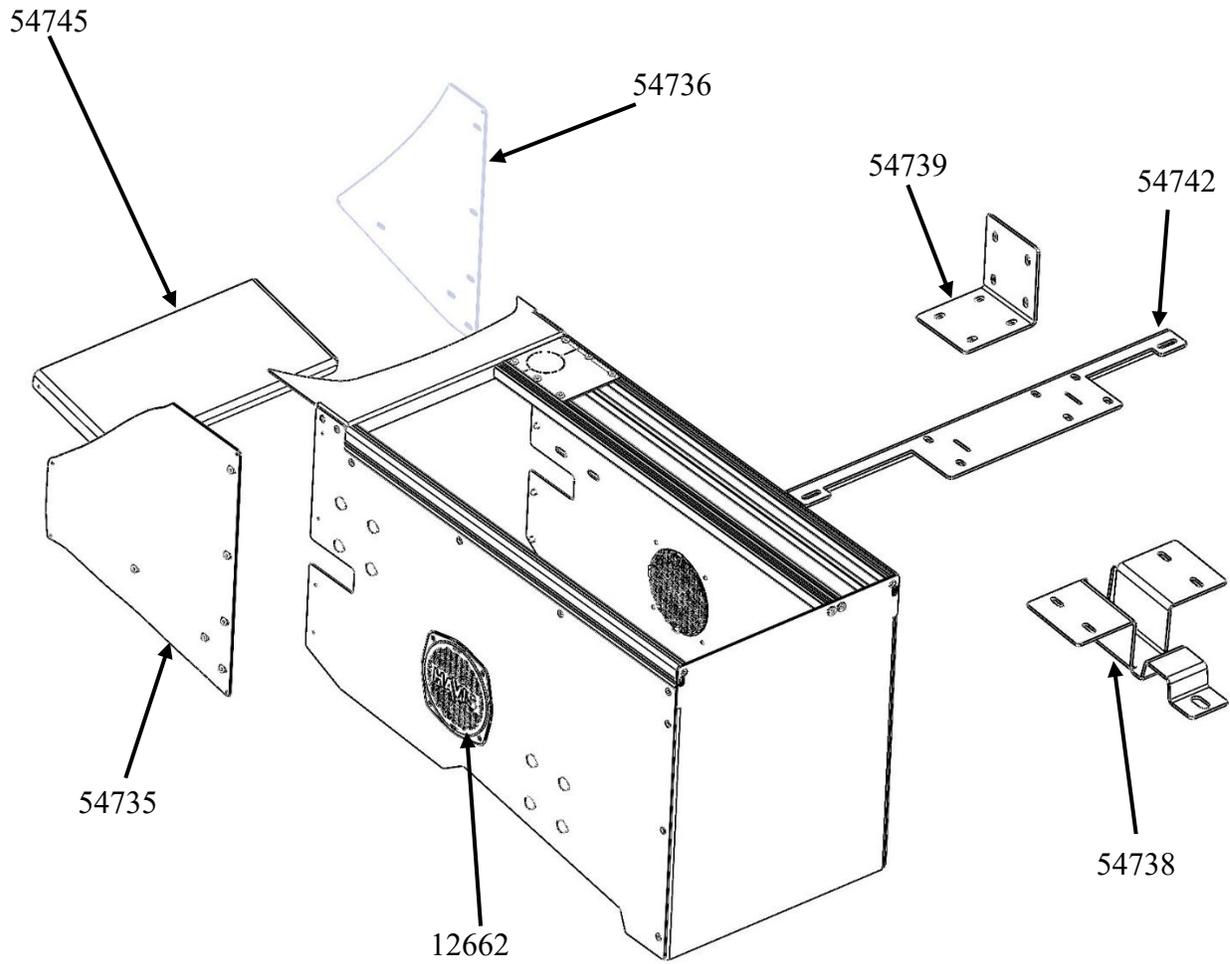




Remove the cover




Remove hardware from the front seats using T40 Torx driver

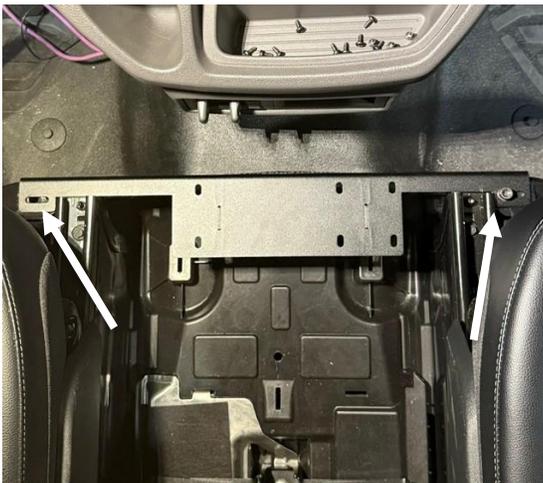

Install the front mounting bracket using previously removed hardware



Remove the two OEM nuts using 18mm socket

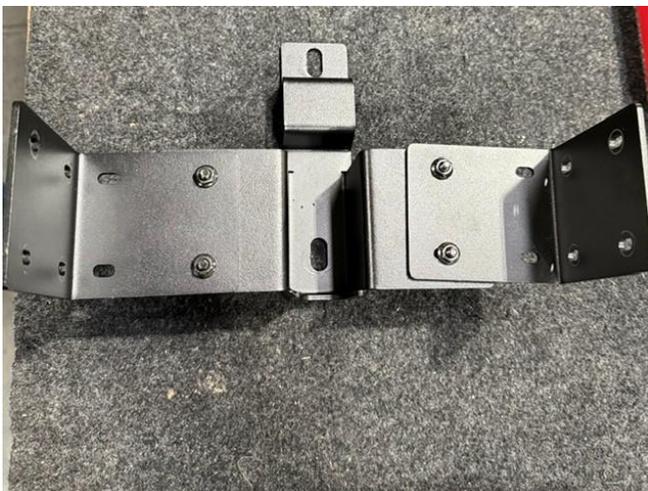


Loosely install side brackets to the rear mounting bracket using 1/4" x 3/4 carriage bolts and 1/4" nuts.




Loosely attach side brackets and rear mounting bracket to the console



Place console housing and slide toward dash.

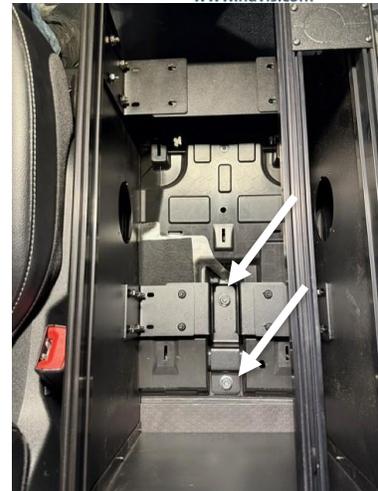

Loosely attach rear mounting bracket with the OEM nuts previously removed.

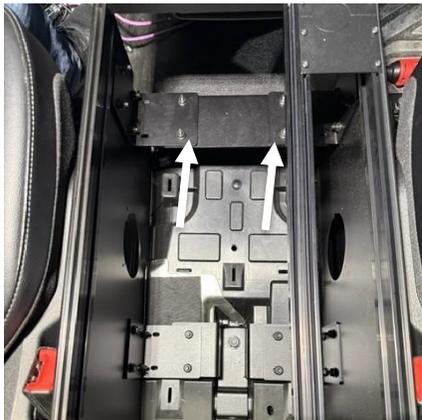

Loosely attach front mounting bracket with the side mounting bracket using the 1/4" x 3/4 carriage bolts and 1/4" nuts.



Place the equipment mounting tray in front of console



Loosely attach the trim panels and electronics tray with #8 x 3/8" Torx screws.



Tight all the hardware and the installation is now complete.