

K9-C30 & K9-C30-B K9-C30-SDS-3 & K9-C30-SDS-3 B

INSTALLATION INSTRUCTIONS

K9 Kit for 2025-2026 CHEVROLET SILVERADO 2500

TOOLS REQUIRED:

Phillips Screw Driver	Metric Socket set	Trim panel removal tool	Caulk Gun
Standard Socket set	Wire Cutters /Crimpers		Drill & Drill bits

PARTS and MOUNTING HARDWARE:

<u>QTY</u>	<u>DESCRIPTION</u>	<u>ITEM#</u>	
2	Front floor mounting bracket	42103	
2	Rear floor mount bracket	42104	
1	Floor	42095 – White	42094 – Black
2	Floor support	42102	
1	Cross support	42106	
1	Tunnel bracket	42107	
1	Rear filler plate	22952 – White	23500 – Black
1	Rear bulkhead	42099 – White	42098 – Black
1	Front bulkhead	42097 – White	42096 – Black
1	Rear window	42105	
2	Lower “B” pillar bracket	42108	
2	Upper “B” pillar bracket	42109	
1	Ceiling	42101 – White	42100 – Black
1	DS side curtain panel	42111 – White	42110 – Black
1	PS side curtain panel	42113 – White	42112 – Black
1	DS Door panel	56342 – White	56341 – Black
1	PS Door panel	56345 – White	56344 – Black
1	DS Window guard	56343	
1	PS Window guard	56346	
1	Floor mat	43006	
1	Dome light kit	17987	
1	Silicone	20011 – White	20012 – Black
1	Rear brace	43007	


HARDWARE


<u>QTY</u>	<u>DESCRIPTION</u>	<u>ITEM#</u>
20	1/4" x 3/4" Carriage bolt	16235
76	1/4" Flat washer	16154
72	1/4" Phillips screw	16618
40	1/4" Serrated nut	16086
32	#10 x 1/2" Screw	16655
10	#10 x 1/2" Flat head screw	16641

Always!

- Read all instructions before installing any Havis, Inc. products.
- **Check for obstructions (Wires, brake lines, fuel tank, etc.) before drilling any holes!**
- Use hardware provided with install kit

K9-C30 Assembly

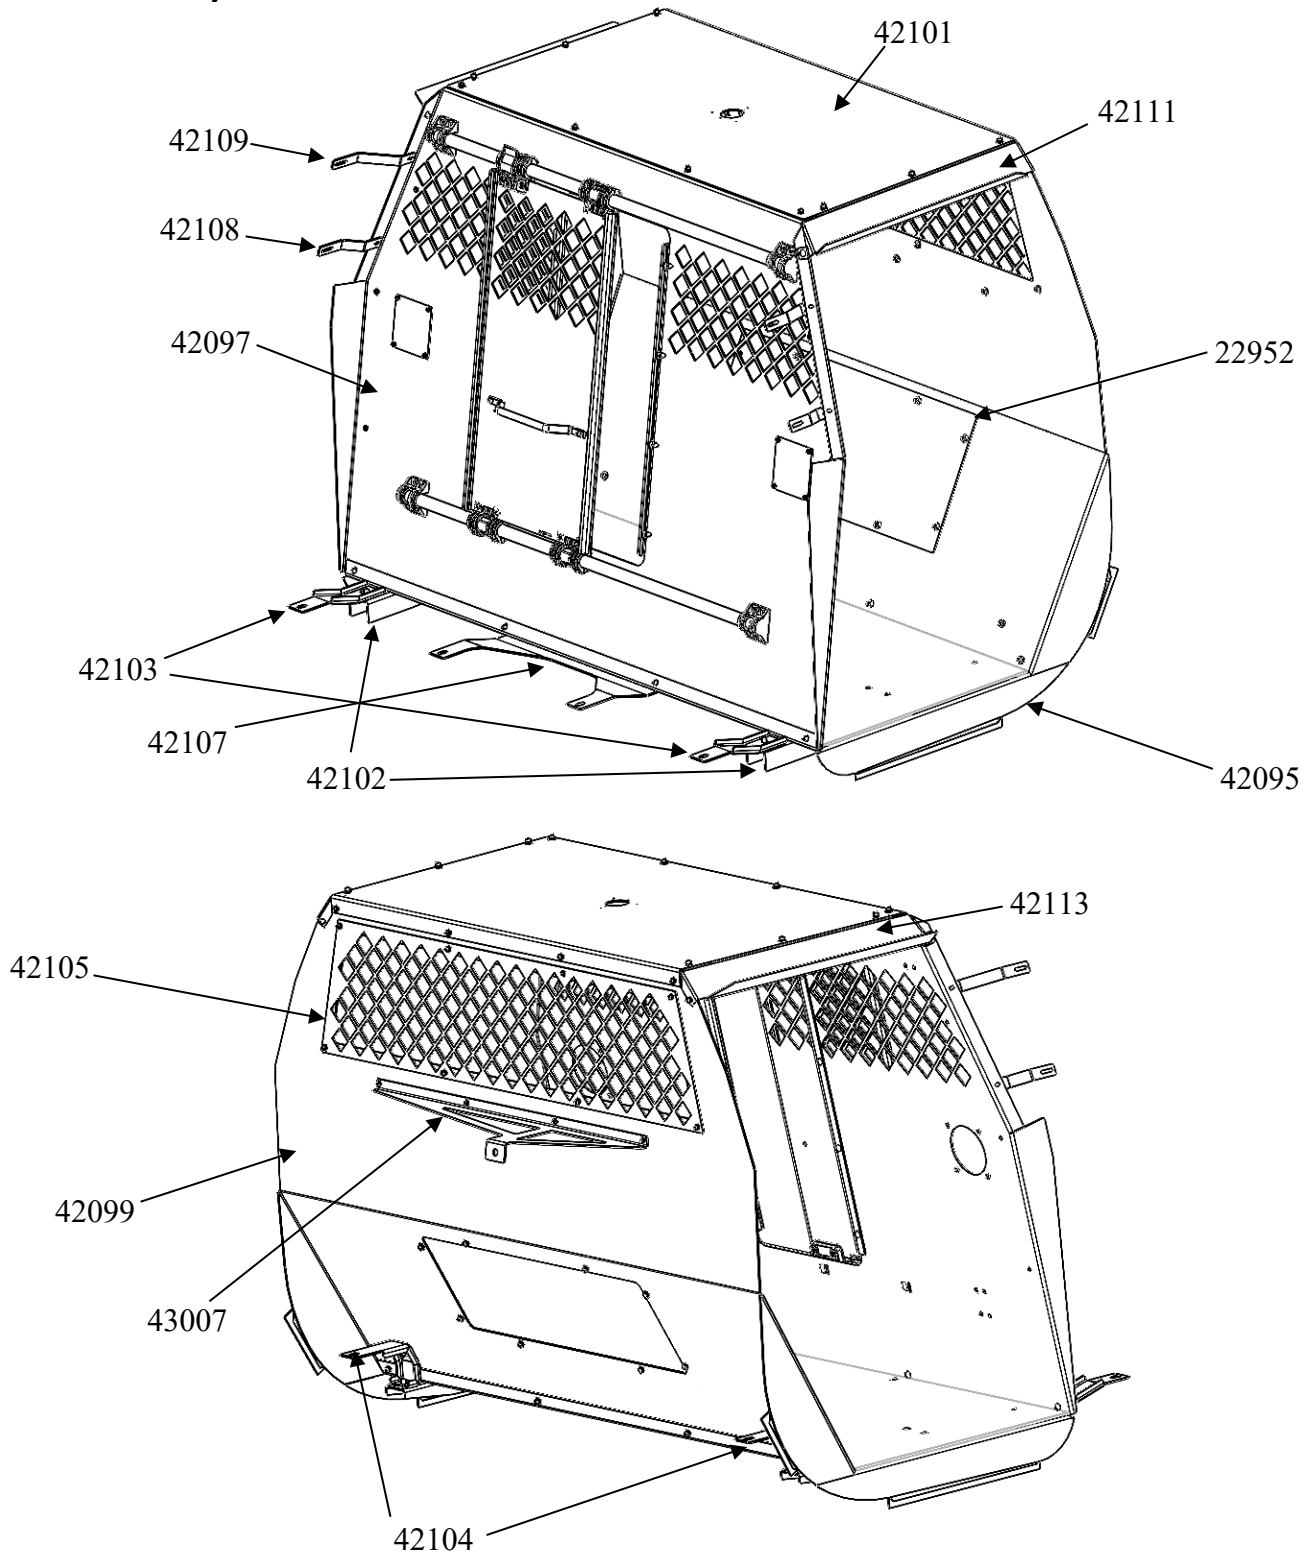


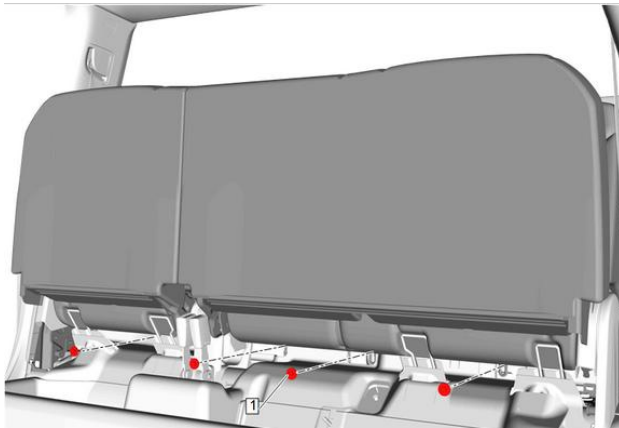

Remove all the bolts of the rear seat.



Remove the headrest and the headrest guide.

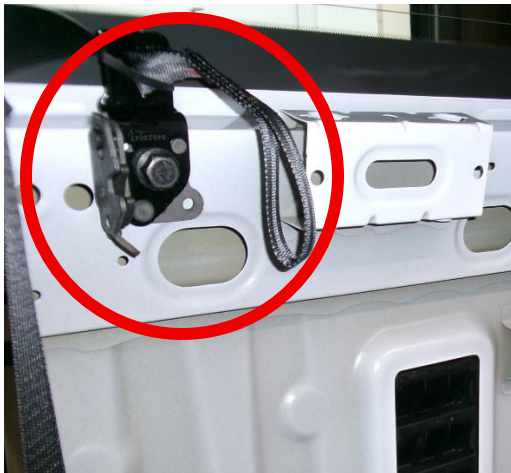

Find the three rear seats back latch.



Push up the rear seat back latch to remove the seats. Remove the middle latch.



Remove the jack and relocate where appropriate.



Remove rearmost bolts of front seat tracks and the center seat or console. Slide tunnel bracket under seat tracks and loosely reinstall hardware.



Place supports on floor. Slide front brackets under seat tracks and loosely install 1/4" Phillips screw and 1/4" Flat washer.



Install rear brackets to seat mounts using rear seat hardware.



Assembled floor bracketry should look as shown. Some hardware in photos has changed for production.



Attach floor stiffener to floor panel with 1/4" Phillips screw and 1/4" flat washer.



Install floor panel, align to be centered and square, and tighten all hardware.



Replace grab handles with B-pillar brackets, leaving trim loose.



Loosely install bulkheads, rear support, and roof panel using the 1/4" Phillip screw, 1/4" Flat washer, 1/4" x 3/4" Carriage bolt and 1/4" Serrated nut.



Attach B-pillar brackets and tighten hardware.
Reinstall trim once tight.



If installing side drawer storage see last page.
Tighten remaining loose bulkhead and bracket hardware.



Hook top of side curtain panels over bulkhead and rotate up into place to install.



Install and tighten side curtain hardware.



Install door panels and window guards, insert floor mat, install rear cover panel and window using #10 x 1/2" Screw and #10 x 1/2" Flat head screw. Install any optional accessories at this time.
K9-C30 & K9-C30-SDS-3_INST_6-26

K9-A-119 & K9-A-119-B INSTALLATION

INSTRUCTIONS

TOOLS REQUIRED:

Phillips Screw Driver	Metric Socket set	Trim panel removal tool	Caulk Gun
Standard Socket set	Wire Cutters /Crimpers		Drill & Drill bits

PARTS and MOUNTING HARDWARE:

<u>QTY</u>	<u>DESCRIPTION</u>	<u>ITEM#</u>	
1	Panel divider	43491 – White	43490 – Black
1	Panel top shelf	43493 – White	43492 – Black
1	Panel middle shelf	43495 – White	43494 – Black
1	Panel Lower shelf	43497 – White	43496 – Black


HARDWARE

<u>QTY</u>	<u>DESCRIPTION</u>	<u>ITEM#</u>
9	1/4" Serrated nut	16086
10	1/4" Flat washer	16154
9	1/4" x 3/4" Carriage bolt	16235
10	1/4" Phillips screw	16618
3	1/4 x 3/4" Hex SEMS bolt (self-threading)	16359

Always!

- Read all instructions before installing any Havis, Inc. products.
- **Check for obstructions (Wires, brake lines, fuel tank, etc.) before drilling any holes!**
 - Use hardware provided with install kit

K9-A-119 Assembly

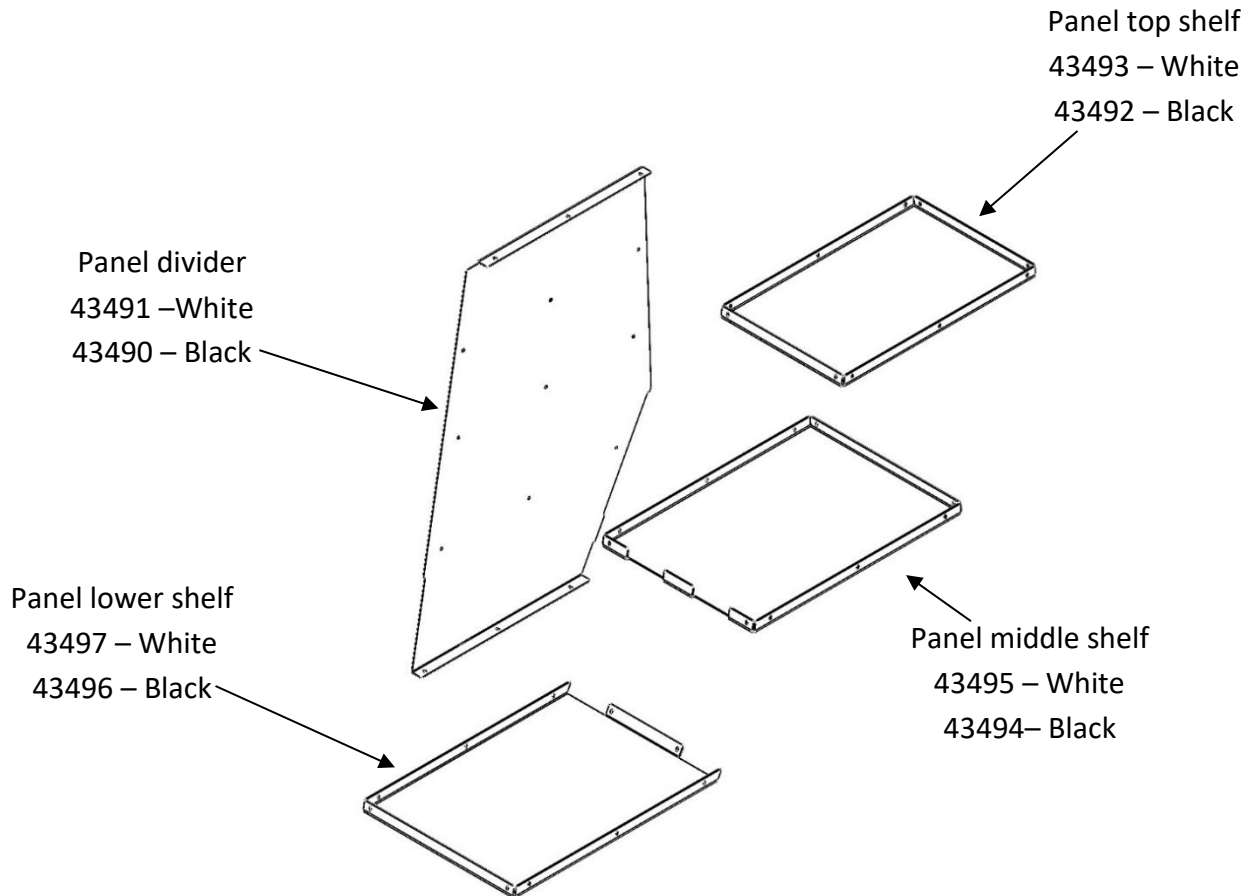

Install the panel divider.



Install the three shelves.