


INSTALLATION INSTRUCTIONS:

- 1. REMOVE FRONT PASSENGER SEAT BOLTS.
- 2. LOOSEN REAR SEAT BOLTS AS NEEDED TO HELP CREATE CLEARANCE UNDER SEAT RAILS FOR BASE.
- 3. LIFT FRONT OF SEAT BASE AND SLIDE HDM BASE BETWEEN FLOOR AND SEAT BASE.
- 4. REINSTALL SEAT BOLTS AND TIGHTEN ALL BOLTS TO MANUFACTURER'S TORQUE SPECIFICATION.
- 5. INSTALL THE OFFSET BRACKET USING THE INCLUDED HARDWARE, WITH THE OFFSET GOING TOWARD THE DASH OF THE VEHICLE.
- 6. FOLLOW GENERAL INSTRUCTIONS FOR POLE AND UPPER MOUNT PARTS.

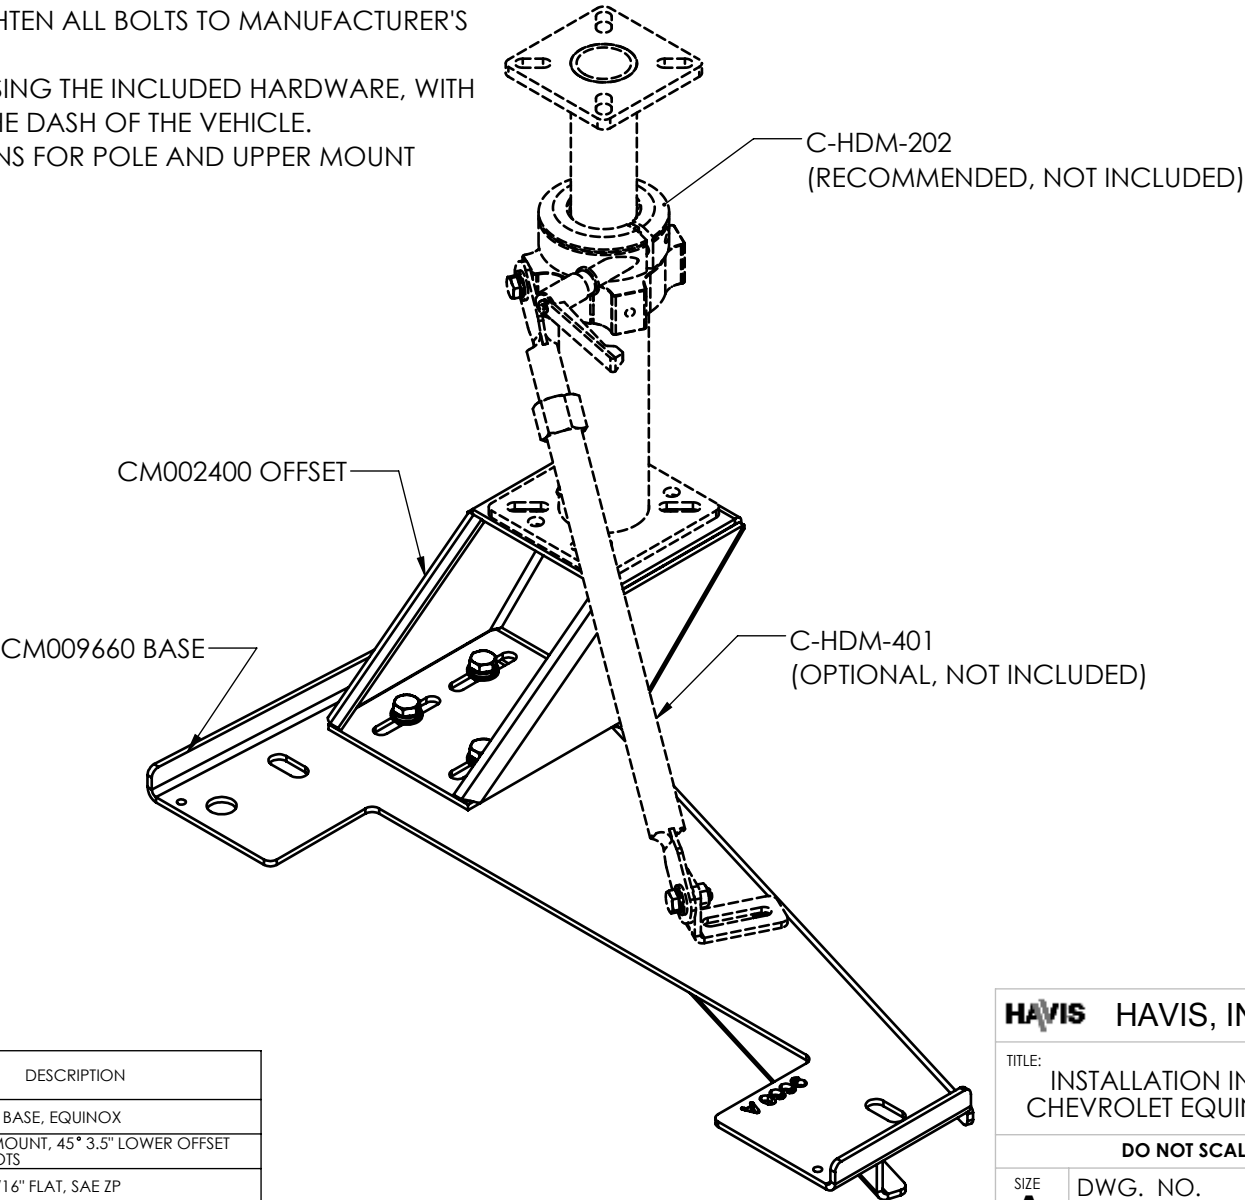

ITEM NO.	QTY.	PART NUMBER	DESCRIPTION
1	1	CM009660	BRKT, HDM, BASE, EQUINOX
2	1	CM002400	BRACKET, MOUNT, 45° 3.5" LOWER OFFSET BASE W/SLOTS
4	4	GSM31006	WASHER, 5/16" FLAT, SAE ZP
5	4	GSM31027	WASHER, 5/16" LOCK, ZP
6	4	GSM33011	SCREW, 5/16-18 X 3/4"

HAVIS HAVIS, INC.

75 JACKSONVILLE RD.
WARMINSTER, PA. 18974
1-800-524-9900

TITLE:
INSTALLATION INSTRUCTIONS,
CHEVROLET EQUINOX HDM BASE

DO NOT SCALE DRAWING

SIZE
A

DWG. NO.
C-HDM-1004-INST

REV
2-19

WEIGHT (LB): 16.1920SCALE: 1:4SHEET 1 OF 1