



INSTALLATION INSTRUCTIONS:

- 1. REMOVE 8X GSM33178, EXTRUSION, AND CENTER U-BRACKET (C-VS-0618-INUT SHOWN). IF C-PM-124 IS INSTALLED, REMOVE THAT INSTEAD.
- 2. INSERT C-PM-134-PC AND SHORTER EXTRUSION IN EMPTY SPACE AND INSTALL WITH 12X GSM33178.

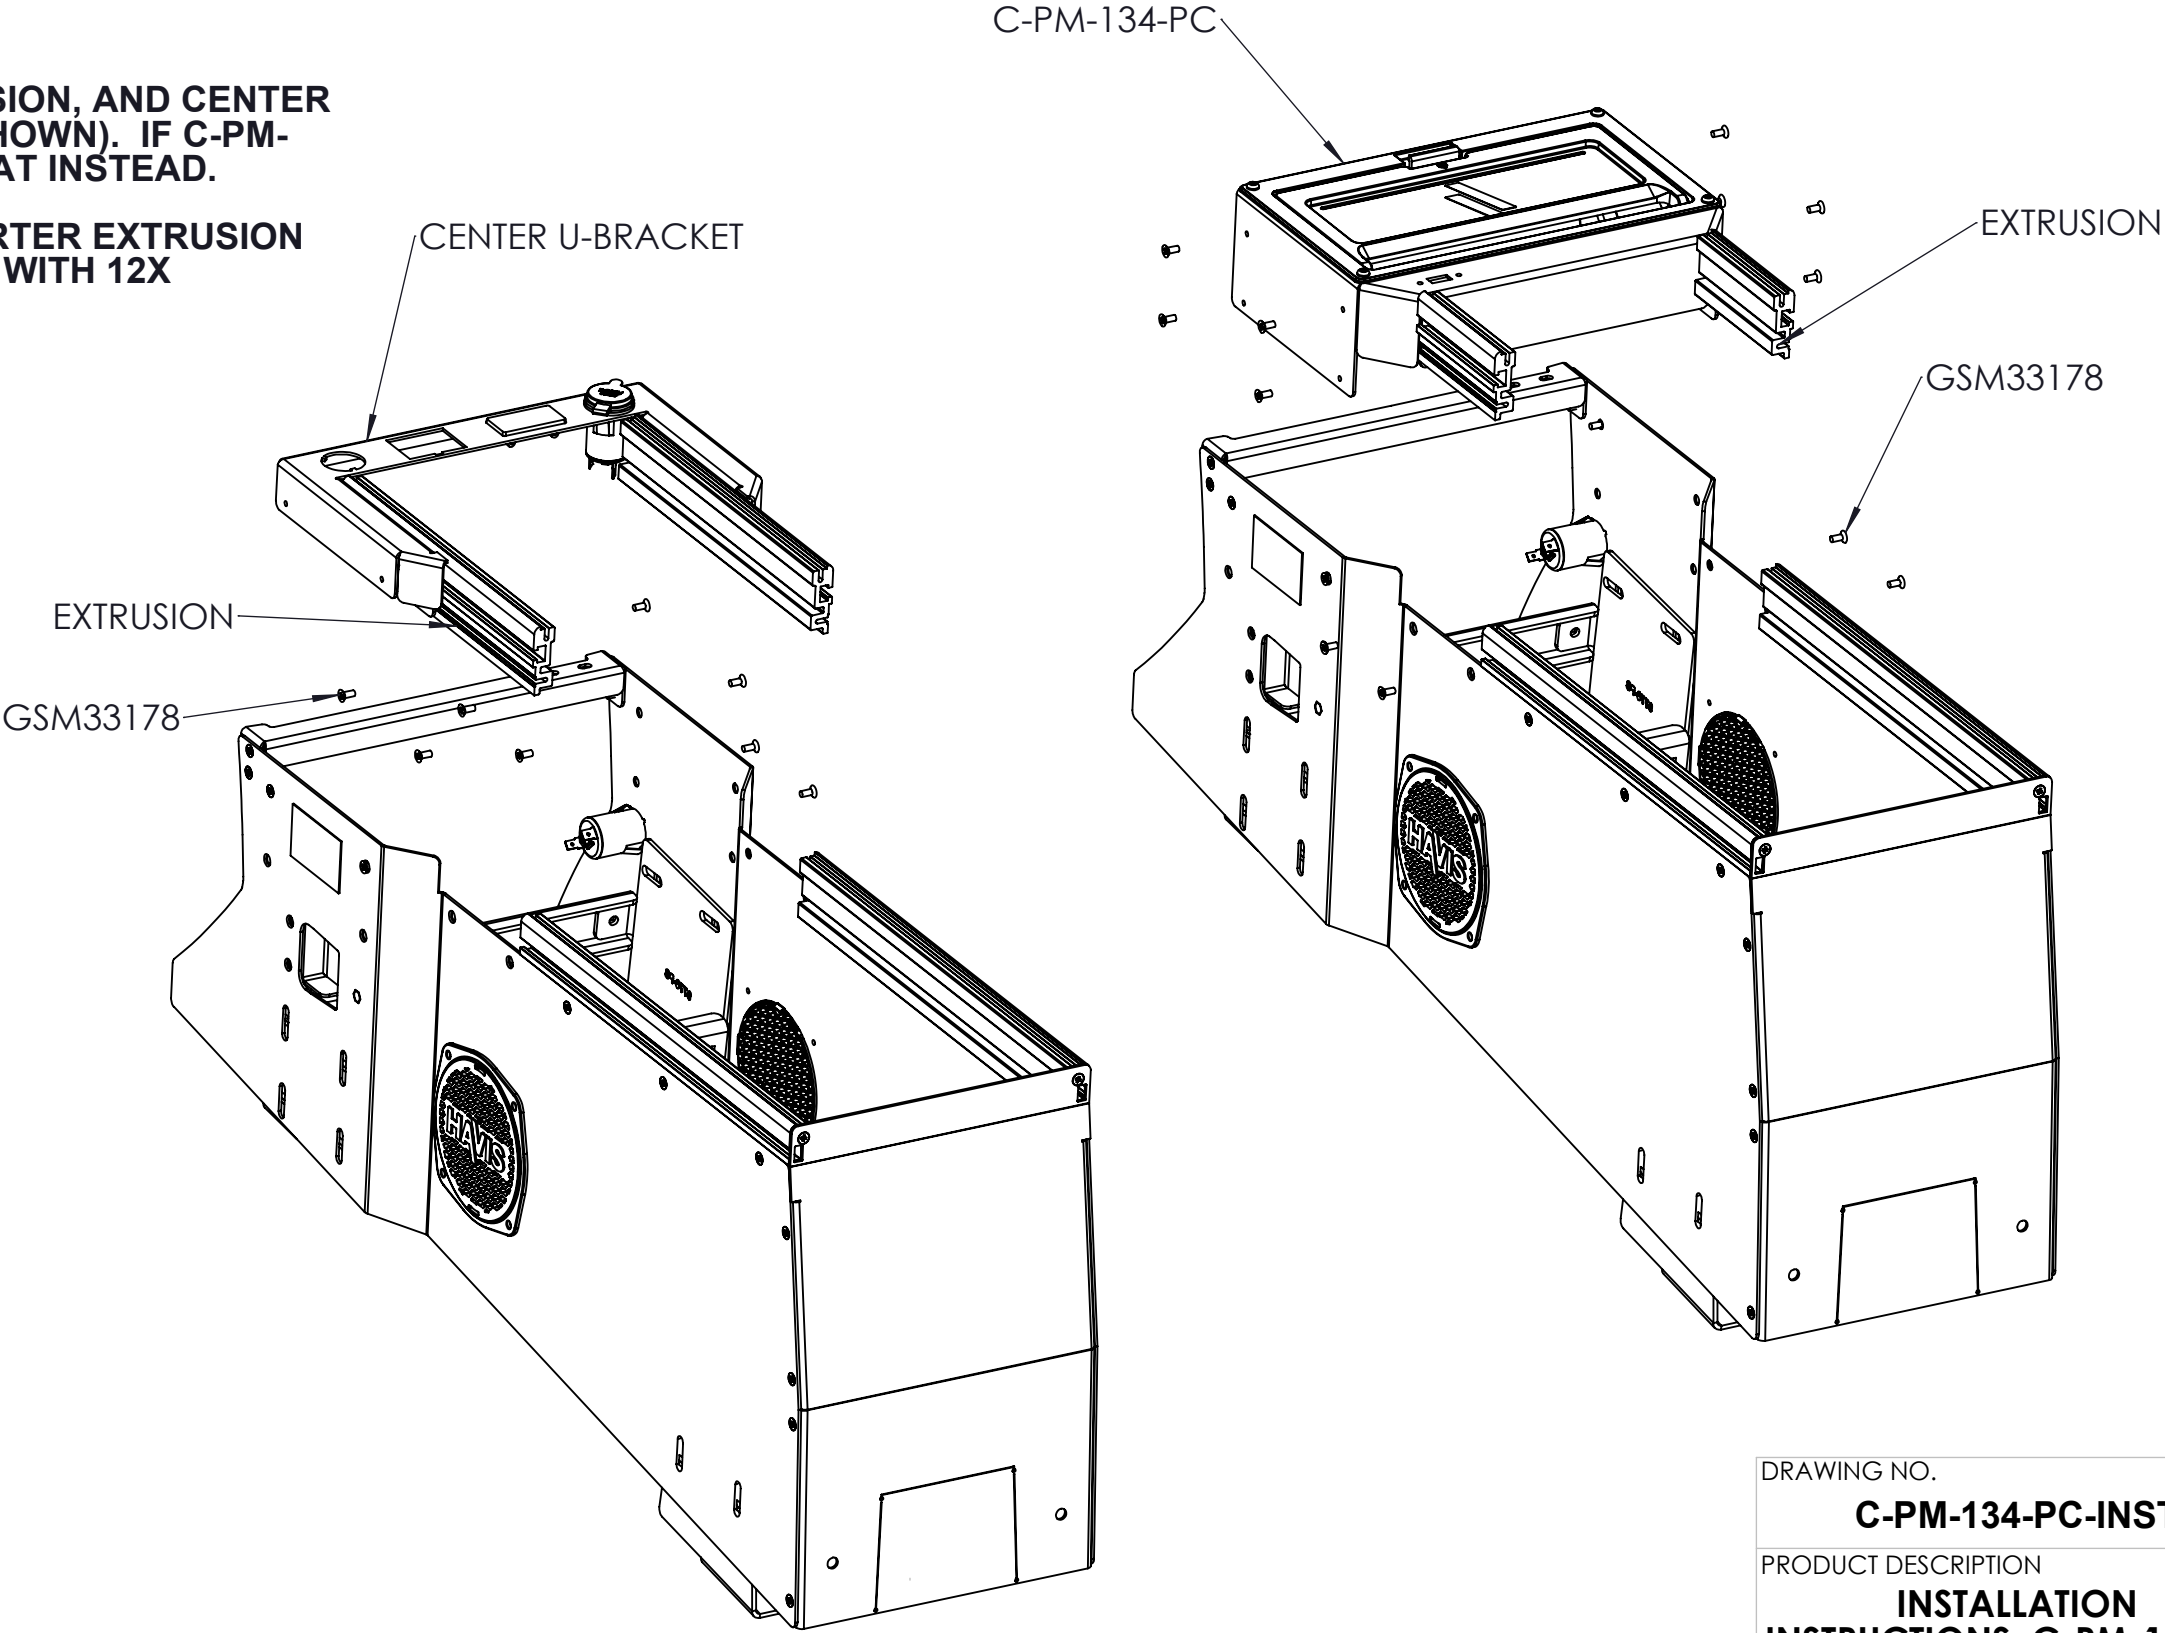

WARNING: ALL HAVIS INC. PRODUCTS ARE DESIGNED WITH SAFETY OF USE AND INSTALLATION IN MIND. HOWEVER, IT IS THE SOLE RESPONSIBILITY OF THE OWNER/OPERATOR OF A VEHICLE USING HAVIS INC. MOUNTING AND DOCKING EQUIPMENT, TO INSURE THAT THE EQUIPMENT IS INSTALLED SO THAT IT WILL NOT INTERFERE WITH VEHICLE OPERATION, INTERFERE WITH SAFETY DEVICES, OBSTRUCT VIEW OF DRIVING CONDITIONS, OR IN ANY WAY DEGRADE OCCUPANT SAFETY. IMPROPER INSTALLATION CAN CAUSE SERIOUS INJURY IN THE EVENT OF AN ACCIDENT. INSTALLATION SHOULD ONLY BE PERFORMED BY QUALIFIED PROFESSIONALS. COMPUTERS AND MOTION DEVICES MUST BE MOVED TO AND STOWED/SECURED IN THEIR SAFE DRIVING POSITIONS BEFORE OPERATING VEHICLE.

DRAWING NO.	
C-PM-134-PC-INST	
PRODUCT DESCRIPTION	
INSTALLATION INSTRUCTIONS, C-PM-134-PC	
 1-800-524-9900 WWW.HAVIS.COM	WEIGHT: (LBS)
	28.922
	REV. DATE
11/20/2024	