

C-SBX-107 INSTALLATION INSTRUCTIONS

Lockable Under-Seat Storage for 2025 Chevrolet Silverado EV

TOOLS NEEDED:

Socket set (Standard & Metric) Open End wrench set T-20 Torx bit


INSTALLATION PARTS AND MOUNTING HARDWARE:

<u>QTY</u>	<u>DESCRIPTION</u>	<u>PART #</u>
1	Storage Divider	25409
2	Mounting Bracket	40621
2	M6 X 1mm, 60mm Bolt	41586
2	AL Spacer, 1- 5/8" Long	41587
2	Washer, 3/8" Flat	16127
2	Torx Screw, #8 X 3/8	13405
6	1/4-20 Nut, Flanged	16013
6	1/4 -20 X 1/2" Carriage Bolt	16222

ALWAYS!

- * Read all Instructions before installing any Havis, Inc. products.
- * Use Hardware included with install kit

**C-SBX-107
(Assembly)**

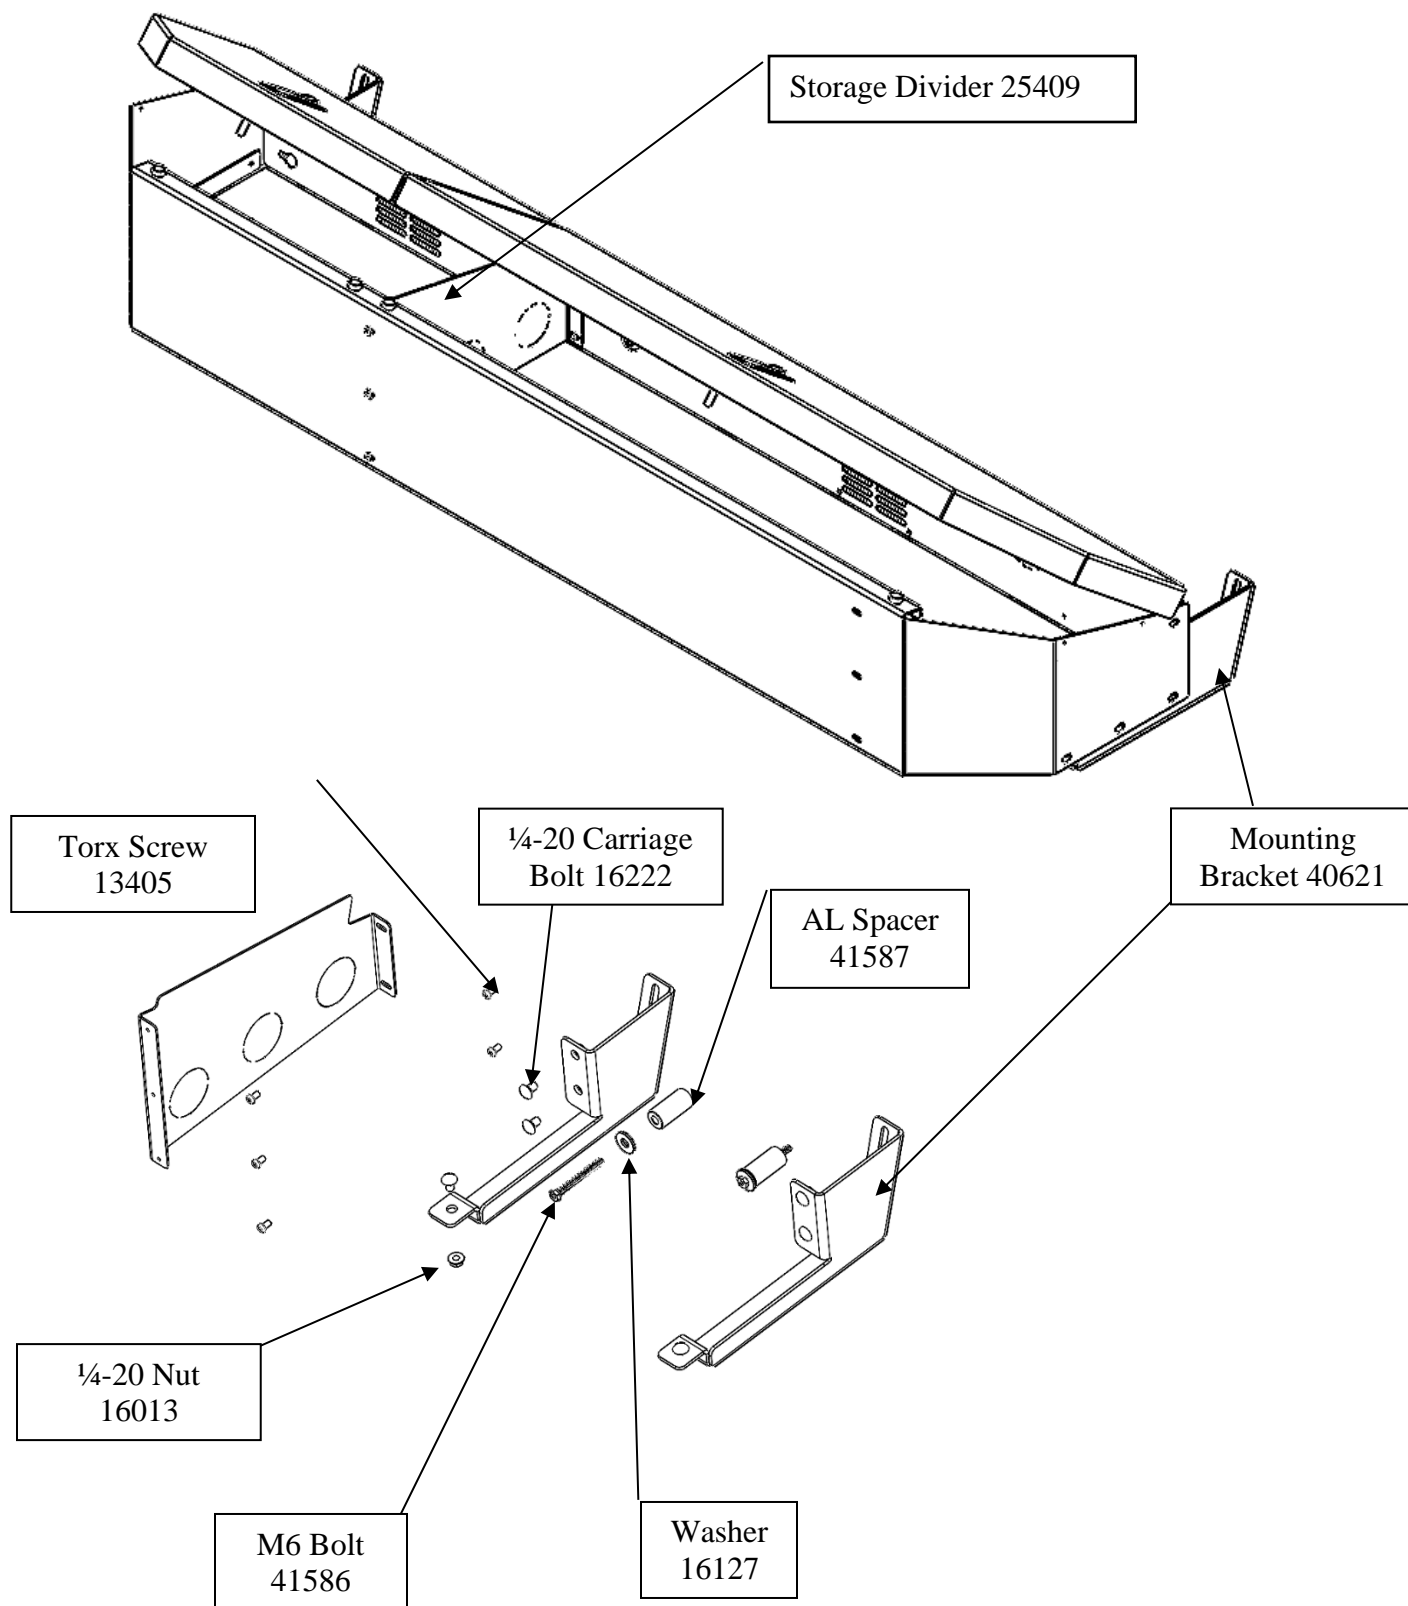




Remove OEM storage cubbies from under rear seat




Using OEM bolts from the storage cubby, install mounting brackets (40621) on DS and PS. **NOTE: Mounting Bracket is the same for both sides. Orientation from the PS is as shown above.**

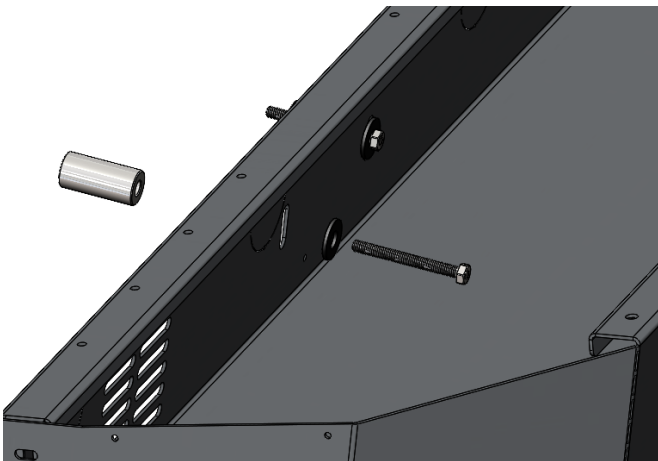

Insert M6 bolt (41586), Washer (16127) and AL Spacer (41587) into slotted holes of storage box.



Place storage box on top of Mounting Brackets (40621) and loosely install M6 bolts (41586) into center mounting holes

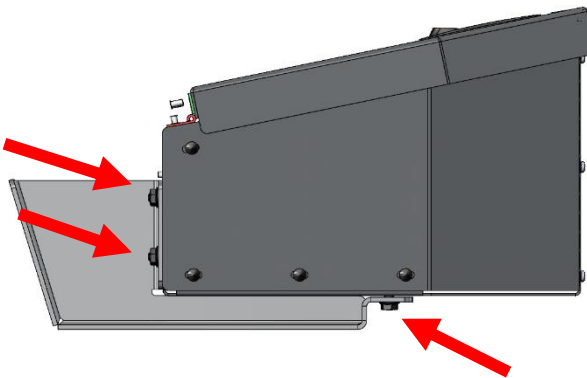

Install Carriage Bolts (16222) and 1/4-20 Nuts (16013) from inside the storage box into the Mounting Bracket (40621) in 3 positions shown. Repeat for other side. Tighten all fasteners.