


**INSTALLATION:**

1. REMOVE OEM TUNNEL MOUNT AND RETAIN HARDWARE.
2. REMOVE OEM GROUNDING WIRE AND RETAIN HARDWARE.
3. LOOSELY ATTACH FRONT BRACKET #25286 IN POSITION SHOWN USING OEM HARDWARE.
4. REATTACH OEM GROUNDING WIRE USING OEM HARDWARE.
5. LOOSELY ATTACH REAR BRACKET #25287 IN POSITION SHOWN USING OEM HARDWARE
6. REMOVE BACKING FROM ADHESIVE STRIP AND INSTALL END CAP TO FRONT END OF TRACK.
7. SLIDE TWO (2) 1/4-20 X 3/4" LONG HEX HEAD BOLTS INTO THE BOTTOM SLOTS ON THE TRACK.
8. POSITION THE TRACK ON THE REAR BRACKET ALLOWING THE BOLTS TO PROTRUDE THROUGH THE REAR BRACKET.
9. LOOSELY ATTACH TWO (2) 1/4-20 SERRATED NUTS.
10. SLIDE FOUR (4) 1/4-20 STANDARD NUTS INTO THE SIDE OF THE TRACK, 2 EACH SIDE.
11. LAY TRACK ON TOP OF REAR BRACKET AND SLIDE BETWEEN THE TWO FLANGES ON THE FRONT BRACKET.
12. POSITION THE NUTS AND LOOSELY ATTACH USING (4) FOUR 1/4-20 X 3/4" LG BOLTS, FLAT WASHERS AND SPLIT LOCK WASHERS.
13. POSITION TRACK IN DESIRED LOCATION AND FULLY TIGHTEN ALL HARDWARE.
14. ATTACH THE REAMINING END CAP TO THE REAR OF THE TRACK.

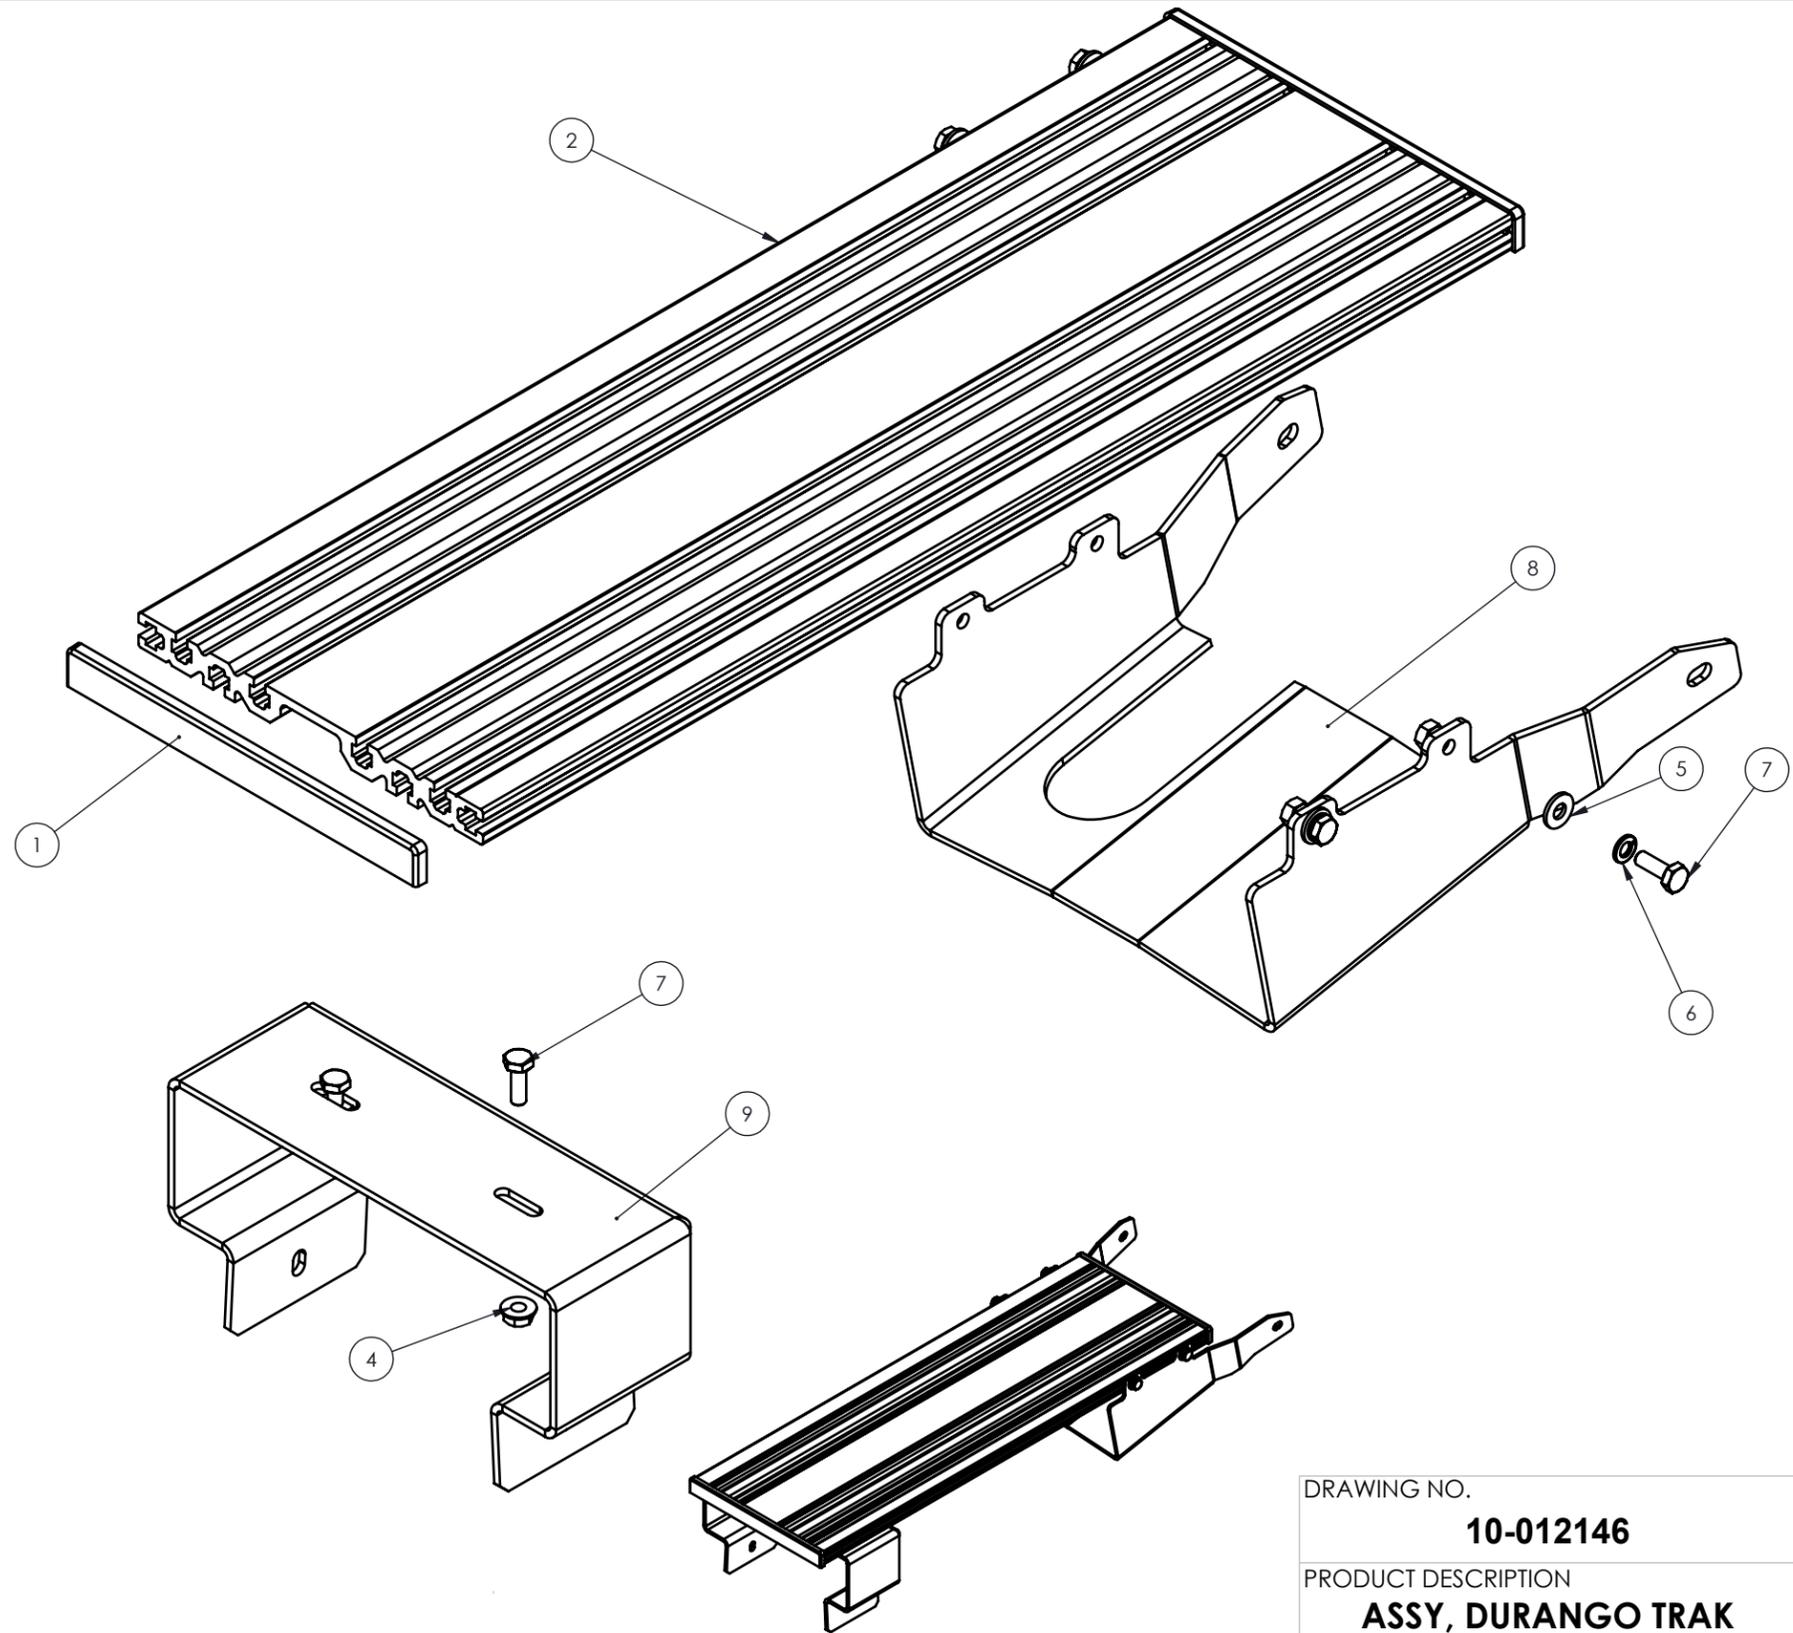

LINE	QTY.	ITEM NUMBER	DESCRIPTION
1	2	11313	KIT, TRAK MOUNT GASKET AND END CAP
2	1	12966	8" WIDE TRAK MOUNT 24" LONG
3	4	15997	NUT 1/4-20 HEX BLK, ZINC, GRD 5
4	2	16013	NUT 1/4-20 HEX FLANGE SERRATED ZP, BLK
5	4	16122	WASHER, 1/4 FLAT ZP, BLACK
6	4	16142	WASHER 1/4 LOCK ZP BLK
7	6	16326	SCREW 1/4-20 X 3/4" HHCS ZP BLK
8	1	25286	BRKT, FRONT MOUNTING TRAK DURANGO 2021
9	1	25287	BRKT, REAR MOUNTING TRAK, DURANGO 2021

**WARNING:** ALL HAVIS INC. PRODUCTS ARE DESIGNED WITH SAFETY OF USE AND INSTALLATION IN MIND. HOWEVER, IT IS THE SOLE RESPONSIBILITY OF THE OWNER/OPERATOR OF A VEHICLE USING HAVIS INC. MOUNTING AND DOCKING EQUIPMENT, TO INSURE THAT THE EQUIPMENT IS INSTALLED SO THAT IT WILL NOT INTERFERE WITH VEHICLE OPERATION, INTERFERE WITH SAFETY DEVICES, OBSTRUCT VIEW OF DRIVING CONDITIONS, OR IN ANY WAY DEGRADE OCCUPANT SAFETY. IMPROPER INSTALLATION CAN CAUSE SERIOUS INJURY IN THE EVENT OF AN ACCIDENT. INSTALLATION SHOULD ONLY BE PERFORMED BY QUALIFIED PROFESSIONALS. COMPUTERS AND MOTION DEVICES MUST BE MOVED TO AND STOWED/SECURED IN THEIR SAFE DRIVING POSITIONS BEFORE OPERATING VEHICLE.

DRAWING NO. <b>10-012146</b>	
PRODUCT DESCRIPTION <b>ASSY, DURANGO TRAK MOUNT</b>	
 1-800-524-9900 WWW.HAVIS.COM	WEIGHT: (LBS) <b>13.9621</b>
	REV. DATE <b>9-21</b>