

INSTALLATION INSTRUCTIONS C-TTP-TAH-105

2021-2026 Chevrolet Tahoe PPV

**For Mounting C-SBX-1000 Series Drawers behind Second Row Seat
 Fits with Havis standard length K9 inserts (K9-C26 and K9-C26-B)
 Or Progard or Setina Rear Partitions**

TOOLS REQUIRED:

Standard Socket Set Metric Socket Set 5/32" Allen Key/hex bit T50 Torx

C-TTP-TAH-102 (Main Box) PARTS and MOUNTING HARDWARE:

<u>QTY</u>	<u>DESCRIPTION</u>	<u>ITEM#</u>	
1	Main Box assembly	25730	
1	Lid – Full size	25732	
2	Rear Floor Bracket	24807	
2	Side top trim bracket	24802	
1	DS Front Floor Bracket	24809	
1	PS Front Floor Bracket	24810	
2	M10 x 1.5 x 45mm Hex Bolt	16518	
14	1/4 Star washer	16148	
14	1/4" x 3/4" Hex bolt	16326	
6	1" Hole plug	15803	
8	1/4" x 5/8" Button head screw	25661	
1	Equipment mounting tray (removable)	24819	included in main box
4	8-32 x 1/2" Machine screw	16378	for removable tray
4	# 8 Flat washer	16119	for removable tray

C-TTP-TAH-107 (7" Riser) PARTS and MOUNTING HARDWARE:


1	Driver side riser bracket	24982
1	Passenger side riser bracket	24983
1	Forward backing plate	25714
4	1/4" Flat washer	16122
4	5/16" Flat washer	16123
4	1/4" Lock washer	16142
4	5/16" Lock washer	16143
4	5/16" x 3/4" Thread-Forming Screw	16245
4	5/16" X 1 HHCS	16336
4	1/4" X 3/4 PPHMS	16404
3	#10 X 1/2 PPHSMS	16655

Always!


- Read all instructions before installing any Havis, Inc. products.
- Use hardware provided with install kit

**C-TTP-TAH-105
Assembly**

Front of
vehicle

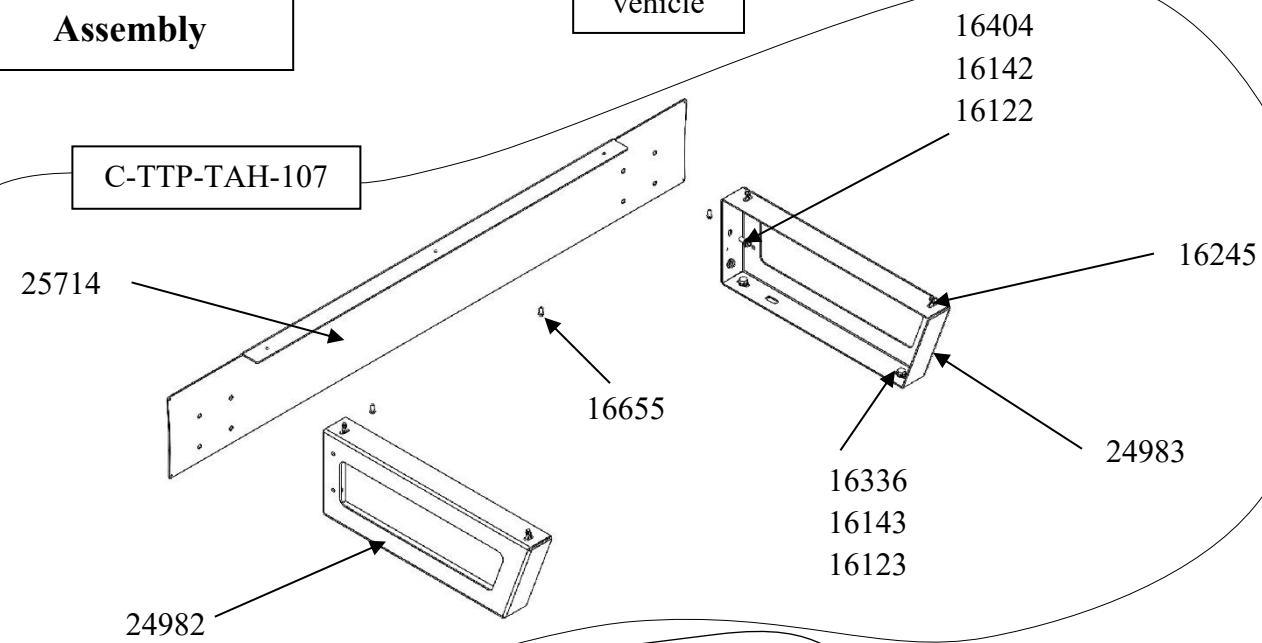

C-TTP-TAH-102

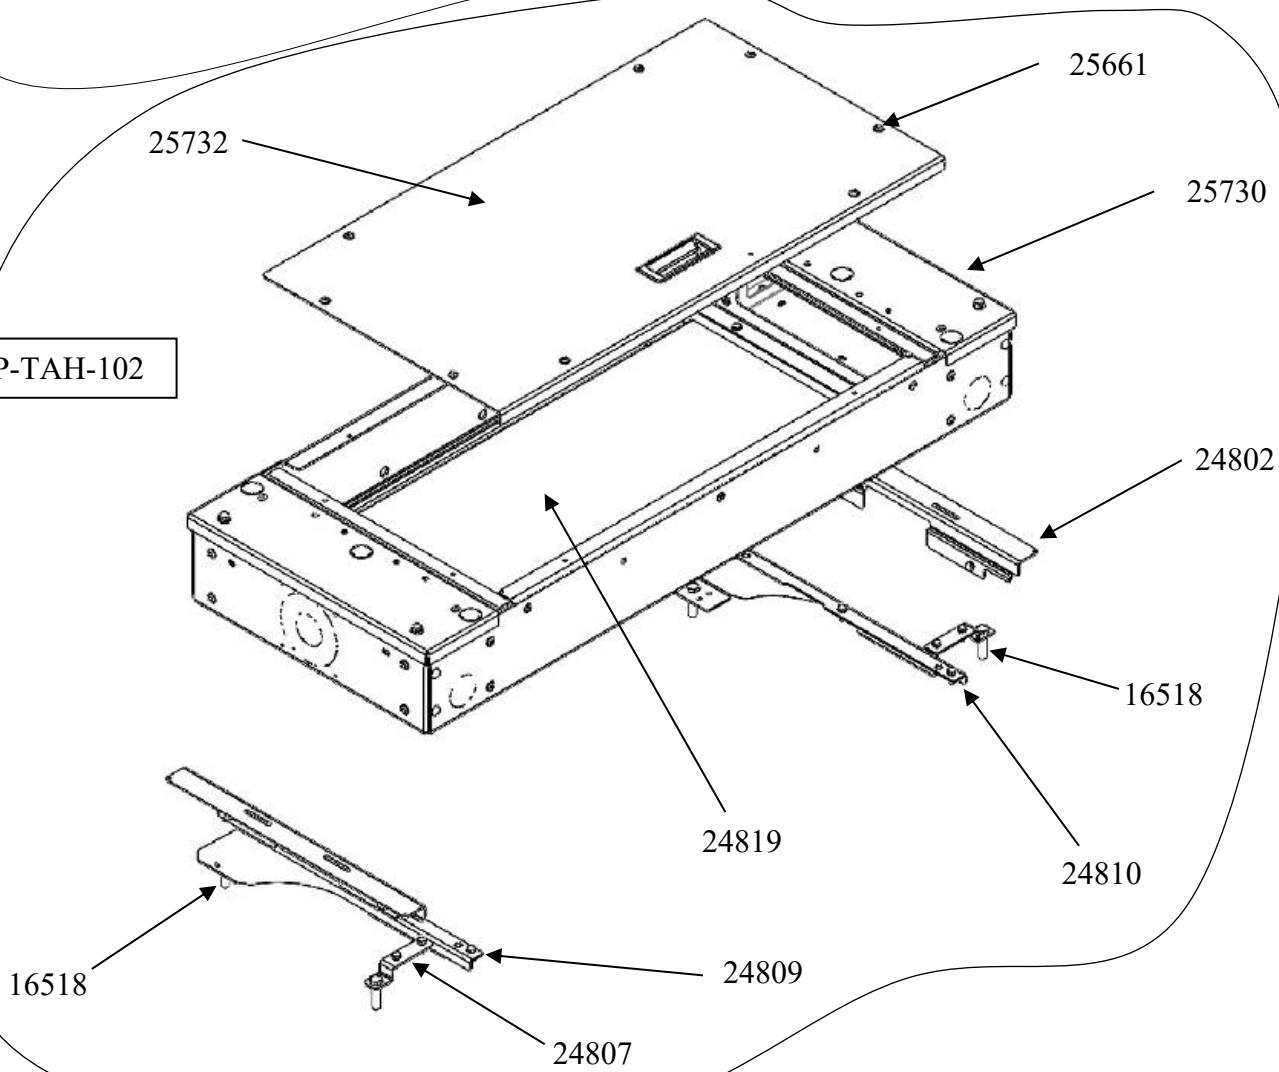



Determine 3rd row seat bolt locations in forward floor and loosely attach long front brackets with supplied M10 bolts.

Temporarily remove OEM M12 Torx bolts from rear seat belt mount locations (T50 Torx)



Loosely attach rear floor brackets to rear seat belt anchors on each side with previously removed OEM 12mm Torx bolts.



Tighten floor bracket hardware.

Attach side top trim brackets with $1/4''$ x $3/4''$ Hex bolts and star washers.



Passenger side bracket shown attached to floor with $M10 \times 1.5 \times 45mm$ hex bolt.

NOTE: Remove padding under bracket and bolt for improved mounting. Repeat on driver side.



Place main box assembly onto brackets and attach with (10) $1/4''$ x $3/4''$ Hex bolts and star washers. Mount equipment onto removable tray as desired.



Attach main box lid with $1/4''$ x $5/8''$ Button head screws. Attach risers to main box with $5/16''$ Hex bolts and washers. Attach risers to drawer with $5/16''$ Thread-Forming Screws.

Attach backing plate to risers and drawer with $1/4''$ and #10 Phillips hardware.