

INSTALLATION INSTRUCTIONS

UNDER-SEAT REAR STORAGE C-SBX-106

For 2020-2026 RAM 2500 & 3500 CREW CAB (5th gen- Body Code DJ)

TOOLS REQUIRED:

Standard and Metric Socket Sets


PARTS and MOUNTING HARDWARE:


<u>QTY</u>	<u>DESCRIPTION</u>	<u>PART#</u>
1	Driver Side Box	27387
1	Passenger Side Box	27546
4	Rubber Bumper	13691
4	Grommet	15787
4	Dome Plug	15830
16	8-32 Keps nut	16016
2	7/16 Washer	16128
2	7/16" ¼ -14 x 3/4 Screw	16359
1	Hex M12 x 1.75 x 35	16524
2	Southco Latch	16867
2	Hinge	19138

Always!

- Read all instructions before installing any Havis, Inc. products.
- **Check for obstructions (Wires, brake lines, fuel tank, etc.) before drilling any holes!**
 - Use hardware provided with install kit

C-SBX-106
Assembly

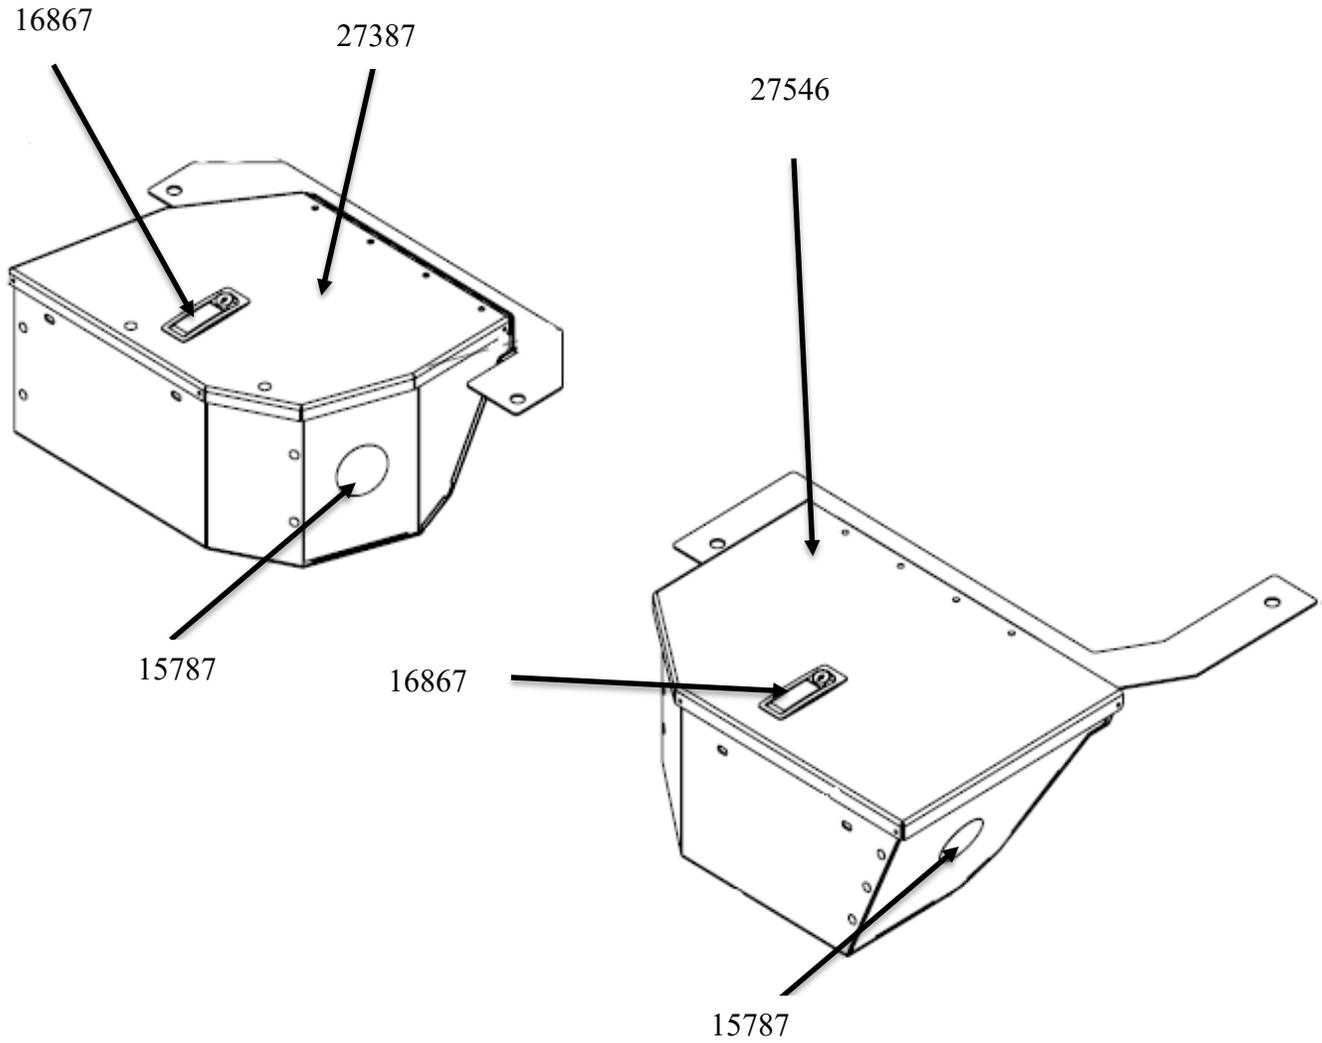

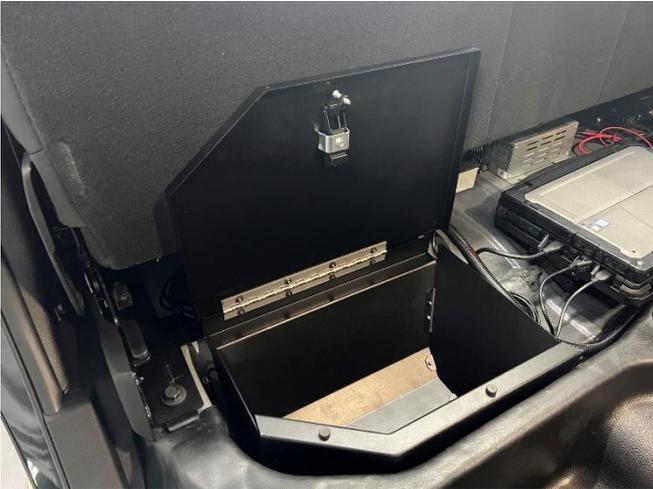

Place SBX box(es) into appropriate location, line up 2 mounting points with front seat bolt and use Hex M12 x 1.75 x 35 with washer for the rear, install two 7/16 ¾ lag bolts on the front edge towards the front of the vehicle



Make sure all seat bolts are tight/ lid(s) open and close. Installation complete