

# INSTALLATION INSTRUCTIONS

## VERTICAL CARGO BARRIER CBR-ESC-1

### For 2020-2023 FORD ESCAPE

#### **TOOLS REQUIRED:**

Standard and Metric Socket Sets


#### **PARTS and MOUNTING HARDWARE:**

<b><u>QTY</u></b>	<b><u>DESCRIPTION</u></b>	<b><u>PART#</u></b>
1	Rear Cargo Barrier	26750
1	Upper Section Rear Cargo Barrier	26751
1	Driver Side Trim	26752
1	Passenger Side Trim	26753
2	Floor Bracket	26754
1	Driver side rear bracket	26755
1	Passenger Side Bracket	26756
12	¼ - 20 Hex serrated nut	16013
10	¼ - 20 flat washer	16122
8	¼ - 20 x ¾ Carriage Bolt	16223
10	¼ - 20 x ¾ Hex Bolt	16326
4	M8 x 1.25 Hex Nut	27310
4	3/8 Washer	16127

#### **Always!**

- Read all instructions before installing any Havis, Inc. products.
  - Use hardware provided with install kit

**C-CBR-ESC-1**  
Assembly

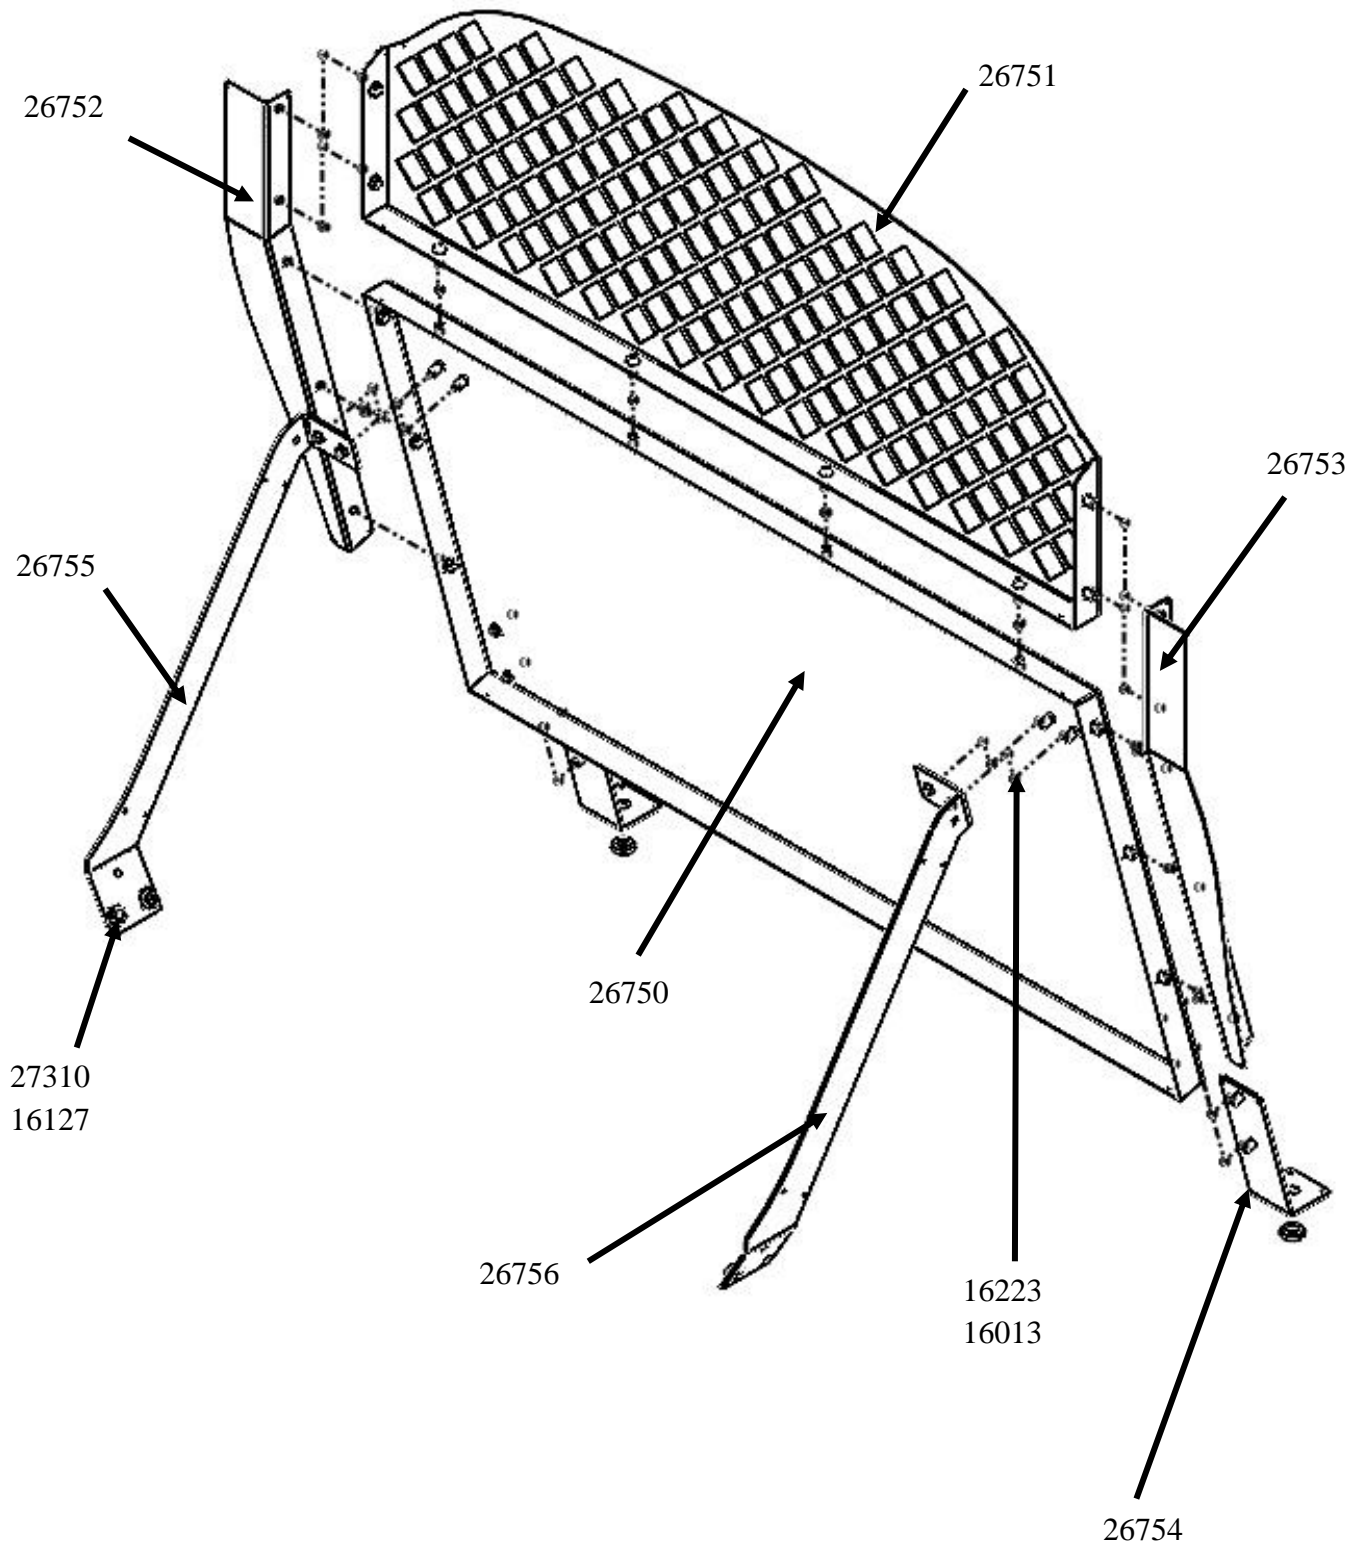



Remove rear cargo floor and foam cargo panels



Remove OEM rear seat bolt and install two floor brackets. One each side.



Fold rear seats forward and carefully place cargo barrier behind rear seats. Attach cargo barrier to floor brackets with serrated nuts.



Loosely attach driver and passenger side vertical supports to barrier using 3/4" carriage bolts and serrated nuts.



Use the M8x1.25 nuts and 3/8 washers to attach lower support to OEM studs at side floor.



Attach side filler panels and upper section of cargo barrier with hex bolts and serrated nuts. Tighten all hardware, reinstall foam cargo panels and cargo floor. Installation complete.