



INSTALLATION INSTRUCTIONS:

- 1. PLACE THE 1/4-20 HEX NUT IN SLOT ON REAR PANEL OF CONSOLE.
- 2. PLACE THE C-ARM-SERIES AND ALIGN THE SLOT WITH THE 1/4-20 HEX NUT.
- 3. INSTAL THE 1/4-20 X 1/2 PPHMS , AND THE 1/4 FLAT WASHER.
- 4. TIGHTEN ALL.

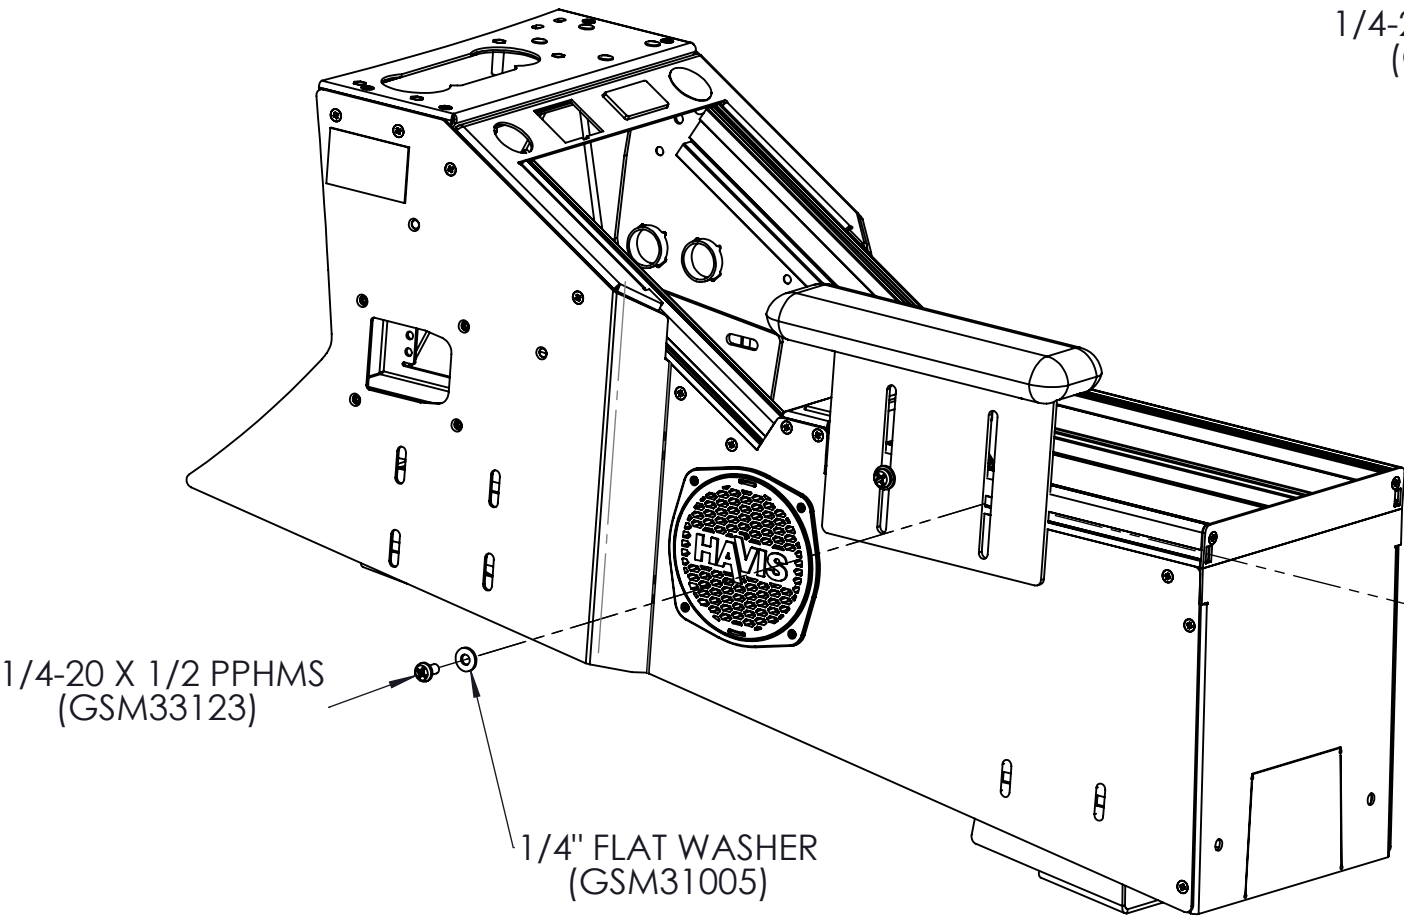


REFERENCE C-VS-1012-INUT-2 & C-ARM-102

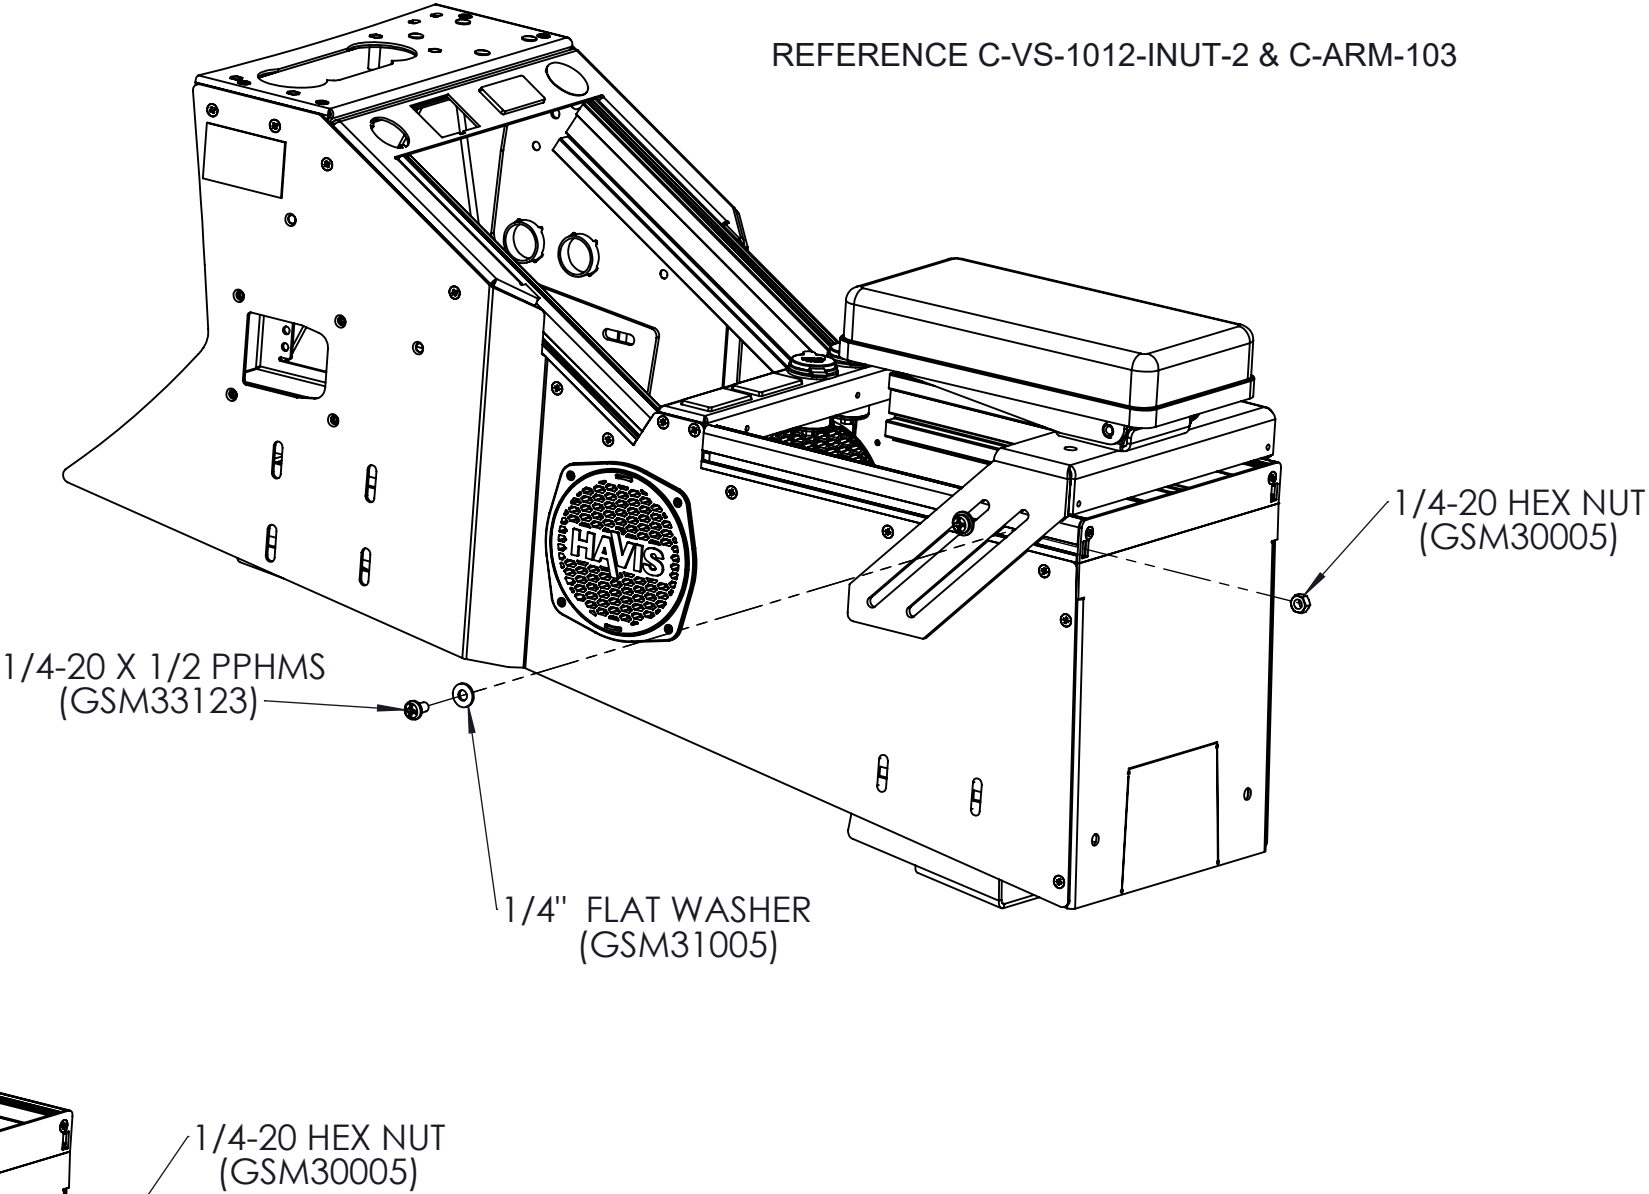

REFERENCE C-VS-1012-INUT-2 & C-ARM-103

WARNING: ALL HAVIS INC. PRODUCTS ARE DESIGNED WITH SAFETY OF USE AND INSTALLATION IN MIND. HOWEVER, IT IS THE SOLE RESPONSIBILITY OF THE OWNER/OPERATOR OF A VEHICLE USING HAVIS INC. MOUNTING AND DOCKING EQUIPMENT, TO ENSURE THAT THE EQUIPMENT IS INSTALLED SO THAT IT WILL NOT INTERFERE WITH VEHICLE OPERATION, INTERFERE WITH SAFETY DEVICES, OBSTRUCT VIEW OF DRIVING CONDITIONS, OR IN ANY WAY DEGRADE OCCUPANT SAFETY. IMPROPER INSTALLATION CAN CAUSE SERIOUS INJURY IN THE EVENT OF AN ACCIDENT. INSTALLATION SHOULD ONLY BE PERFORMED BY QUALIFIED PROFESSIONALS. COMPUTERS AND MOTION DEVICES MUST BE MOVED TO AND STOWED/SECURED IN THEIR SAFE DRIVING POSITIONS BEFORE OPERATING VEHICLE.

DRAWING NO.	
C-ARM-INST	
PRODUCT DESCRIPTION	
C-ARM SERIES INSTRUCTIONS	
 1-800-524-9900 WWW.HAVIS.COM	WEIGHT: (LBS)
	34.307
	REV. DATE
07-25	