


INSTALLATION:

1. REMOVE OEM CONSOLE OR CENTER SEAT DEPENDING ON TRIM LEVEL EXPOSING THE "U" SHAPED MOUNTING BRACKETS.
2. REMOVE OEM "U" SHAPE FRONT AND REAR BRACKETS TO THE FLOOR / TRANS HUMP. RETAIN THE OEM HARDWARE
3. LOOSELY ATTACH CM007205 & CM007206 TO THE VEHICLE USING OEM HARDWARE. CM007205 GOES TOWARDS THE FRONT OF THE VEHICLE
4. NOTE. DEPENDING ON THE EQUIPMENT BEING MOUNTED IT MAYBE EASIER TO ATTACH CM009215 TO THE OTHER EQUIPMENT BEFORE MOUNTING ONTO THE RESPECTIVE CM007205 & CM007206 BRACKETS.
5. ATTACH CM009215 TO CM007205 & CM007206 USING GSM33001 (8X) & GSM31005 (8X)
6. FULLY TIGHTEN ALL HARDWARE

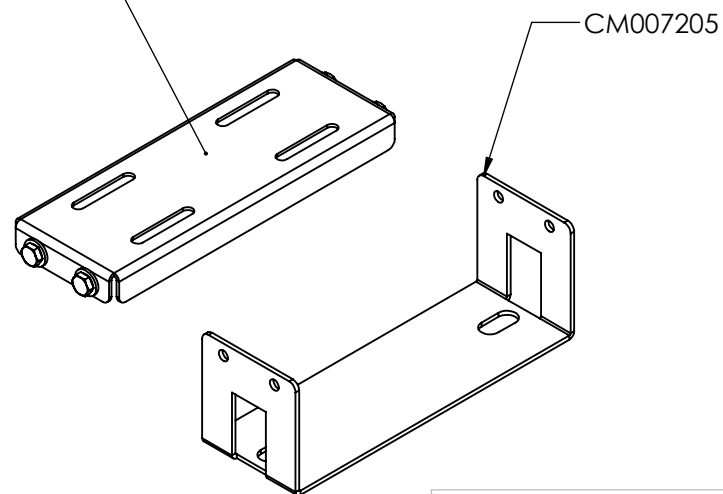

ITEM NO.	QTY.	PART NUMBER	DESCRIPTION
1	16	GSM30023	NUT 1/4-20 HEX FLANGE SERRATED ZP, BLK
2	16	GSM31005	WASHER, 1/4 FLAT ZP, BLACK
3	8	GSM31026	WASHER 1/4 LOCK ZP BLK
4	16	GSM33001	SCREW 1/4-20 x 3/4" HHCS ZP BLK
8	1	C-M37-INST	INSTALLATION INSTRUCTION SHEET

HAVIS		HAVIS, INC.		75 JACKSONVILLE RD. WARMINSTER, PA. 18974 1-800-524-9900	
TITLE: F SERIES EXPEDITION TUNNEL TRACK INSTALLATION					
DO NOT SCALE DRAWING					
SIZE A	DWG. NO. C-M-37-INST			REV 5-18	
WEIGHT (LB): 17.06		SCALE: 1:4		SHEET 1 OF 1	