

# INSTALL INSTRUCTIONS C-TFD-CHGR-2

## 2011 - 2020 Dodge Charger

Trunk Fold Down Equipment Platform with slide out inner panel

14" x 30" inches Equipment mounting space

plus 30" wide x 10" deep space on the forward mount bracket

### TOOLS REQUIRED:

Standard and Metric Socket Set


7/16" wrench

### PARTS & MOUNTING HARDWARE:

1 – Front mount plate	CM005142
1 – Driver side upper support bracket	CM005281
1 – Passenger side upper support bracket	CM005282
2 – Top mount plates with 1/4" threaded nuts	CM001550
1 – Hardware Kit ( <i>Includes the following</i> )	C-HK-270
7 - 1/4" x 3/4" Hex head bolts	GSM33001
7 – 1/4" Flat washer	GSM31005
3 – 1/4" Lock washer	GSM31026
2 – M12 Hex Nut	GSM30204
2 – 7/16" Flat washer	GSM31011
2 – 1/2" Lock washer	GSM31030

### **C-TFD-CHGR-2**

(Assembly)

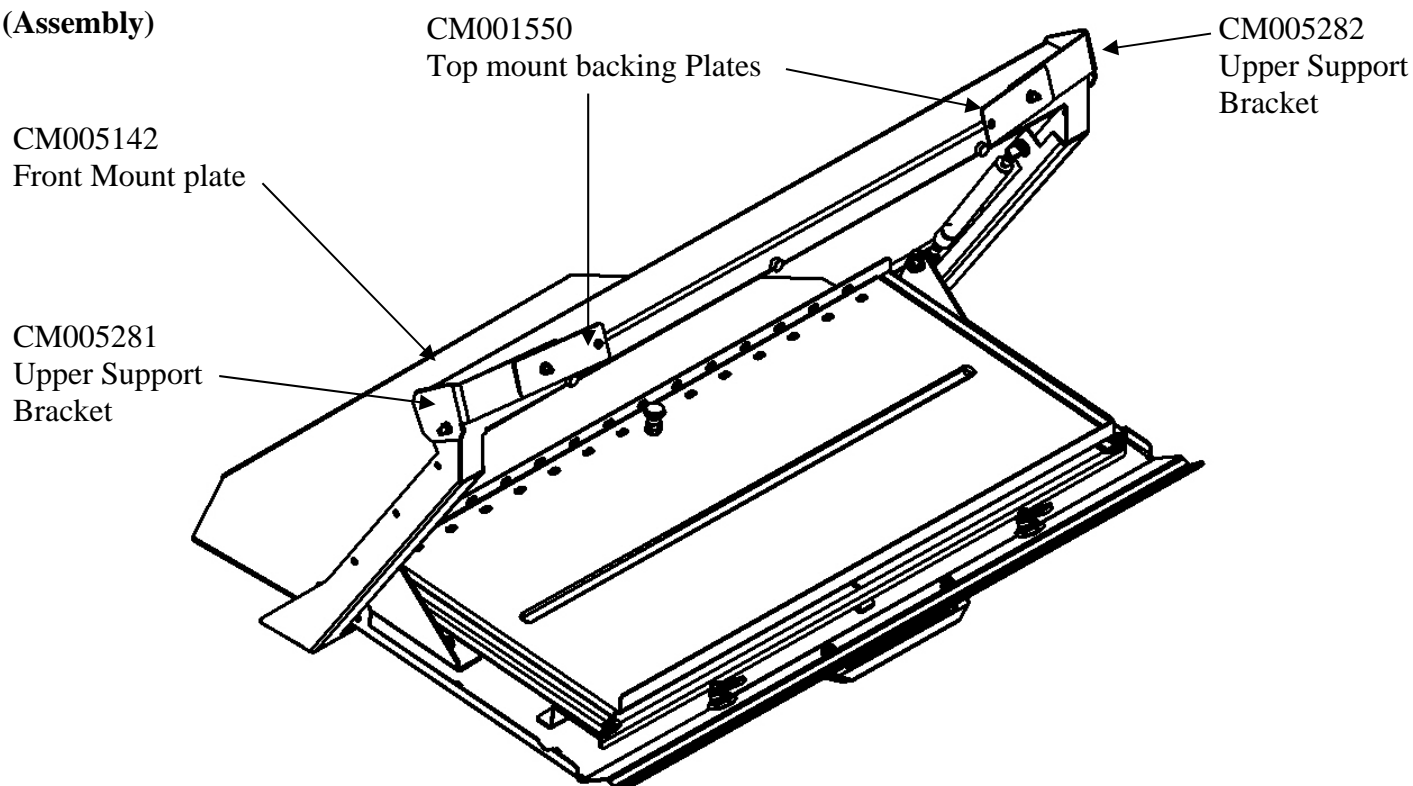

\* Read Instructions before installing any Havis, Inc. products.

\* Use Hardware included with install kit



View of OEM Full size spare tire.



Remove spare tire and tire bracket.

**Remove Rear Seat for better access to trunk.**



View of OEM space saver spare tire trunk.



Remove floor cover



Remove upper trunk liner



Upper Rear Bracket mounting.

Insert nut backing plate into existing holes as shown.





Loosely attach rear upper bracket with 1/4" x 3/4" Hex head bolt & flat washer (7/16" socket)



Attach forward floor bracket to OEM spare tire bracket studs with M12 nuts (located under rear seat). Place Hinge door and frame assembly onto forward floor bracket. Use 1/4" x 3/4" hex bolts, flat and lock washers.



Loosely attach door frame to upper support bracket with 1/4" x 3/4" Hex head bolt and flat washer.  
Do the same for each side.



Tighten all bracket hardware.  
Don't forget backing plate hardware.  
Install rear seat.



View of C-TFD-CHGR-2 in place.  
Equipment layout and hole drilling should be done prior to complete installation. The slide tray can be easily removed for bench top assembly



Floor cover will need to be cut to clear floor bracket legs.