

INSTALL INSTRUCTIONS C-TSM-CHGR-X-1

TRUNK SIDE MOUNT FOR 2011-2019 DODGE CHARGER

X = "D" DRIVERS SIDE OR "P" PASSENGER SIDE

TOOLS REQUIRED:

Phillips Screwdriver
Jig Saw

Powered drill with 5/32" drill bit

HARDWARE:

QTY	DESCRIPTION
5	#10 x 3/4" Sheet metal screws


PART #
GSM33195

Always!

- Read all instructions before installing any Havis, Inc. products.
- Check for obstructions (Wire, brake lines, fuel tank, etc.) before drilling any holes!
- Use hardware provided with install kit

C-TSM-CHGR-P-1 shown
Trunk Side Mount
(Passenger Side)

NOTE: This instruction
shows the passenger side
installation. The Drivers side
will install the same way.

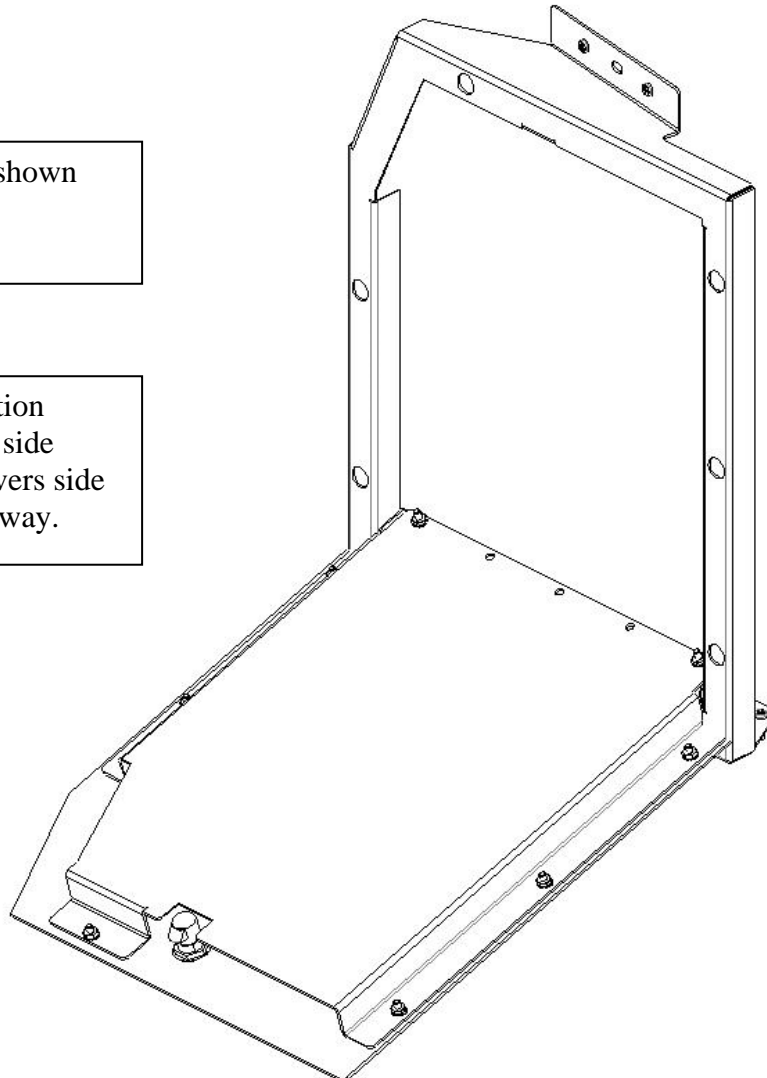



View of passenger side trunk area prior to installation.

Note: 2019 model year does not have passenger side cargo hook.



Remove side cargo hook. Mount screw to be reused later.
2011-2018 only
(Phillips screwdriver)



Remove rear loop trim panel fastener



Remove fender liner.

Run wiring as needed for emergency equipment.



Unclip and move wiring at side floor area. Make sure it is repositioned so it will not get damaged.

Replace fender liner.



Place Trunk Side Mount frame assembly into position and attach to inner fender with previously removed Cargo hook screw into original hole.

See next step for 2019 vehicle

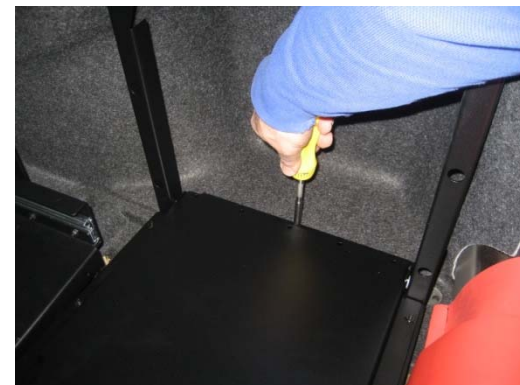


Photo shows 2019 without cargo hook and trunk liner pulled down. The existing OEM metal bracket has holes that must be avoided when mounting TSM upper bracket. Properly position TSM so upper bracket holes are outboard of OEM holes.

Mount as shown in photo # 10.



With Trunk Side Mount in position, drill three 5/32" holes into floor.



Attach lower frame to floor with # 10 x 3/4" sheet metal screws.



Drill 5/32" holes at upper bracket (next to OEM screw) and attach with # 10 x 3/4" Sheet metal screws



Mount and wire equipment on inside door panel.



Finished Passenger-Side Mount shown with full width trunk tray



Finished C-TSM-CHGR-P-1 (Passenger Side Trunk Side Mount)
Shown with Full Size Spare Tire.

NOTE: If your vehicle has the small donut spare tire, the flip up trunk liner should just clear the Trunk Side Mount.