

INSTALL INSTRUCTIONS C-TMW-CHGR-01

2008 – 2020 DODGE CHARGER (Police Package)

TUNNEL PLATE KIT

TOOLS REQUIRED:

Ratcheting Wrench
Metric Socket Set

Standard Socket Set


INSTALLATION PARTS AND MOUNTING HARDWARE:

<u>QTY</u>	<u>DESCRIPTION</u>	<u>PART #</u>
8	1/4" x 3/4" Hex head bolt	GSM33001
4	1/4" Serrated nut	GSM30023
4	1/4" Nut	GSM30005
4	1/4" Flat washer	GSM31005
4	1/4" Lock washer	GSM31026
4	Fender washer	GSM31014
2	6mm Nut	GSM30201
2	1/4" x 3/4" Self-threading washer head screw	GSM33060-1
2	Plastic End Cap	CM002851

Always!

- Read all instructions before installing any Havis, Inc. products.
- Use only hardware provided with install kit.

C-TMW-CHGR-01TUNNEL MOUNT ASSEMBLY

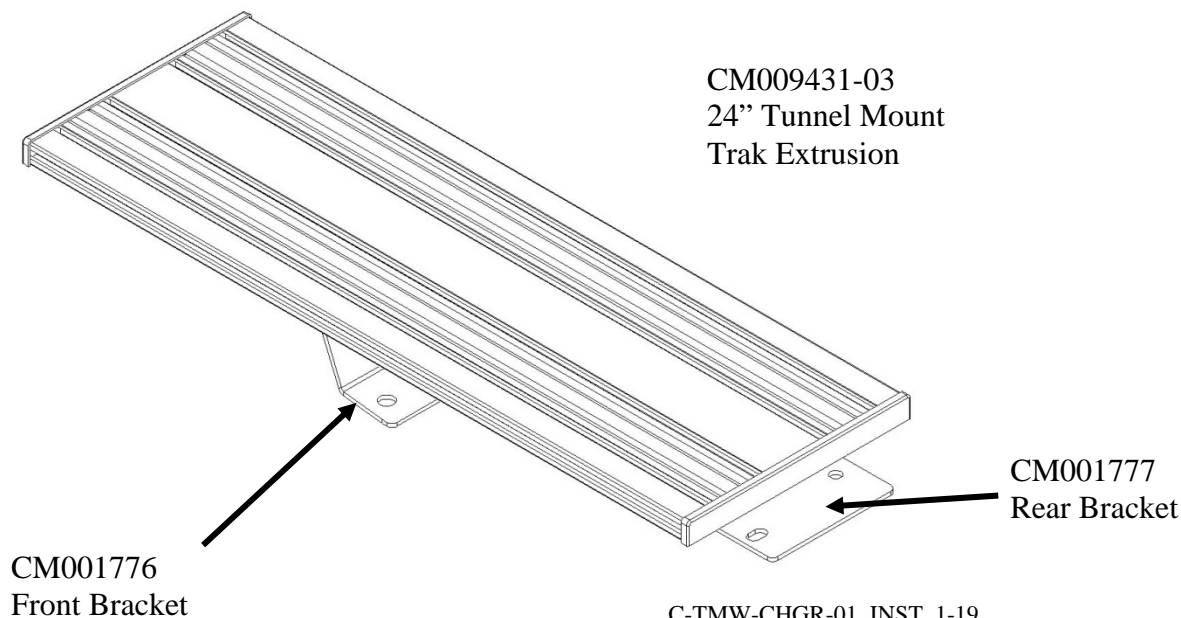



Remove OEM center forward cover panel.



Mount CM001777 Rear Bracket to transmission hump with self-threading screw #GSM33060-1



Loosely attach front bracket CM001776 to bottom of Trak extrusion with two (2) $\frac{1}{4}$ " x $\frac{3}{4}$ " hex head bolts and serrated nuts.
Note: The head of the bolt slides into the Trak slot.



Loosely attach front bracket and Trak to OEM floor studs with 6mm nuts.



Attach Trak to rear bracket with $\frac{1}{4}$ " x $\frac{3}{4}$ " Hex head bolts and serrated nuts. Tighten hardware and replace OEM front trim. Slide necessary console mount hardware into the top of the Trak and attach self-adhesive end caps on ends of Trak.