
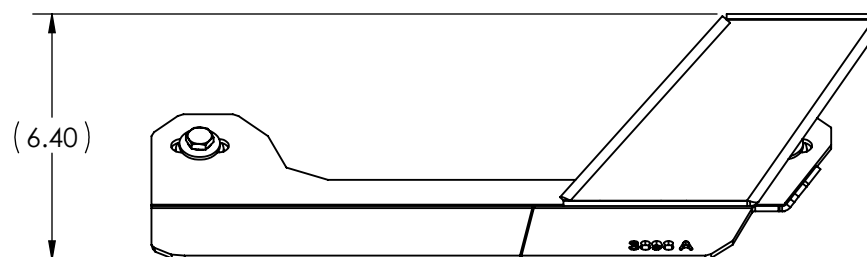


GRAND CHEROKEE ONLY

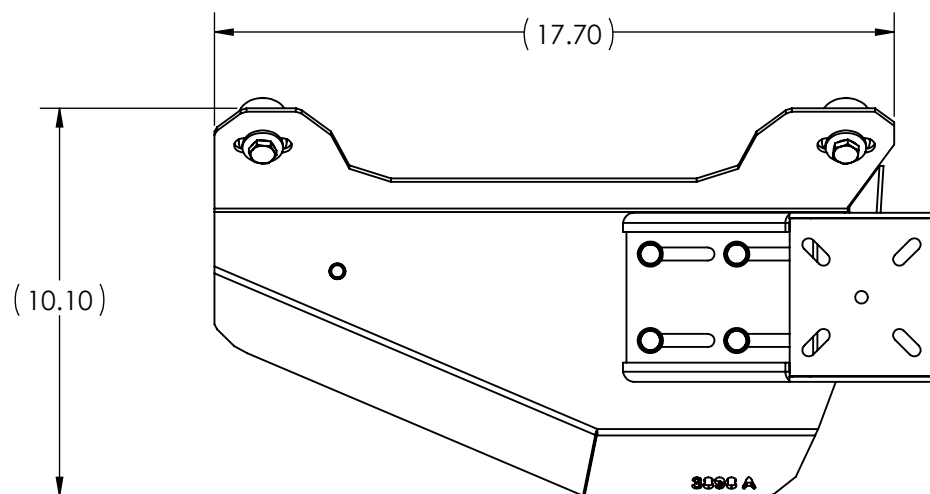

ITEM NO.	QTY.	PART NUMBER	DESCRIPTION
1	1	CM002531	BRACKET, MOUNT, 55 DEG. 5" LOWER OFFSET BASE W/ SLOTS
2	2	10-003319	SPACER, 1"
3	1	10-003898	BRKT HDM BASE JEEP GRAND CHEROKEE
4	4	GSM31006	WASHER, 5/16" FLAT, SAE ZP
5	4	GSM31027	WASHER, 5/16" LOCK, ZP
6	4	GSM33011	SCREW, 5/16-18 X 3/4"
7	2	GSM31009	WASHER 1/2 FLAT ZP
8	2	GSM33733	M10 X 1.25 X 45 MM LG HEX BOLT

INSTALLATION INSTRUCTIONS

1. REMOVE PASSENGER SIDE FRONT SEAT BOLTS.
2. PLACE SPACERS (IF REQ'D) AND BASE OVER SEAT BRACKETS.
3. INSTALL SUPPLIED LONGER SEAT BOLTS AND WASHERS AND TIGHTEN TO VEHICLE MANUFACTURER'S TORQUE SPECIFICATION.
4. ATTACH LOWER OFFSET TO BASEPLATE WITH 5/16" BOLTS, LOCK WASHERS AND FLAT WASHERS ANGLE TOWARDS CENTER OF VEHICLE.
5. FOLLOW GENERAL INSTRUCTIONS FOR POLE AND UPPER MOUNT PARTS.

HAVIS HAVIS, INC.		75 JACKSONVILLE RD. WARMINSTER, PA. 18974 1-800-524-9900
TITLE: 11-18 DURANGO & GRAND CHEROKEE HDM BASE		
DO NOT SCALE DRAWING		
SIZE A	DWG. NO. C-HDM-145-INST	REV 3-13
WEIGHT (LB): 9.52	SCALE: 1:8	SHEET 1 OF 1