


# INSTALLATION INSTRUCTIONS

EXISTING UPM MOUNT


EXISTING ATTACHMENT SCREWS

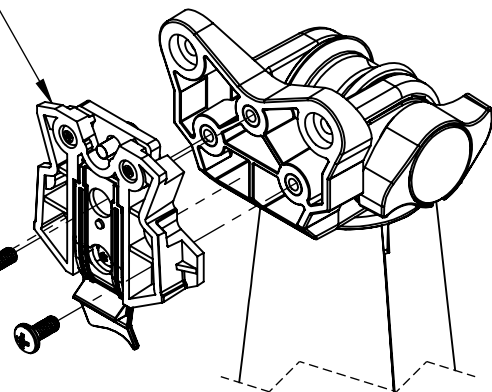

## STEP 1

NEW DX4000 BACKPLATE

NEW FLAT HEAD SCREWS

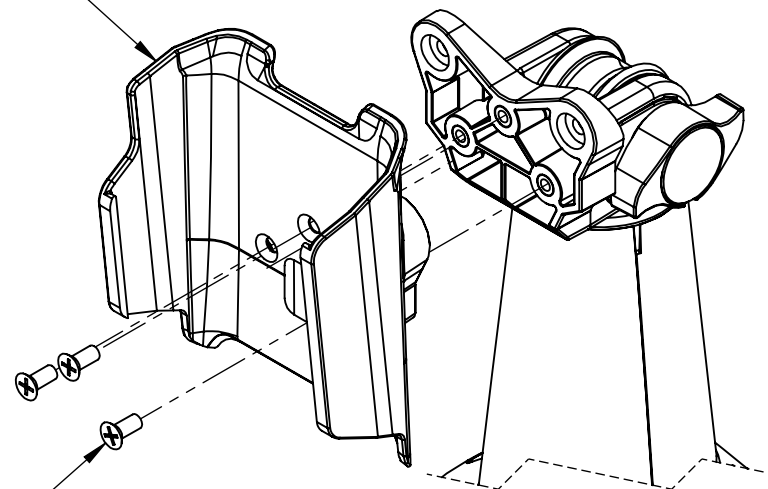

## STEP 2 AND 3


### TOOL LIST:

#2 PHILLIPS SCREW OR DRILL DRIVER.

### ASSEMBLY STEPS:

1. REMOVE THE UPM FROM THE STAND OR PLATE BY REMOVING THE 3 ATTACHMENT SCREWS
2. ALIGN HOLES ON THE DX4000 BACKPLATE WITH THE MOUNTING HOLES IN THE STAND OR PLATE
3. ATTACH DX4000 BACKPLATE USING THE CORRECT LENGTH FLAT HEAD SCREWS (.375" LONG SCREWS FOR STANDS AND .75" FOR PLATES)

NOTE: FLEXIPOLE PLUS STAND SHOWN, BUT SAME STEPS WOULD BE USED FOR FLEXIPOLE OR A METAL STAND WITH UPM

DWG. NO. CST00216		REV. A	TITLE DX4000 UPGRADE KIT	
DRAWN RSW	DATE 9/6/24			

SHEET 1 OF 1

THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF HAVIS, INC. AND REPRODUCTION IN PART OR IN WHOLE WITHOUT THE WRITTEN PERMISSION OF HAVIS, INC. IS PROHIBITED.

CUSTOMER INSTRUCTIONS