

## INSTALLATION INSTRUCTIONS C-VS-1400-INUT-1

### 14" Console for the 2020 - 2026 Ford Interceptor Utility

**TOOLS REQUIRED:**

Cordless drill

Drill bit set


Standard socket set

Marker

**PARTS and MOUNTING HARDWARE:**

| <u>QTY</u> | <u>DESCRIPTION</u>                | <u>PART#</u>  |                                    |
|------------|-----------------------------------|---------------|------------------------------------|
| 1          | Forward center trim panel         | CM009351      | (shipped installed on console)     |
| 1          | Driver side trim panel            | CM009352-DS   | (shipped installed on console)     |
| 1          | Passenger side trim panel         | CM009352-PS   | (shipped installed on console)     |
| 8          | 1/4" x 3/4" Self-threading bolts  | GSM33300      |                                    |
| 1          | USB & 12v socket relocation plate | C-EB20-USB-1P |                                    |
| 2          | 12 volt socket with rubber cap    | CM216560      | (one shipped installed on console) |

C-VS-1400-INUT-1 Assembly

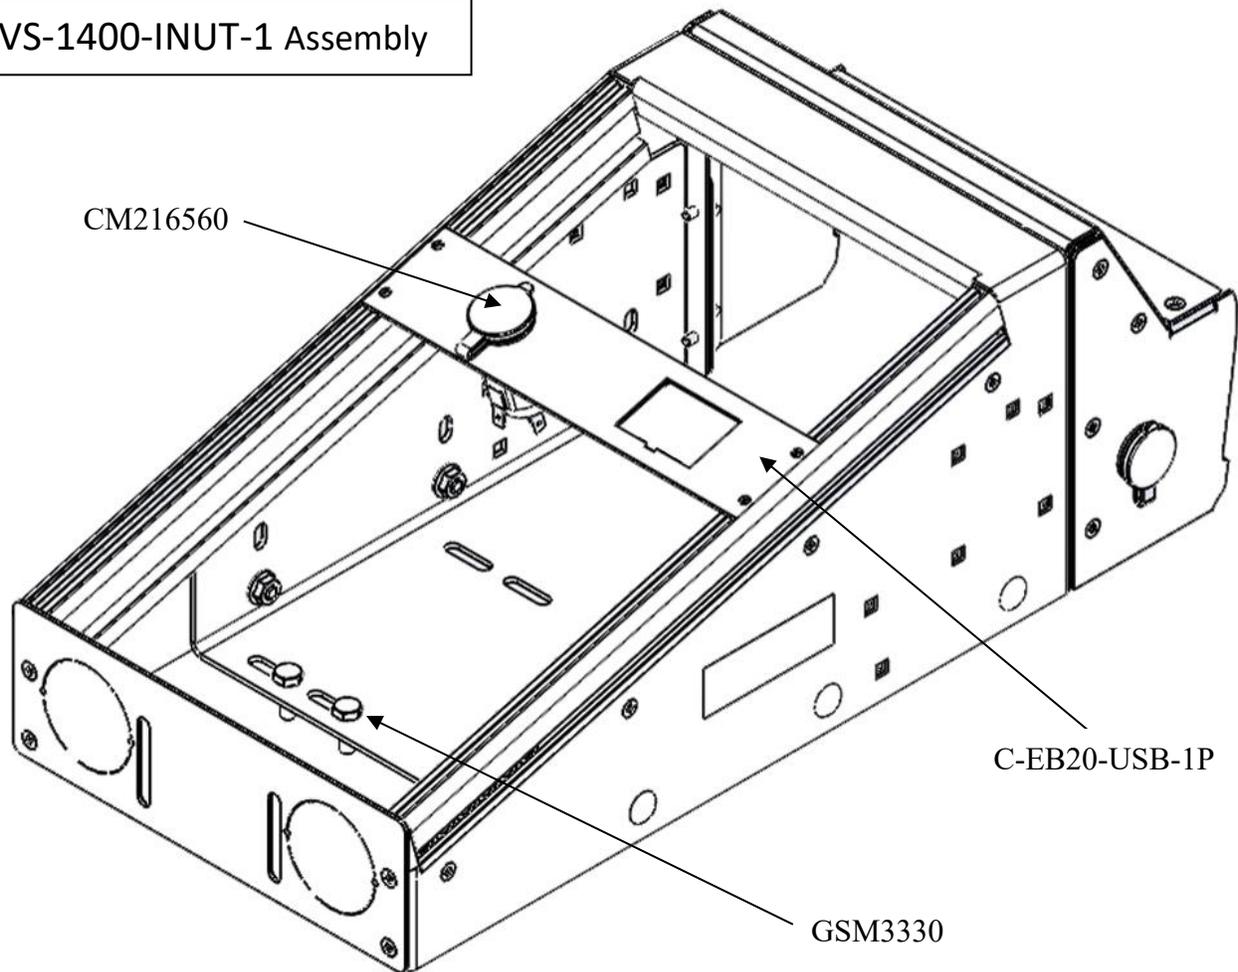

**Always!**

- Read all instructions before installing any Havis, Inc. products.
- **Check for obstructions (Wires, brake lines, fuel tank, etc.) before drilling any holes!**
  - Use hardware provided with install kit



View of Interceptor Utility before install



Place console on OEM tunnel plate. Slide tight to the dash.



Mark the tunnel plate using a pencil or marker.

**NOTE:** Do not mark or drill through the "No Drill Zone" that is indicated on the OEM tunnel plate.



Drill out marked holes using a #7 or 13/64" drill bit.



Reinstall console and attach using four (4) 1/4" x 3/4" self-threading bolts.



Wire and install equipment as needed.  
Installation is now complete.