

## INSTALLATION INSTRUCTIONS C-VSW-3000-EXPD-2

### 2022-2024 Ford Expedition SSV and SSV MAX

### Vehicle Specific Console 30” inches of Equipment mounting space

\* Console does not work with higher trim level vehicle with full length center console\*

**TOOLS REQUIRED:**

Phillips Screw Driver  
 Metric Socket set

Standard Socket set  
 7/16” Wrench

T-20 Torx Bit

**INSTALLATION PARTS AND MOUNTING HARDWARE:**

<u>QTY</u>	<u>DESCRIPTION</u>	<u>PART#</u>
1	Ford small Aux panel adaptor	13071
1	Small Aux blank panel	13072
2	Speaker grill	23047
1	O-RING 1-9/16"ID X 1-3/4"OD X .093	16214
2	#8-18 X 3/8 PFHMS	16425
1	1/4" Hex nut kit	25520 (includes 12 nuts)

**Parts already attached to console housing**

1	Front floor mounting bracket	12884
1	Rear floor mounting bracket	12865
1	Front console trim panel	26931
1	Forward corner pole knockout/AUX filler panel	26932
1	Electrical accessory mounting plate	12890

**Notes:**

1. Many images in this instruction may not show an actual 2022 Ford Expedition.  
 However the installation process the same.
2. Not all vehicles include an OEM 12 volt socket in front lower dash, but do include a Hook shaped plug that can be relocated to new console instead.


**Always!**

- Read all instructions before installing any Havis, Inc. products.
- Use hardware provided with install kit

**C-VSW-3000-EXPD-2**  
Assembly

Front top console trim panel  
26931

(Includes cutouts for OEM 12 volt socket and media hub relocation) **See note 2 on page 1**

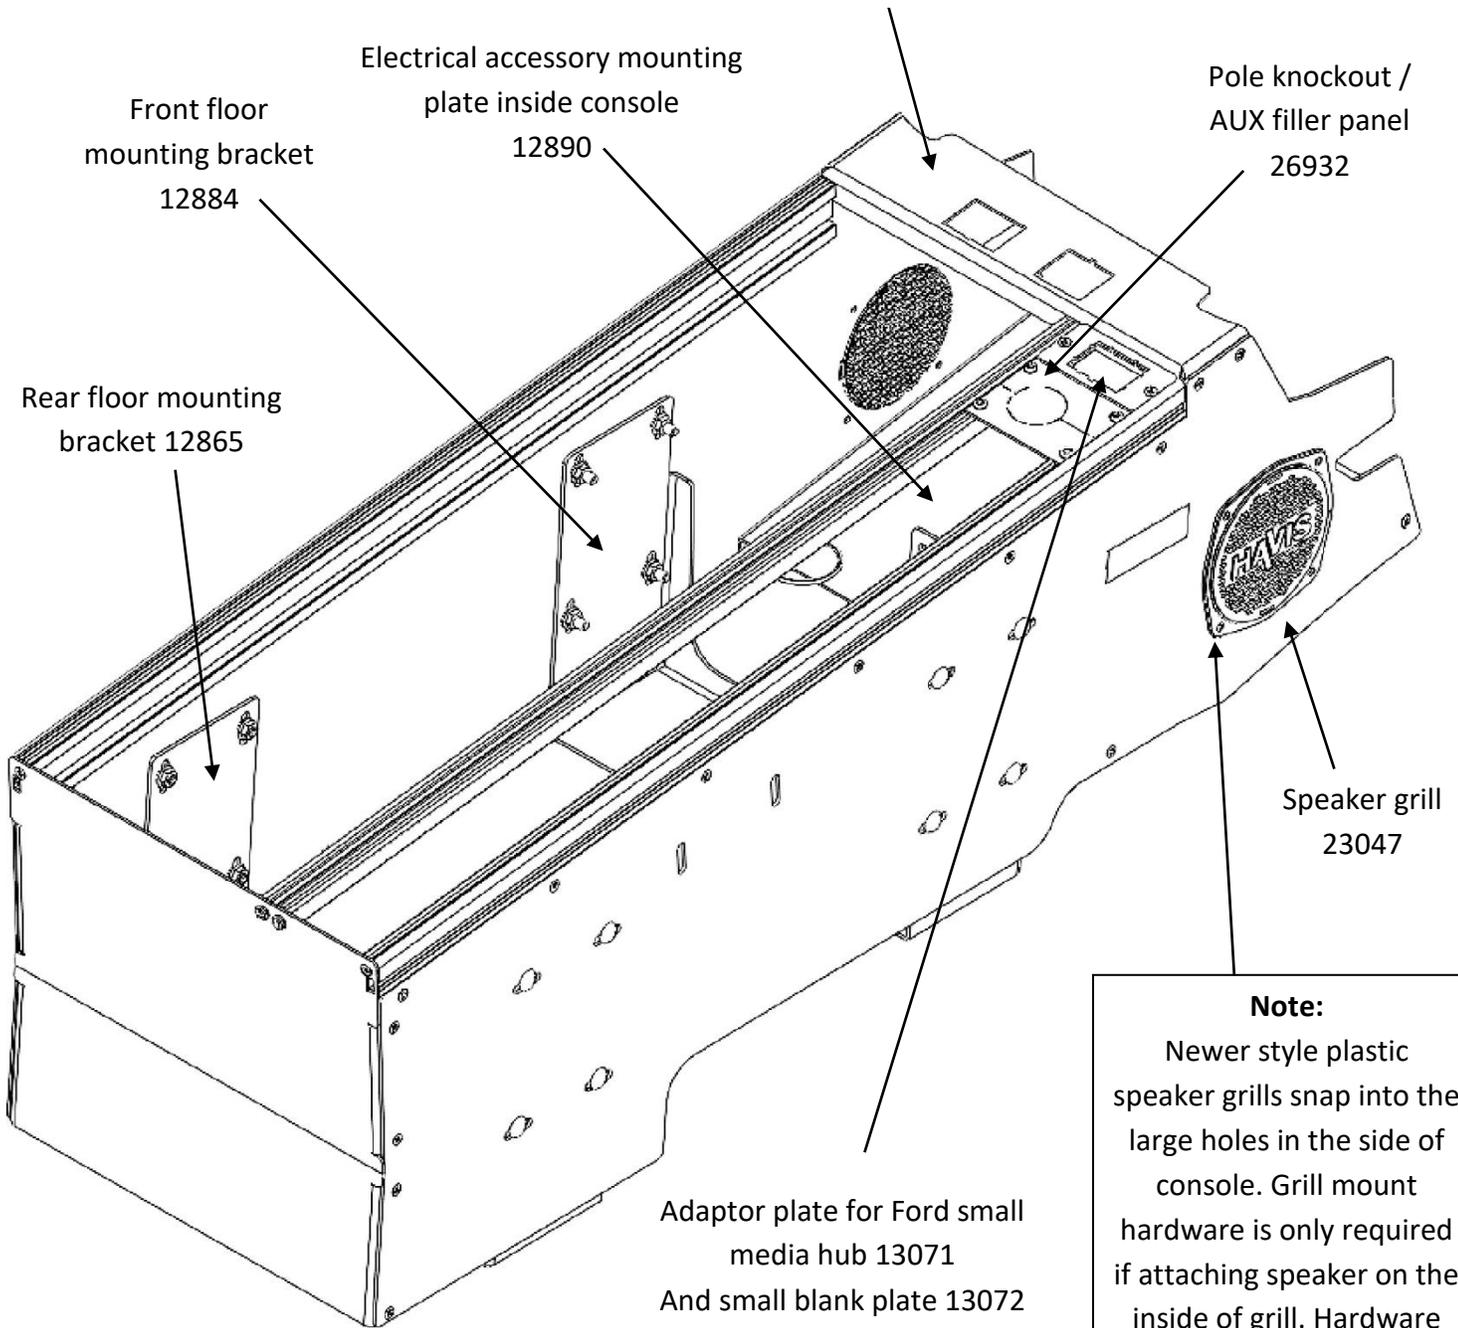

Adaptor plate for Ford small media hub 13071  
And small blank plate 13072  
(Shown below)  
Use blank if other media hub location is used.



**Note:**

Newer style plastic speaker grills snap into the large holes in the side of console. Grill mount hardware is only required if attaching speaker on the inside of grill. Hardware not provided.

**Recommended Hardware:**  
**(4x) #8 Keps nuts, (4x) 8-32 x 3/4" screws**



Remove factory center seat or mini console



Unbolt factory bolts and save for later.  
18mm socket



**NOTE:** Some vehicles include an OEM SmartLink / Telematics module mounted to transmission hump using the same bolts needed for the rear console bracket.


The OEM module must be unbolted and simply relocated under console by installer as desired. Relocating OEM module will not affect OEM system.



Remove OEM AUX module from dash and save to be reused.



Place console with floor mount brackets into the vehicle.  
Shown with optional 3.3 wide panels and pocket.

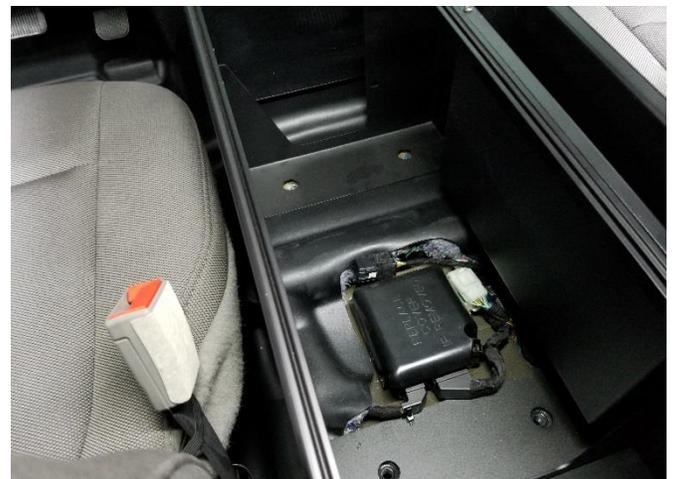

Slide console forward until the mounting brackets line up with the OEM mounting points in floor.  
Loosening brackets from console may help with alignment.




Loosely reinstall factory floor bolts through console floor brackets.



Install OEM AUX module into the console. Adaptor plate with #8 flat head screws provided for smaller Aux module. Blank plate provided if vehicle has no module for this location.



Main Housing installation is now complete. Install and wire equipment as desired.

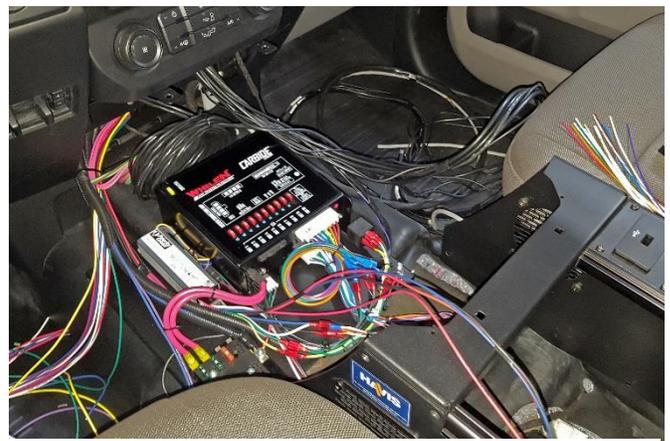

Electrical accessory mounting plate shown. Unbolting and sliding console back for component installation is recommended.



Console installation complete.



Console with computer installation complete.