


INSTALLATION INSTRUCTIONS:

1. REMOVE FRONT PASSENGER SEAT BOLTS.
2. LIFT FRONT OF SEAT BASE AND SLIDE HDM BASE BETWEEN FLOOR AND SEAT BASE.
3. REINSTALL SEAT BOLTS, PUSH HDM BASE TOWARDS THE REAR OF THE VEHICLE, AND TIGHTEN BOLTS TO MANUFACTURER'S TORQUE SPECIFICATION.
4. INSTALL THE OFFSET BRACKET USING THE INCLUDED HARDWARE, WITH THE OFFSET GOING TOWARD THE CENTER OF THE VEHICLE.
5. FOLLOW GENERAL INSTRUCTIONS FOR POLE AND UPPER MOUNT PARTS.

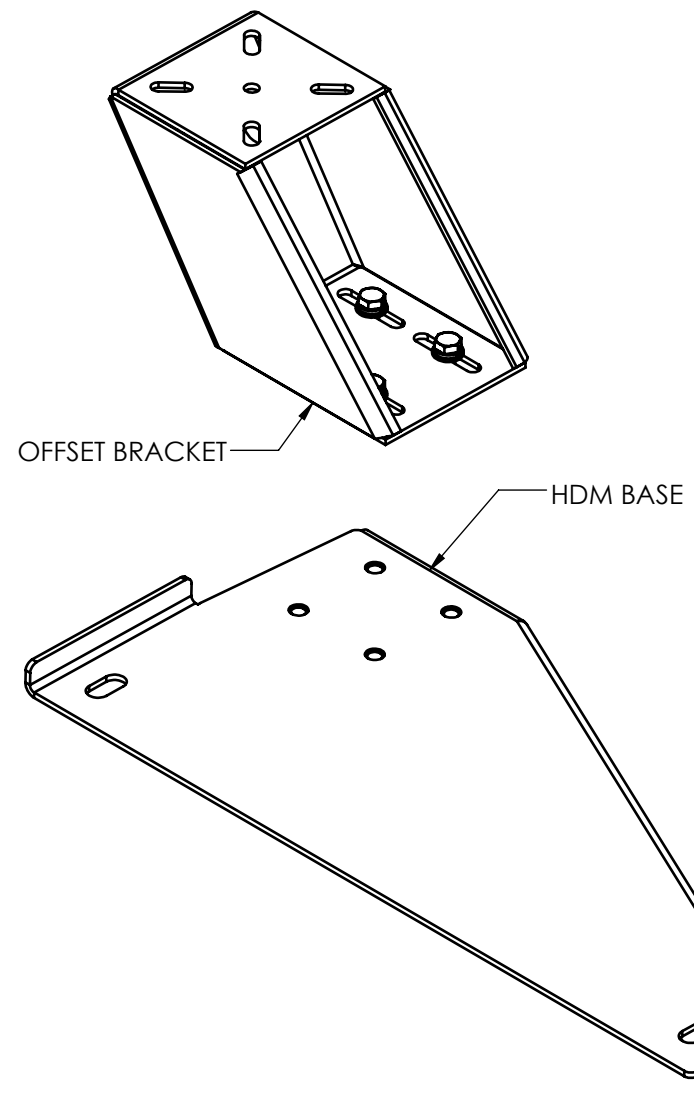

HAVIS HAVIS, INC.		75 JACKSONVILLE RD. WARMINSTER, PA. 18974 1-800-524-9900
TITLE: INSTALLATION INSTRUCTIONS, CHEVROLET SILVERADO HDM BASE		
DO NOT SCALE DRAWING		
SIZE A	DWG. NO. C-HDM-1003-INST	REV 10-18
WEIGHT (LB): 11.7813		SCALE: 1:4
		SHEET 1 OF 1