


INSTALLATION INSTRUCTIONS

1. REMOVE INBOARD SEAT BOLTS FROM BOTH FRONT SEATS.
2. SLIDE BRACKETS IN BETWEEN FLOOR AND SEAT BRACKETS AND LOOSELY REINSTALL OEM HARDWARE.
3. POSITION CROSS BRACES ONTO BRACKETS AND INSTALL 1/4" HARDWARE.
4. SLIDE (8) 1/4-20 BOLTS INTO LOWER SLOTS IN TRACK, ALIGN BOLTS WITH CROSS BRACES AND SET TRAK DOWN ONTO CROSS BRACES.
5. ALIGN TRAK IN DESIRED LOCATION AND SECURE ALL HARDWARE.
6. BEFORE INSTALLING END CAPS, SLIDE (4) 1/4-20 BOLTS (OR HARDWARE TO MOUNT OTHER EQUIPMENT) INTO UPPER SLOTS IN TRAK.
7. INSTALL CONSOLE, POLE MOUNT OR OTHER EQUIPMENT PER THE EQUIPMENT INSTRUCTIONS.
8. REMOVE LINERS FROM ADHESIVE TAPES AND INSTALL END CAPS ONTO TRAK.
9. ENSURE THAT ALL HARDWARE IS TIGHTENED, AND THAT OEM SEAT BOLTS ARE TIGHT TO VEHICLE MANUFACTURER'S SPECIFICATION BEFORE DRIVING VEHICLE.

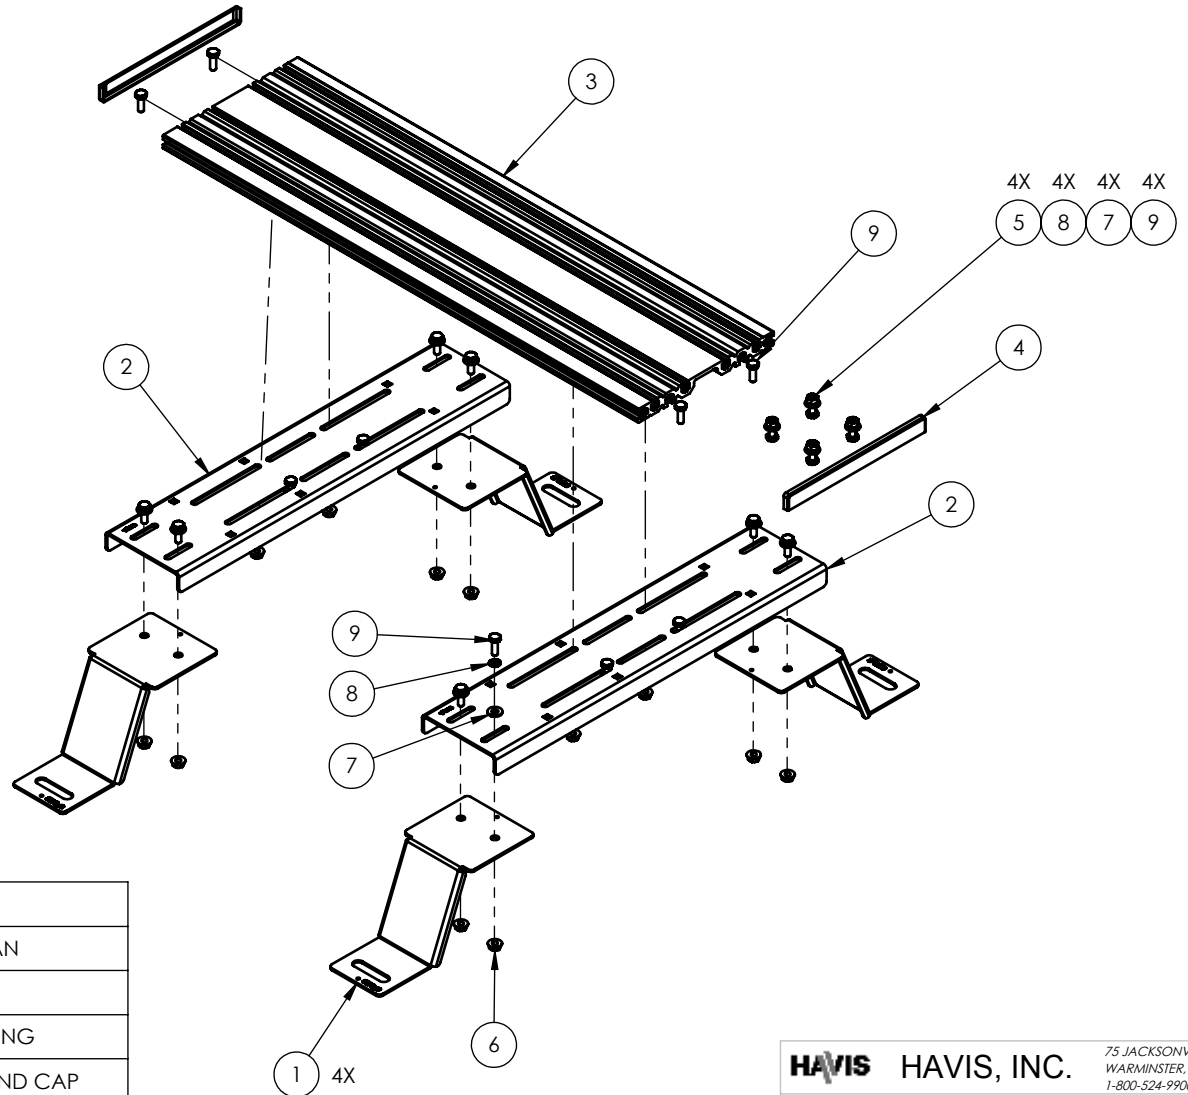

ITEM NO.	QTY.	PART NUMBER	DESCRIPTION
1	4	10-003575	HUMP BRKT LEG CHEVY VAN
2	2	10-008869	BRACKET HUMP RAIL
3	1	10-009431-12	8" WIDE TRAK MOUNT 28" LONG
4	2	30-002527A	KIT, TRAK MOUNT GASKET AND END CAP
5	4	GSM30005	NUT 1/4-20 HEX BLK, ZINC, GRD 5
6	16	GSM30023	NUT 1/4-20 HEX FLANGE SERRATED ZP, BLK
7	12	GSM31005	WASHER, 1/4 FLAT ZP, BLACK
8	12	GSM31026	WASHER 1/4 LOCK ZP BLK
9	20	GSM33001	SCREW 1/4-20 x 3/4" HHCS ZP BLK

PROJECT	DESCRIPTION	DATE
1694	RELEASE TO PRODUCTION	4/2015
1980	GSM33001 AND GSM30023 QTY INCREASED BY 4, 10-008869 REPLACED HS93227	6/2017
2844	10-009431-12 REAPLACED 10-002432-12	1/30/2019

HAVIS		HAVIS, INC.		75 JACKSONVILLE RD. WARMINSTER, PA. 18974 1-800-524-9900	
TITLE: INSTALLATION INSTRUCTIONS, C-TMW-SAV-01					
DO NOT SCALE DRAWING					
SIZE A	DWG. NO. C-TMW-SAV-01-INST			REV 1-19	
WEIGHT (LB): 19.86		SCALE: 1:8		SHEET 1 OF 1	