

INSTALLATION INSTRUCTIONS K9-A-115 OPTIONAL DIVIDER FOR K9-C26-XL INSERT

TOOLS REQUIRED:


Phillips screwdriver 7/16" open end wrench Awl tool

HARDWARE:

QTY	DESCRIPTION	PART#
2	1/4" Serrated flange nut	16086
3	1/4" Flat washer	16154
2	1/4" X 3/4" Carriage bolt	16235
3	1/4" X 3/4" Phillips head machine screw	16618

INSTALLATION:

1. Install main K9 insert.
2. Place divider wall assembly inside K9 insert with swing door towards the front.
3. Use Awl or Phillips screwdriver to align four (4) mounting holes.
4. Attach divider to rear bulkhead with 1/4" X 3/4" Phillips screws and flat washers.
5. Attach divider to lower front bulkhead with 1/4" X 3/4" Carriage bolt and nut.
6. Attach divider to upper front bulkhead with 1/4" X 3/4" Phillips screws and flat washer.
7. Tighten hardware and check emergency exit door operation.
8. Cut rubber mat if desired, on either side of divider.

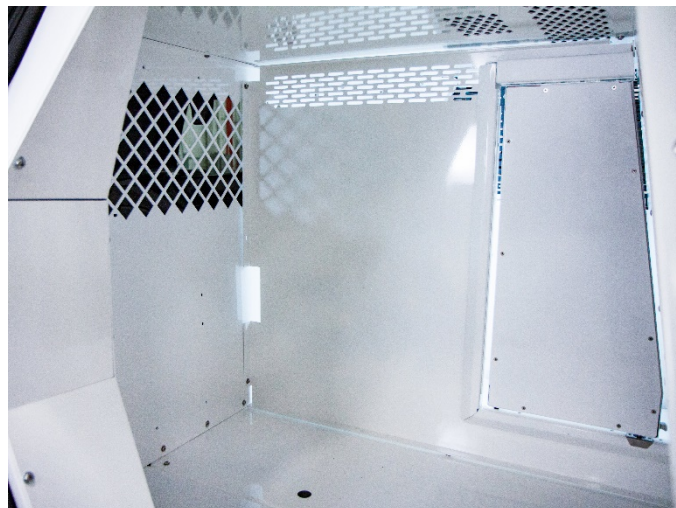

K9-A-115