

INSTALLATION:


1. REMOVE CENTER FRONT SEAT BOLTS (IF EQUIPPED)
2. PLACE HUMP BRACKET OVER FORWARD SEAT MOUNTING HOLES.
3. INSTALL HUMP BRACKET USING EITHER OEM SEAT BOLTS OR (2) OF 10MM X 35MM HHCS AND FLAT WASHERS.
4. IN VEHICLES WHICH DO NOT HAVE THE MOUNTING HOLES IN THE VEHICLE FLOOR TAPPED, USE (2) 3/8-16 X 1-3/4 SELF-THREADING SCREWS AND FLAT WASHERS.
5. EXTRA FLAT WASHERS MAY BE USED AS SPACERS BETWEEN THE HUMP BRACKET AND THE VEHICLE FLOOR.
6. INSTALL CONSOLE OR TRACK TO HUMP BRACKET USING (4) 1/4-20 X 3/4 HEX HEAD BOLTS, FLAT WASHERS AND 1/4-20 FLANGED NUTS.

NOTES:

RECOMMENDED MOUNTING BRACKET FOR C-AS-840-8 OR C-AS-840-11 CONSOLES.

IF CONSOLE IS NOT DESIRED, EQUIPMENT CAN BE MOUNTED DIRECTLY TO FLOOR BRACKET.

IF CONSOLE IS NOT DESIRED AND MORE SURFACE AREA IS NEEDED, AN OPTIONAL C-TMW-12E PLATE CAN BE BOLTED TO THE FLOOR BRACKET.

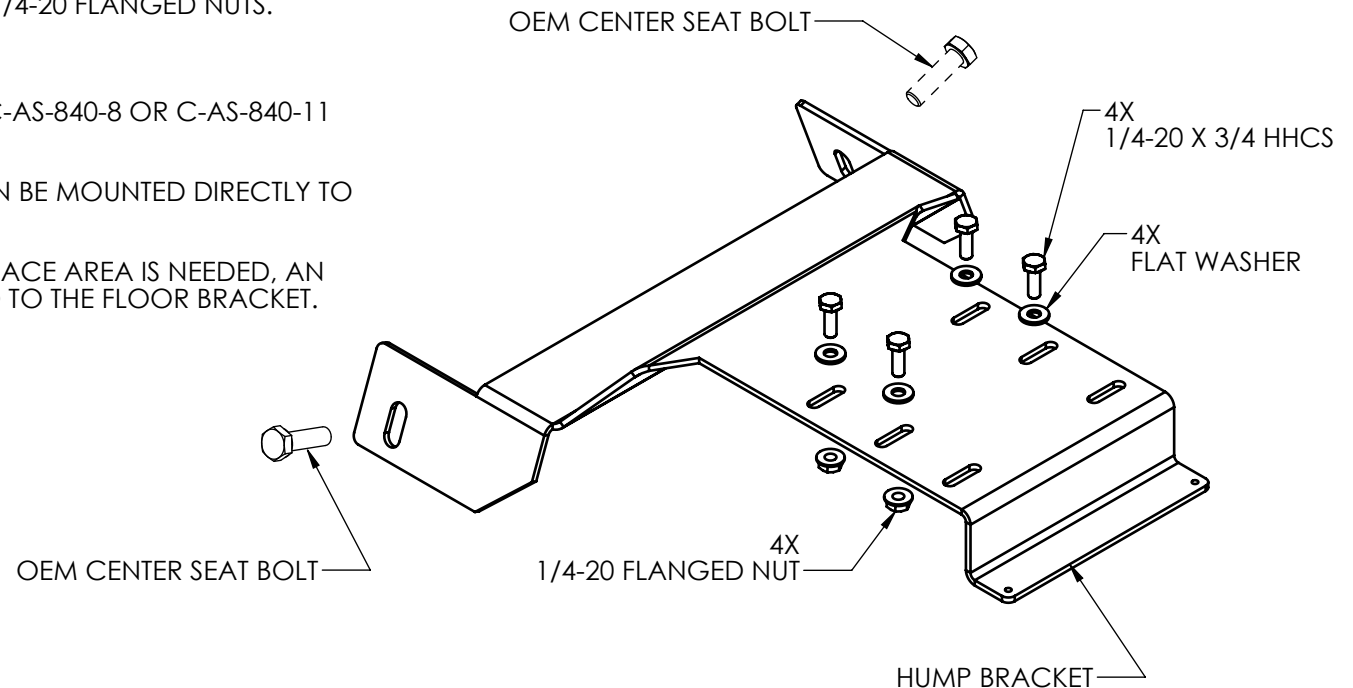

ITEM NO.	QTY.	PART NUMBER	DESCRIPTION
1	1	10-006230	BRKT, FWD HUMP, 14 SILVERADO 1500, 2015 TAHOE
2	4	GSM30023	NUT 1/4-20 HEX FLANGE SERRATED ZP, BLK
3	4	GSM33001	SCREW 1/4-20 x 3/4" HHCS ZP
4	4	GSM31005	WASHER, 1/4 FLAT ZP, BLACK

HAVIS HAVIS, INC.		75 JACKSONVILLE RD. WARMINSTER, PA. 18974 1-800-524-9900
TITLE: INSTALLATION, HUMP BRKT, 2014 SILVERADO/ 2015 TAHOE		
DO NOT SCALE DRAWING		
SIZE A	DWG. NO. C-B69-INST	REV 11-14
WEIGHT (LB): 4.74	SCALE: 1:4	SHEET 1 OF 1