


INSTALLATION INSTRUCTIONS:


- 1. REMOVE PASSENGER SIDE FRONT SEAT BOLTS.
- 2. PLACE SPACERS AND BASE OVER SEAT BRACKETS.
- 3. INSTALL SUPPLIED LONGER SEAT BOLTS AND WASHERS AND TIGHTEN TO VEHICLE MANUFACTURER'S TORQUE SPECIFICATION/
- 4. ATTACH LOWER OFFSET TO BASE PLATE WITH 5/16" BOLTS, LOCK WASHERS AND FLAT WASHERS ANGLE TOWARDS CENTER OF VEHICLE.
- 5. FOLLOW GENERAL INSTRUCTIONS FOR POLE AND UPPER MOUNT PARTS.

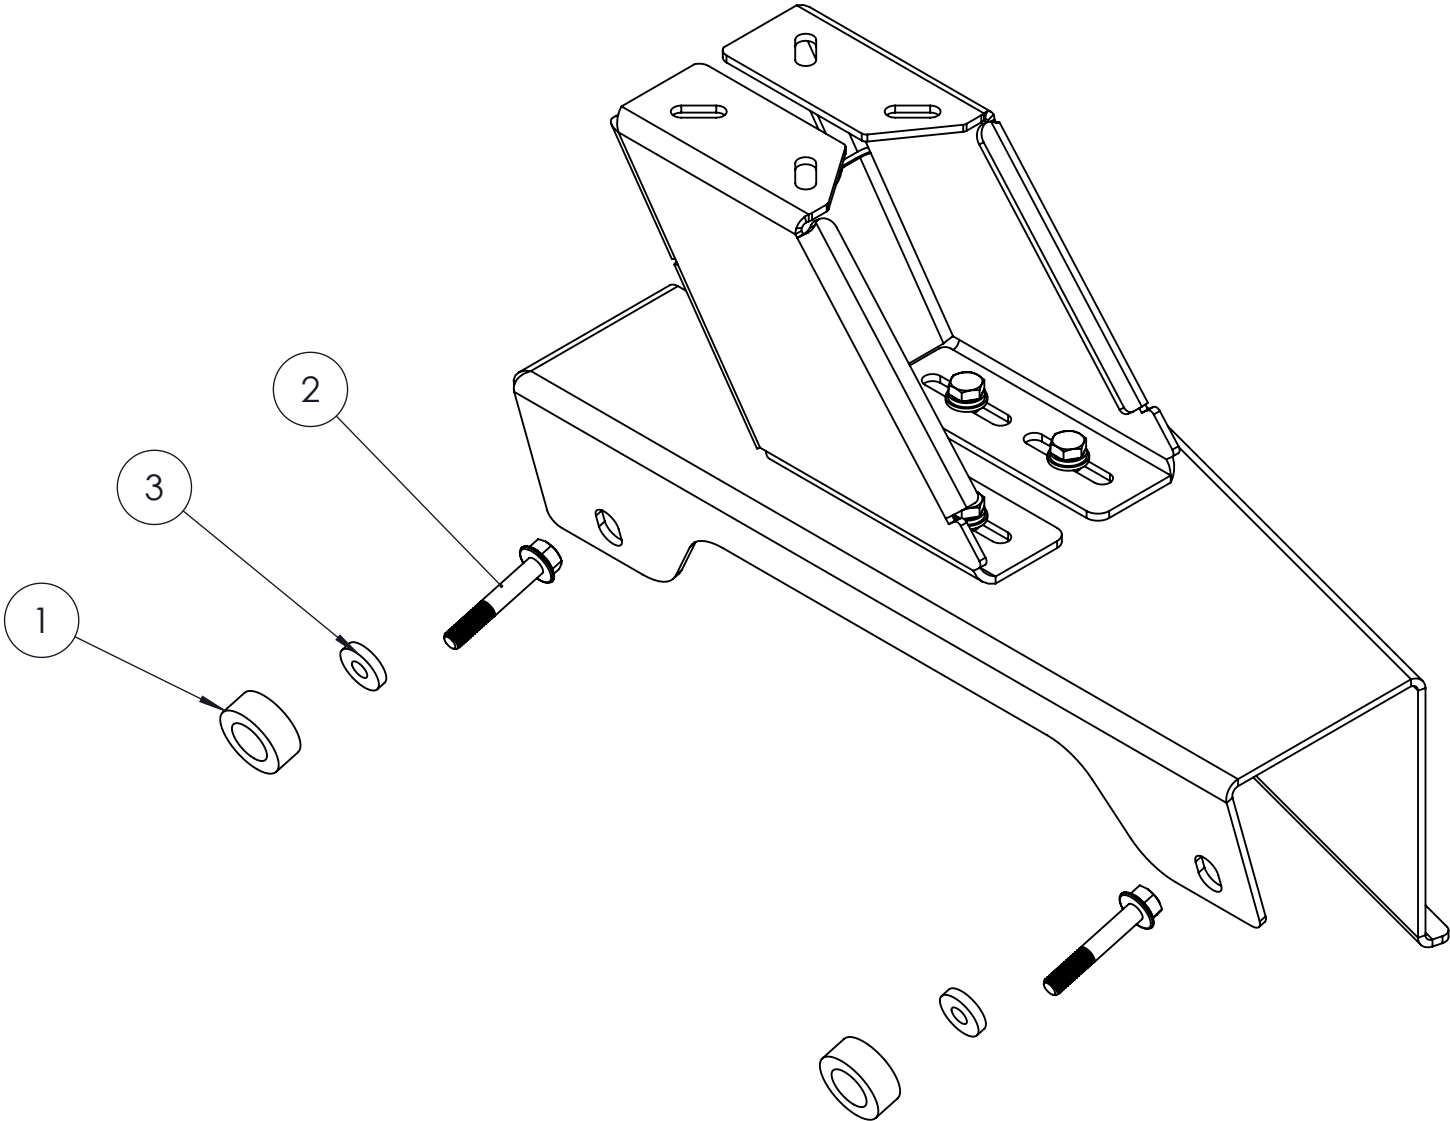

HARDWARE KIT CONTENTS:

LINE	QTY.	DRAWING NO.	DESCRIPTION
1	2	10-003200	SPACER, .50"
2	2	54761	HRDW,SCRW,MS,HEX,HEX,,10.9,,BLK,M18X1.25X20
3	2	54762	HRDW,WSHR,FLAT,ST,ZN,SLVR,M8,8.4X21X4.3

WARNING: ALL HAVIS INC. PRODUCTS ARE DESIGNED WITH SAFETY OF USE AND INSTALLATION IN MIND. HOWEVER, IT IS THE SOLE RESPONSIBILITY OF THE OWNER/OPERATOR OF A VEHICLE USING HAVIS INC. MOUNTING AND DOCKING EQUIPMENT, TO ENSURE THAT THE EQUIPMENT IS INSTALLED SO THAT IT WILL NOT INTERFERE WITH VEHICLE OPERATION, INTERFERE WITH SAFETY DEVICES, OBSTRUCT VIEW OF DRIVING CONDITIONS, OR IN ANY WAY DEGRADE OCCUPANT SAFETY. IMPROPER INSTALLATION CAN CAUSE SERIOUS INJURY IN THE EVENT OF AN ACCIDENT. INSTALLATION SHOULD ONLY BE PERFORMED BY QUALIFIED PROFESSIONALS. COMPUTERS AND MOTION DEVICES MUST BE MOVED TO AND STOWED/SECURED IN THEIR SAFE DRIVING POSITIONS BEFORE OPERATING VEHICLE.

DRAWING NO. <b>C-HDM-1032-INST</b>	
PRODUCT DESCRIPTION <b>INST, HDM BASE, DODGE RAM DP, 2025+</b>	
 1-800-524-9900 WWW.HAVIS.COM	WEIGHT: (LBS) <b>9.964</b>
	REV. DATE <b>12-25</b>