

INSTALLATION INSTRUCTIONS WGI-F26 INTERIOR WINDOW GUARDS

For 2020 -2026 FORD TRANSIT WINDOW VAN (WAGON) with
MEDIUM ROOF, REGULAR LENGTH 130"INCH WHEEL BASE
and SIDE SLIDING DOOR


TOOLS REQUIRED:

Power Drill	Ratcheting Wrench	Hook style and Straight pick tools
Metric Socket set	1/8" Drill Bit	T-50 Torx Bit (for seat belts)
Phillips Screw Driver	Plastic Cutting Tool (utility knife or tin snips)	

NOTE:

1. Some photos in these instructions show a low roof van. Installation process for the medium roof van is the same.

WGI-F26 PARTS INCLUDED:

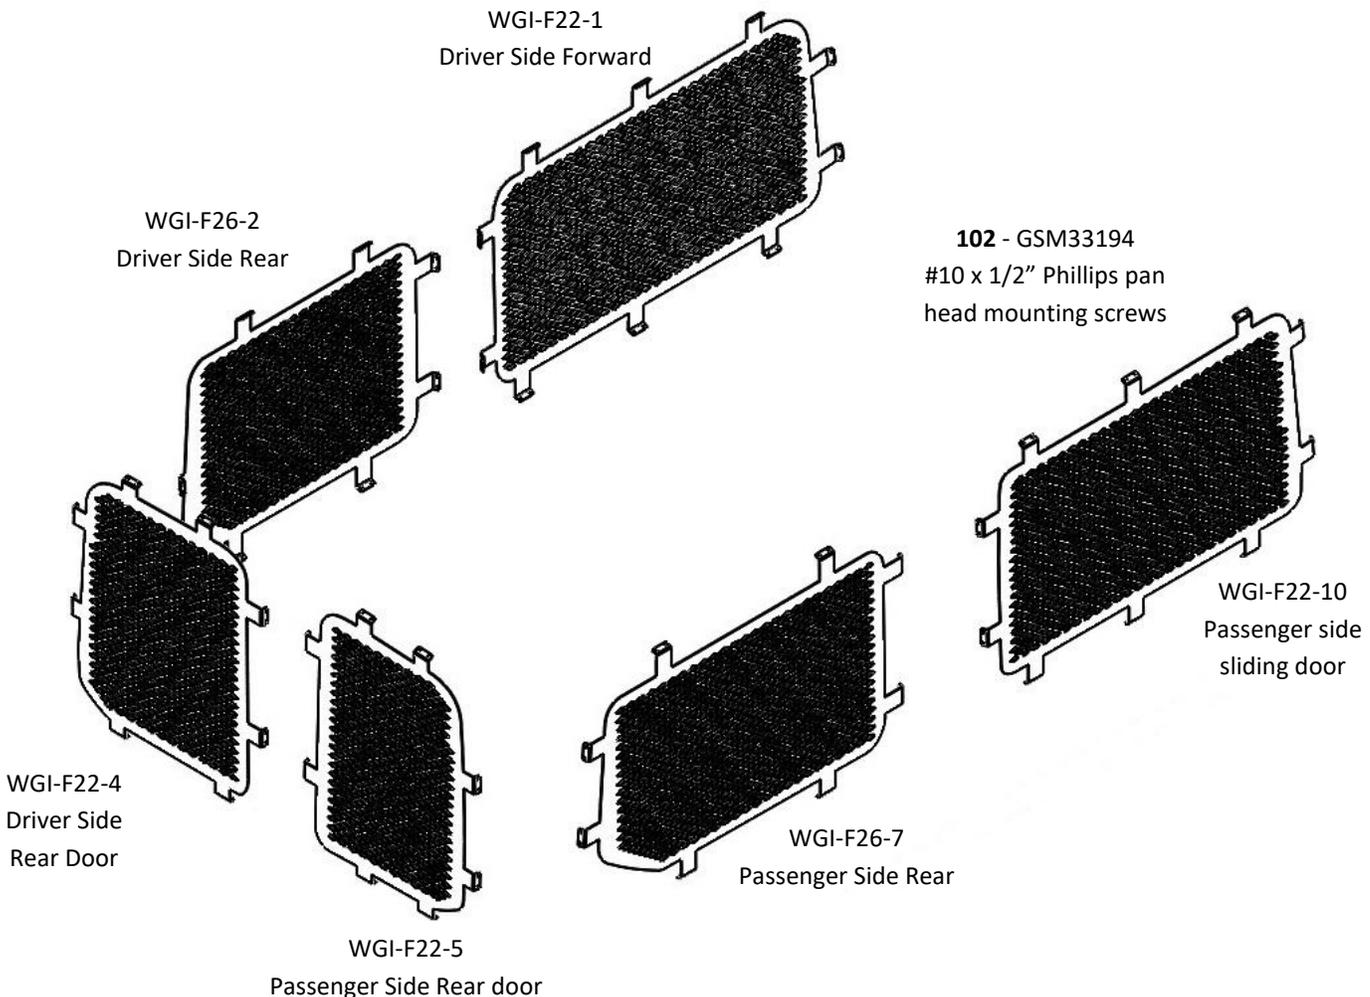

Always!

- Read all instructions before installing any Havis, Inc. products.
- **Check for obstructions (Wires, brake lines, fuel tank, etc.) before drilling any holes!**
- Use hardware provided with install kit



Remove the rear seats out of the van. Start by grabbing the seat release with a long hook style pick tool.

This may not be needed if seats have pull / release straps.



The latch will relock itself once you let go. Use another pick tool or small screwdriver to keep the latch released while you release the other side.



Carefully remove the vans interior panels including the door panels.



When the latch is hooked, simply pull up to release the latch.



When both latches are released push the seat forward to remove. The front is hooked and will need to be slid rearwards.



Removing the headliner is recommended but not required. Removing the headliner will be required if installing a Front or Middle Partition.



Determine location of each guard. Place guard up to the window frame, mark and pre drill mount holes with a 1/8" drill bit.
(Slight bending of the tabs may be necessary to ensure a proper fit)




Attach guards to frame using #10 x 1/2" screws
(GSM33194)



Follow same process for opposite side



Take care when attaching screws to metal brace
to not push into the glass

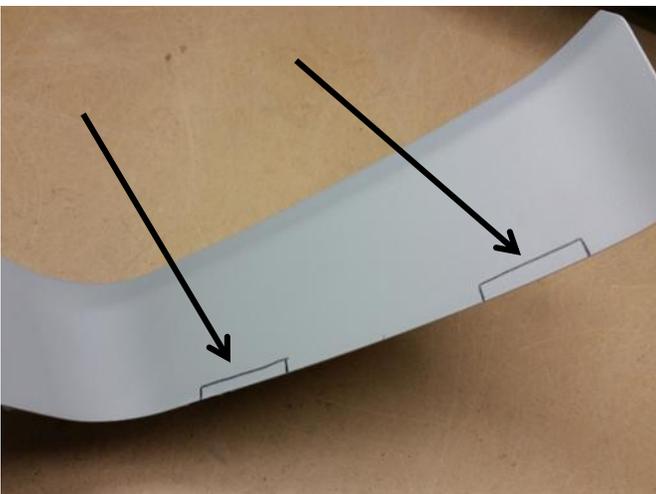

Draw a line between the points to help with maintaining a straight cut. Remove (notch) plastic from the panel as needed for mounting tab clearance.




When reinstalling the trim, additional notching
may be necessary. Cut as needed.



Follow same process for all doors




Follow same process for all doors

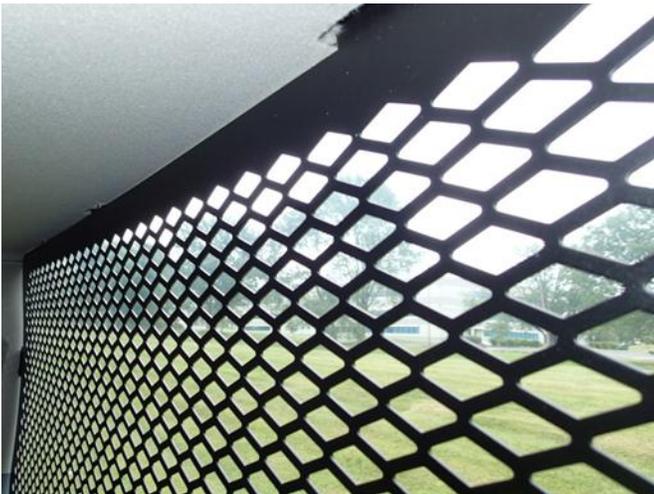

The headliner will need to be notched around the tabs so that it sits properly above the screens.



Completed trim and headliner

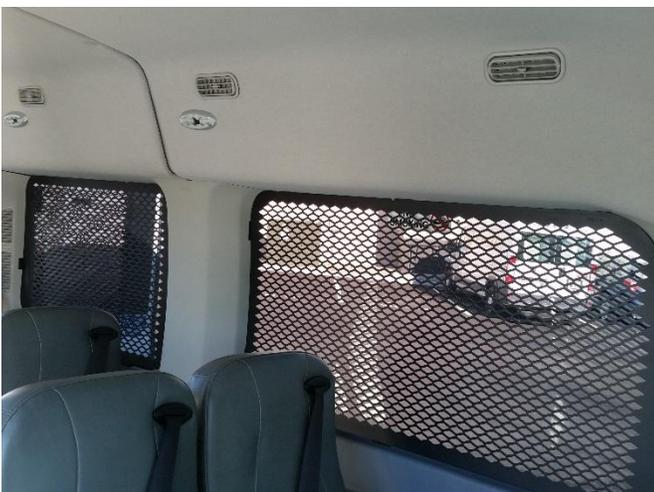

Completed trim and headliner



Installation is now complete.