
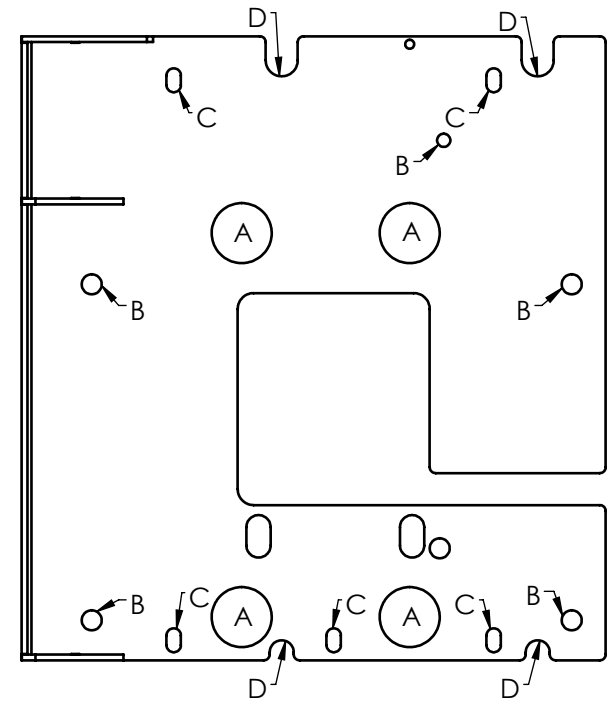


INSTALLATION INSTRUCTIONS:


1. REMOVE PASSENGER SEAT MOUNTING BOLTS
2. DETERMINE CORRECT BOLT PATTERN FOR YOUR TRUCK
3. LIFT SEAT AND SLIDE HDM BASE UNDER, BEING CAREFUL NOT TO PINCH ANY WIRES OR AIR LINES (IF EQUIPPED)
4. REINSTALL SEAT BOLTS AND TIGHTEN
5. ATTACH HDM PLATFORM TO HDM BASE IN DESIRED LOCATION USING INCLUDED 5/16 HARDWARE
6. ADJUST FEET TO CONTACT THE FLOOR, TIGHTENING LOCK NUTS WHEN DONE
7. INSTALL POLE AND MOTION DEVICE (NOT INCLUDED)
8. ATTACH SUPPORT ARM COLLAR TO POLE, AND SUPPORT ARM BRACKET TO SEAT BASE, HDM BASE, OR ANOTHER COMPONENT OF THE TRUCK
9. TIGHTEN ALL HARDWARE

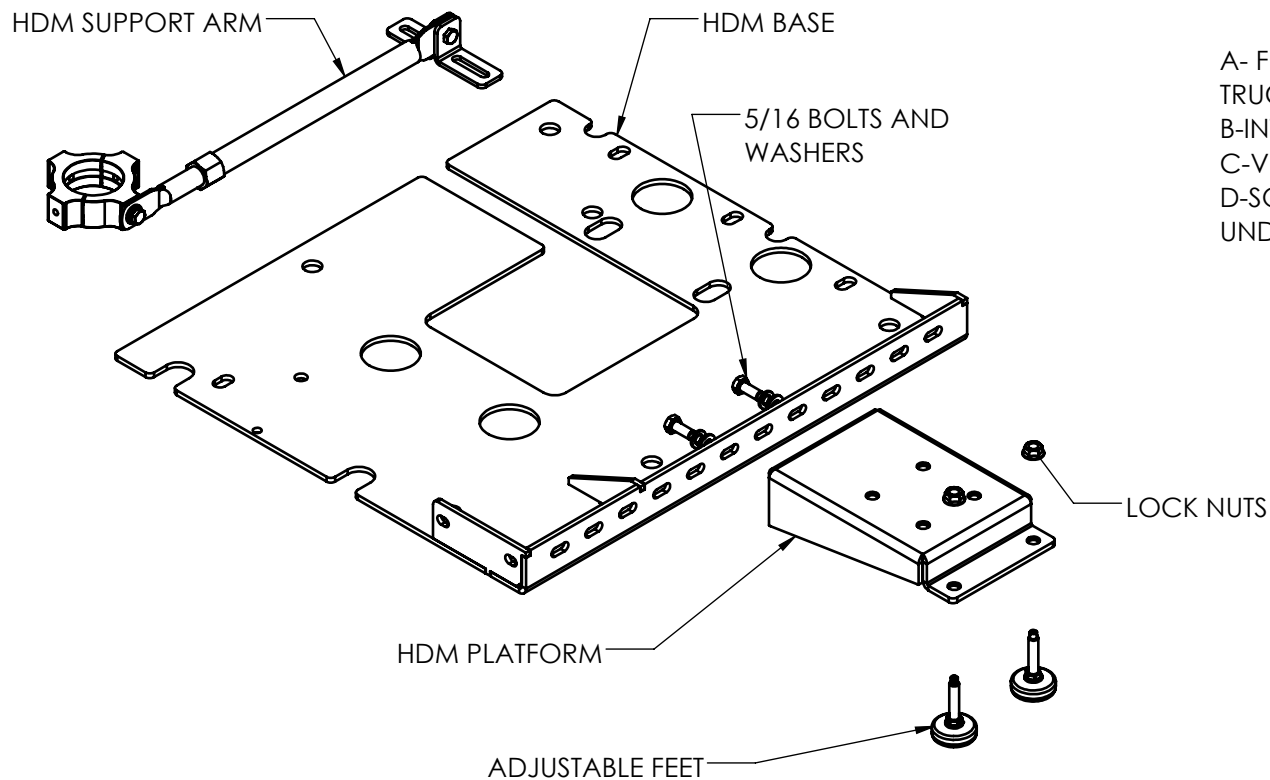


A- FREIGHTLINER, PETERBILT, MACK, WESTERN STAR, OTHER TRUCKS WITH STANDARD AIR RIDE MOUNT PATTERN
 B-INTERNATIONAL
 C-VOLVO
 D-SOME KENWORTH AND PETERBILT MODELS W/ LARGE UNDERSEAT STORAGE BOXES

HAVIS HAVIS, INC. 75 JACKSONVILLE RD. WARMINSTER, PA. 18974 1-800-524-9900		
TITLE: INSTALLATION INSTRUCTIONS, LARGE TRUCK HDM BASE		
DO NOT SCALE DRAWING		
SIZE A	DWG. NO. C-HDM-1001-INST	REV 6-18
WEIGHT (LB): 22.43	SCALE: 1:6	SHEET 1 OF 2


FREIGHTLINER, PETERBILT, MACK, WESTERN
STAR, KENWORTH, AIR RIDE TYPICAL PATTERN

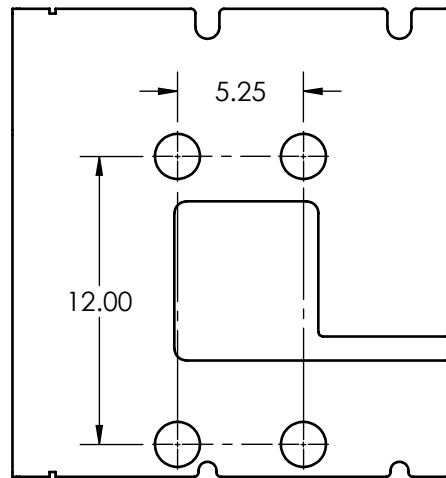


INTERNATIONAL TYPICAL PATTERN

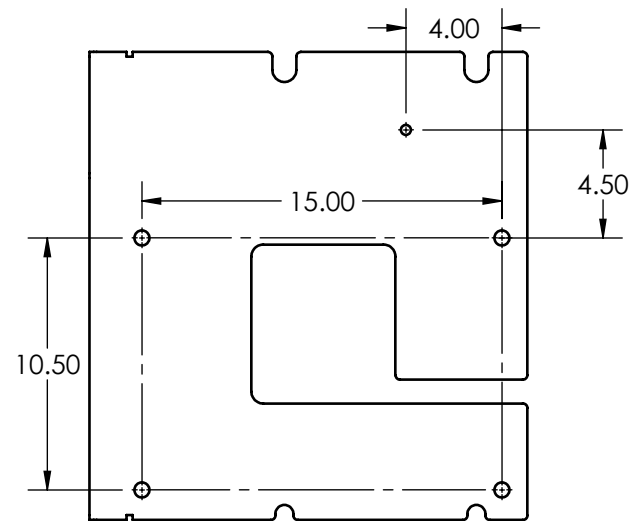


FRONT

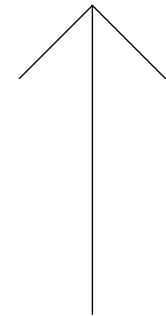

VOLVO TYPICAL PATTERN

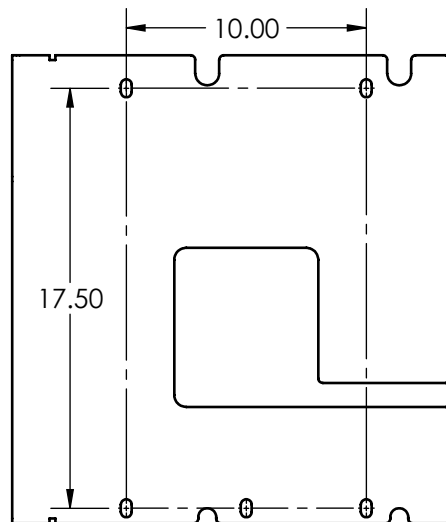

UNDERSEAT STORAGE BOX TYPICAL PATTERN

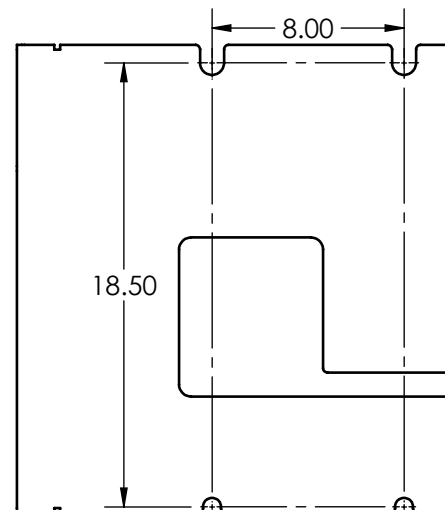

HAVIS HAVIS, INC.		75 JACKSONVILLE RD. WARMINSTER, PA. 18974 1-800-524-9900
TITLE: BOLT PATTERNS, LARGE TRUCK HDM BASE		
DO NOT SCALE DRAWING		
SIZE A	DWG. NO. C-HDM-1001-INST	REV 6-18
WEIGHT (LB): 16.032	SCALE: 1:8	SHEET 2 OF 2