

**INSTALLATION:**

1. FOR VEHICLE WITH OEM 40/20/40 BENCH SEAT.
2. REMOVE INBOARD OEM SEAT BOLTS CLOSEST TO TRANS HUMPH.
3. PLACE HUMPH BRACKET BETWEEN SEAT BRACKETS AND FLOOR.
4. BOLT ALL BRACKETS TO FLOOR WITH PREVIOUSLY REMOVED OEM BOLTS.
5. INSTALL CONSOLE OR TRACK TO HUMPH BRACKET USING (4) 1/4-20 X 3/4 HEX HEAD BOLTS, FLAT WASHERS AND 1/4-20 FLANGED NUTS.


**NOTES:**

RECOMMENDED MOUNTING BRACKET FOR C-AS-840-11 CONSOLE.

IF CONSOLE IS NOT DESIRED, EQUIPMENT CAN BE MOUNTED DIRECTLY TO FLOOR BRACKET.

IF CONSOLE IS NOT DESIRED AND MORE SURFACE AREA IS NEEDED, AN OPTIONAL C-TMW-12E PLATE CAN BE BOLTED TO THE FLOOR BRACKET.

NOTE: DOES NOT WORK WITH OEM CENTER CONSOLE.

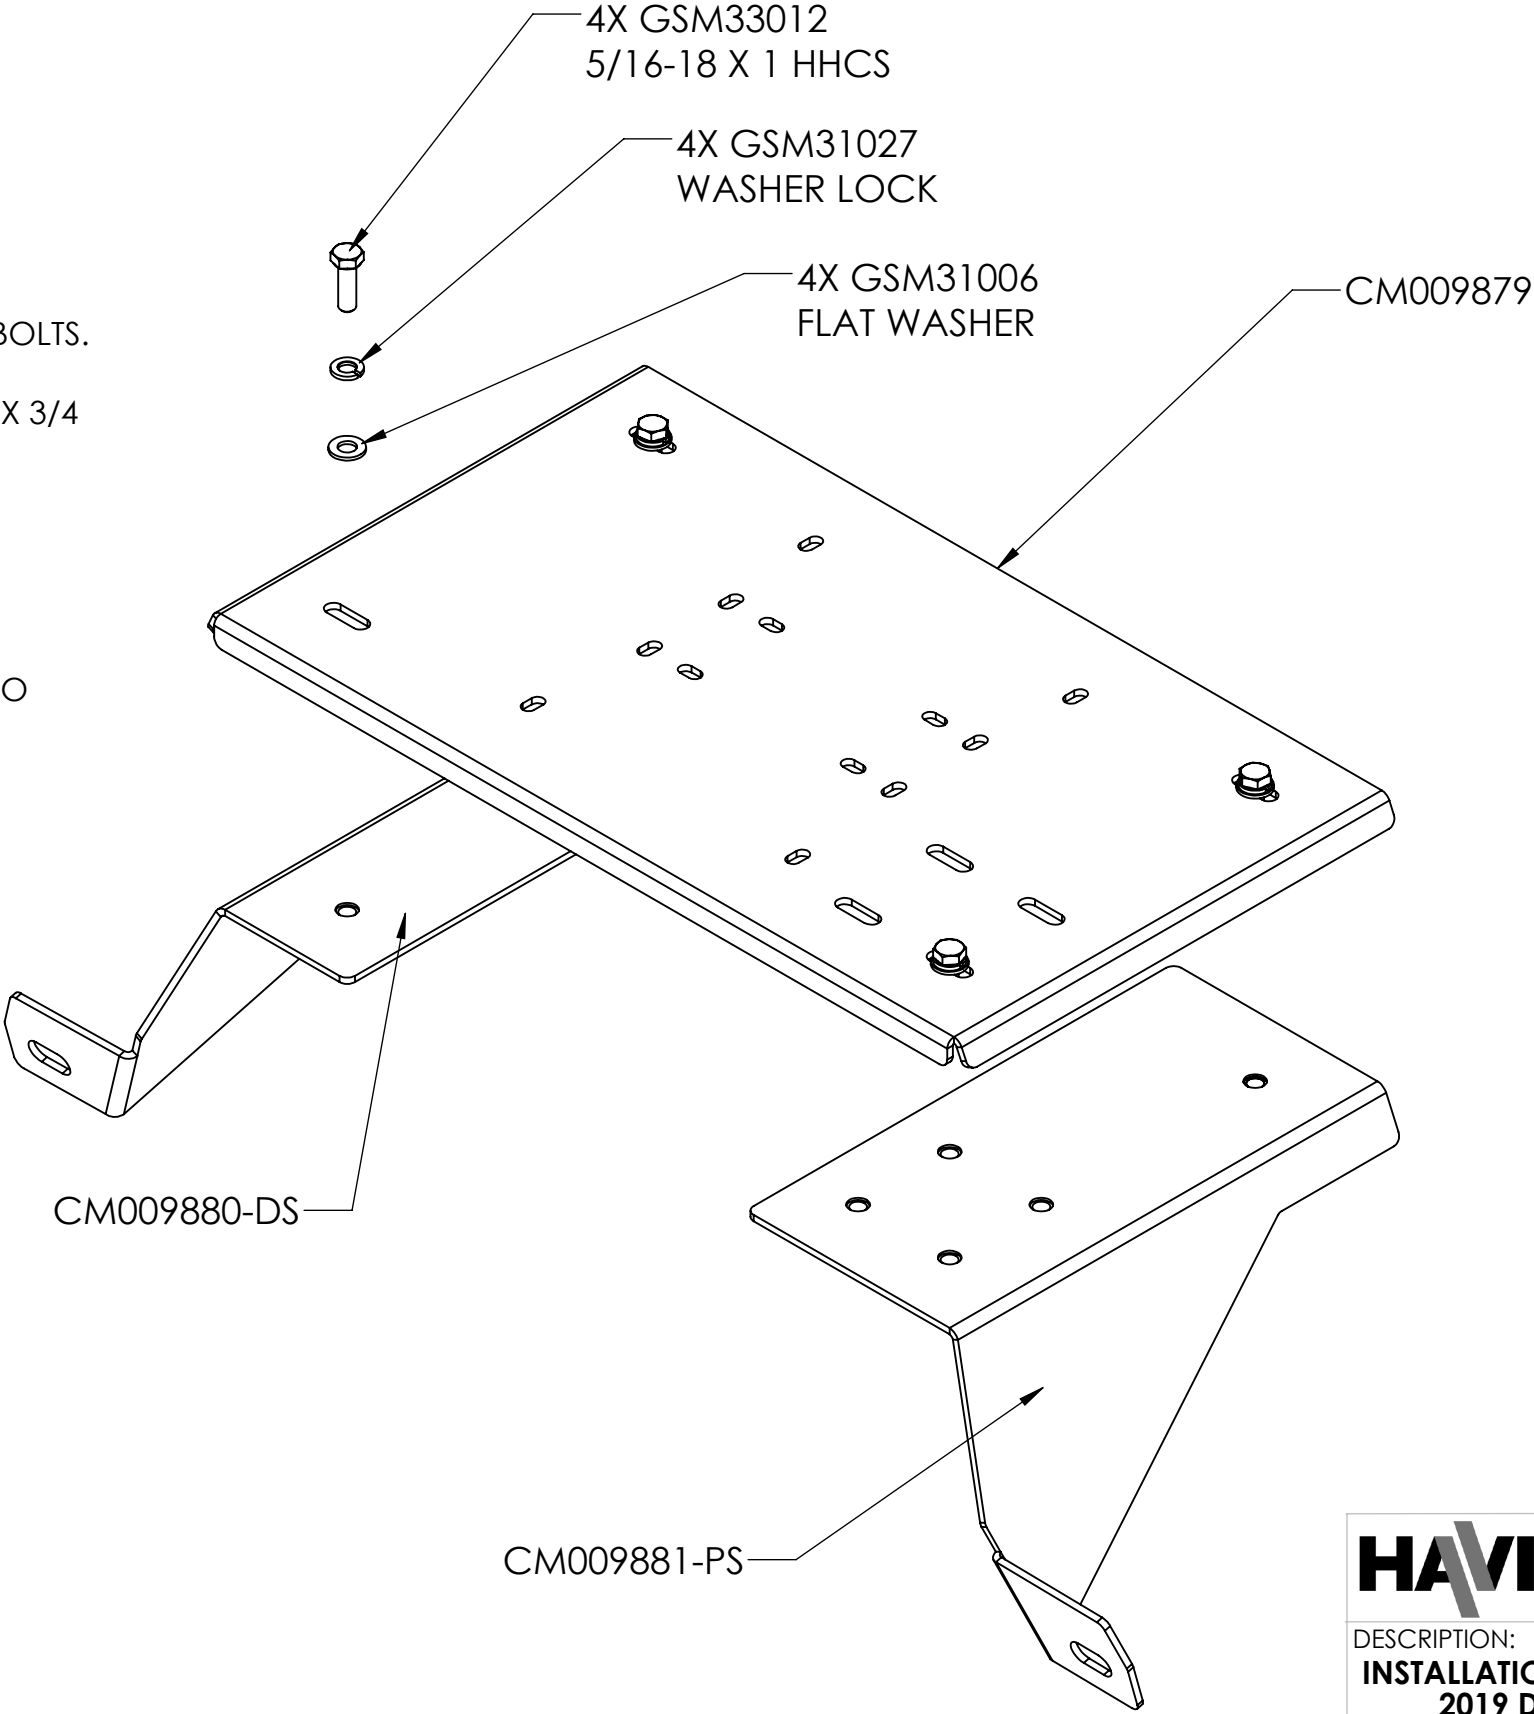

<b>HAVIS</b> Corporate Headquarters HAVIS, INC. 75 Jacksonville Road Warminster, PA 18974 1-800-524-9900	
DESCRIPTION: <b>INSTALLATION, FRONT HUMPH BRKT, 2019 DODGE RAM 1500</b>	
DRAWING: <b>C-B71-INST</b>	VERSION: <b>12-19</b>
SCALE: 1:8 DO NOT SCALE DRAWING SHEET 1 OF 1 F-730-012 REV B	