
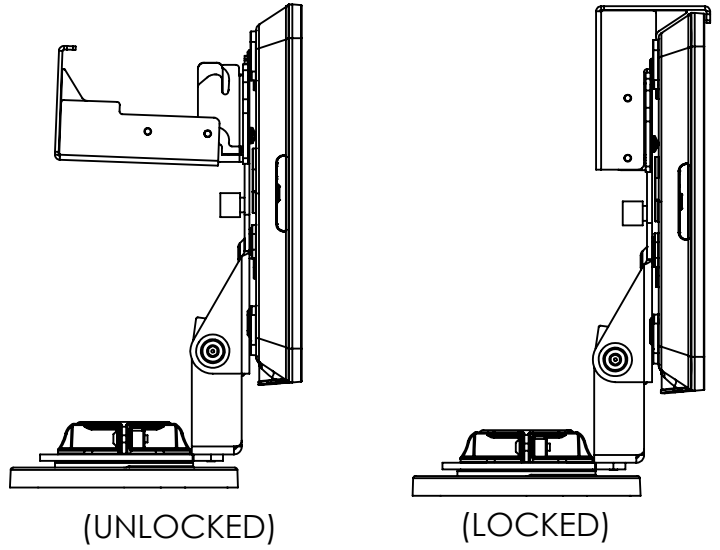


TOOLS LIST:


- 1. #2 PHILLIPS SCREW DRIVER

ASSEMBLY STEPS:

1. REMOVE **CREDIT CARD MACHINE** FROM **EXISTING CENTER HOLE SWIVEL STAND** BY REMOVING **EXISTING MACHINE THUMB SCREW** (DISCARD) AND LIFT **CREDIT CARD MACHINE** OFF OF **KEYHOLE STANDOFFS** AS SHOWN.
2. ATTACH **WIRE HARNESS** USING PROVIDED **#8-32 X .25\"**
3. ATTACH **FIXED REAR LOCKING BRACKET** TO **EXISTING CENTER HOLE SWIVEL STAND** BY USING **2X #8-32 X .38\"**
4. REINSTALL **CREDIT CARD MACHINE** ONTO **EXISTING CENTER HOLE SWIVEL STAND** BY SLIDING IT BACK ONTO **KEYHOLE STANDOFFS**.
5. FEED **MACHINE CABLE** THROUGH **EXISTING CABLE CLIP** AS SHOWN.
6. MOVE **HINGED REAR LOCKING BRACKET** INTO PLACE AND LOCK AS SHOWN IN **DETAIL A**.

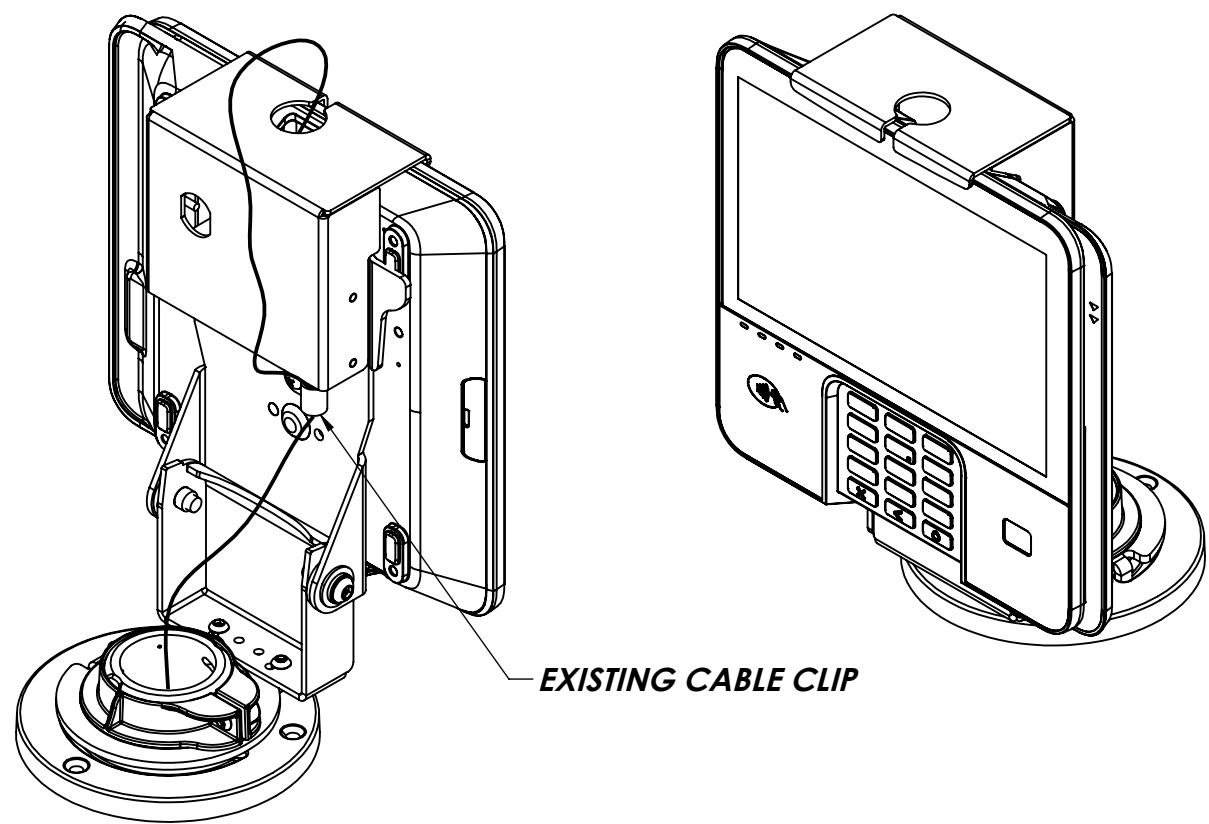

DETAIL A

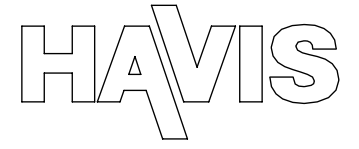DWG. NO. PTM-VFN-01		REV. A	TITLE REAR LOCKING ADD-ON KIT VERIFONE M440/M450		REVISIONS				
DRAWN J. TERVEER		DATE 4/18/2024			REV	DESCRIPTION	DATE	BY	CHK'D
					A		04/18/24	JVT	JVT
THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF HAVIS, INC. AND REPRODUCTION IN PART OR IN WHOLE WITHOUT THE WRITTEN PERMISSION OF HAVIS, INC. IS PROHIBITED.					CUSTOMER INSTRUCTIONS				