

INSTALLATION INSTRUCTIONS C-VS-1000-INUT-DBC

10" Console for 2020-2026 Ford Interceptor Utility

TOOLS REQUIRED:

Phillips Screw Driver
Metric Socket Set

Standard Socket Set
Wire Cutters

T-20 Torx Bit
Wire Crimping Tool

PARTS and MOUNTING HARDWARE:

<u>QTY</u>	<u>DESCRIPTION</u>	<u>PART#</u>
1	Rear floor mounting bracket	55999
1	Driver side front mounting bracket	13366
1	Passenger side front mounting bracket	13367
1	Lower front cross support	13368
1	Upper front cross support	13369
1	Parking brake relocation bracket	23194
4	Screw 1/4-20 X 3/4" Hex Head Cap	GSM33001
4	Washer 1/4" Flat Zinc Plated	GSM31005


C-HK-351

17	1/4" Serrated nut	GSM30023
17	1/4" x 3/4" Carriage bolts	GSM32000
3	10-32 Keps nut	GSM30028
3	10-32 x 3/4" Machine screws	GSM33119
4	#8 x 1/4" Flat head screws	GSM33178

Always!

- Read all instructions before installing any Havis, Inc. products.
- **Check for obstructions (Wires, brake lines, fuel tank, etc.) before drilling any holes!**
 - Use hardware provided with install kit

C-VS-1000-INUT-DBC

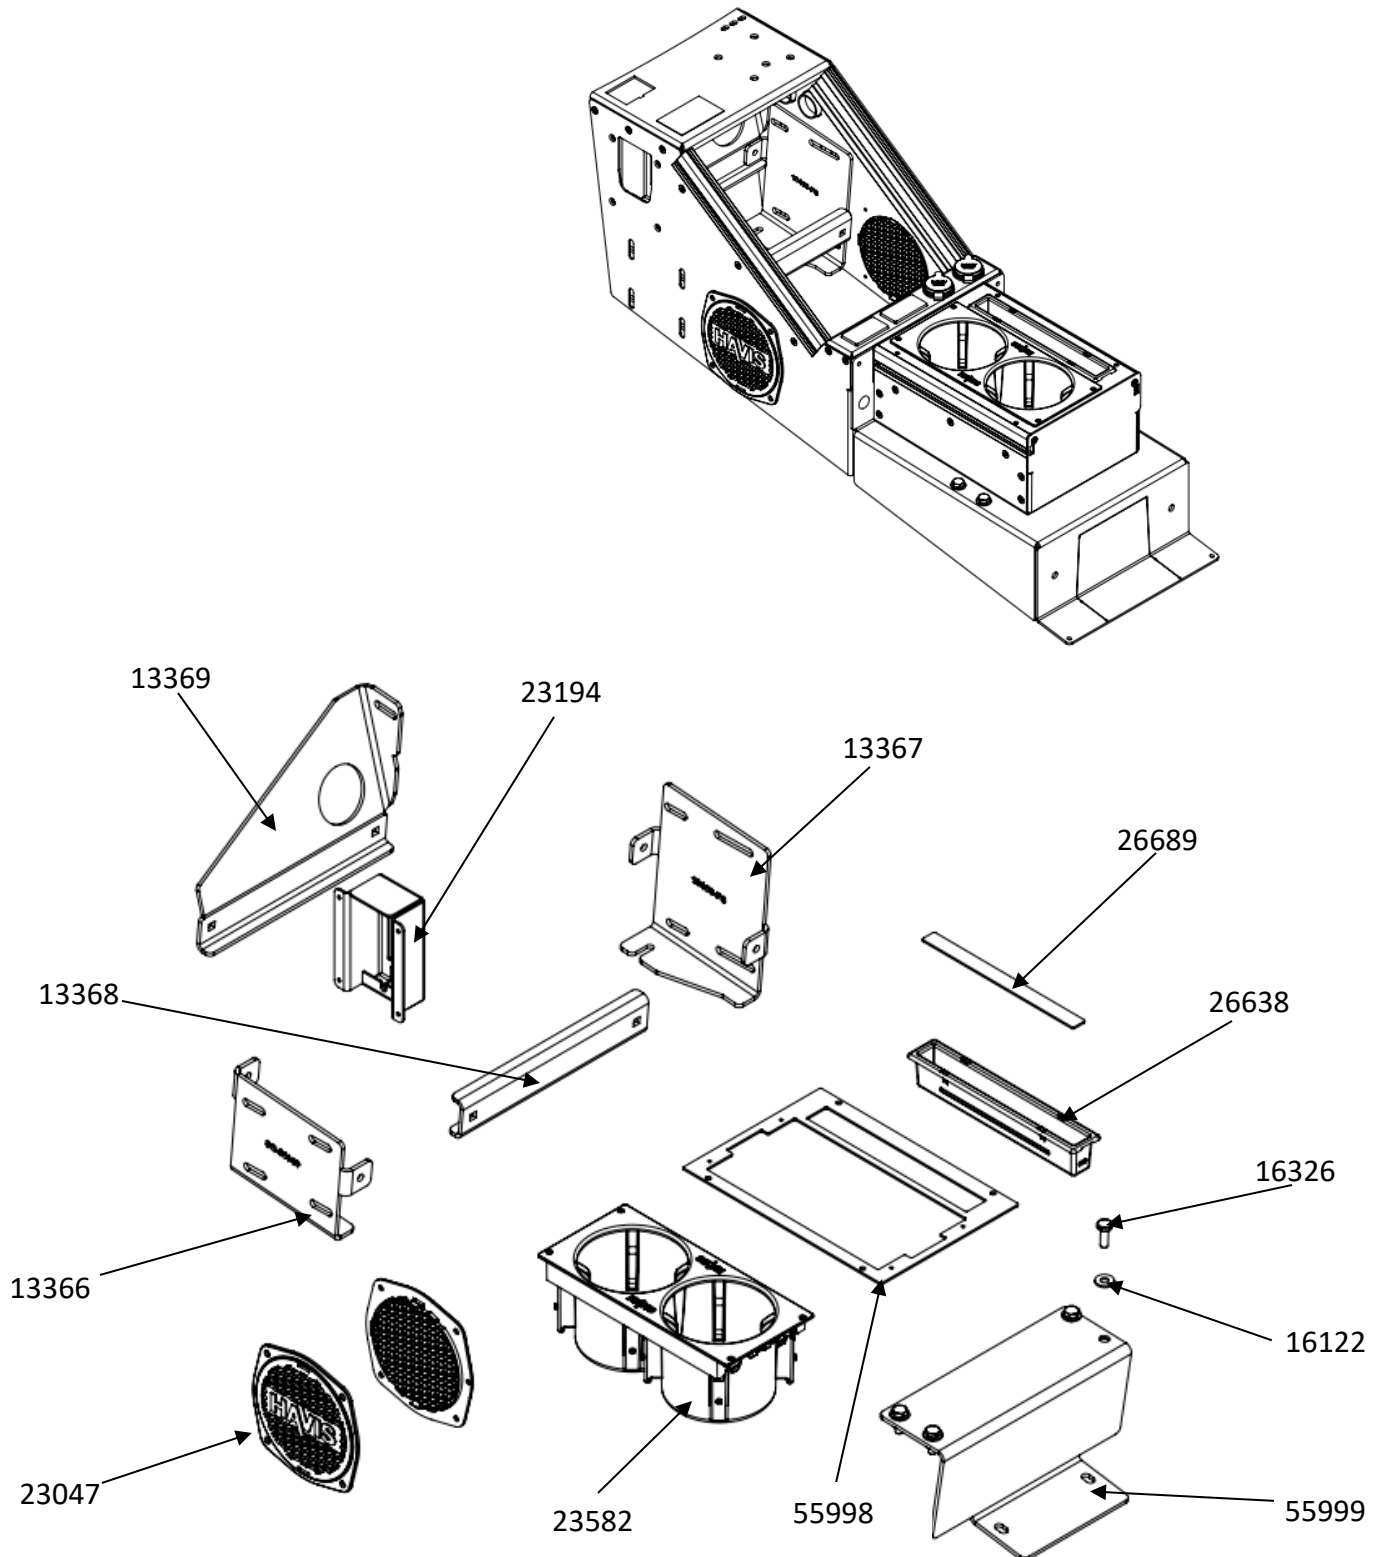



View of Intercepter Utility before install




Remove OEM tunnel plate by removing rear nuts.
Front nuts only have to be loosened.
The OEM track is slotted at the front. (10mm socket)




Remove fasteners on sides of lower trim.
(7mm)



Remove lower dash trim by carefully pulling it
towards the rear of the vehicle.

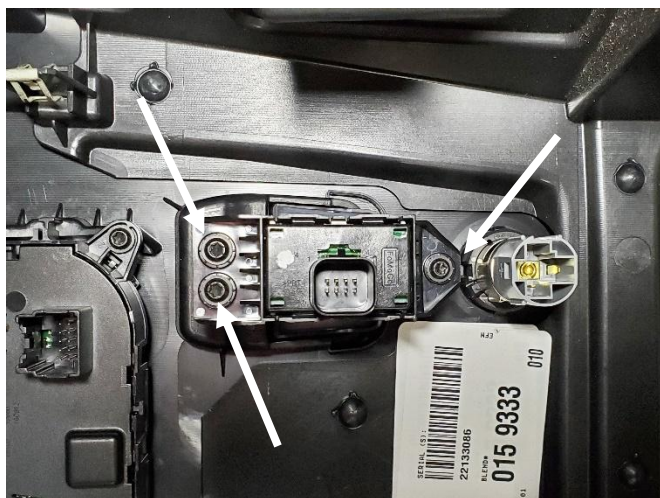

Remove OEM electronic parking brake switch, 12 v
socket and USB retaining bracket. (T-20 fasteners)
Re-install trim and OEM fasteners into dash.

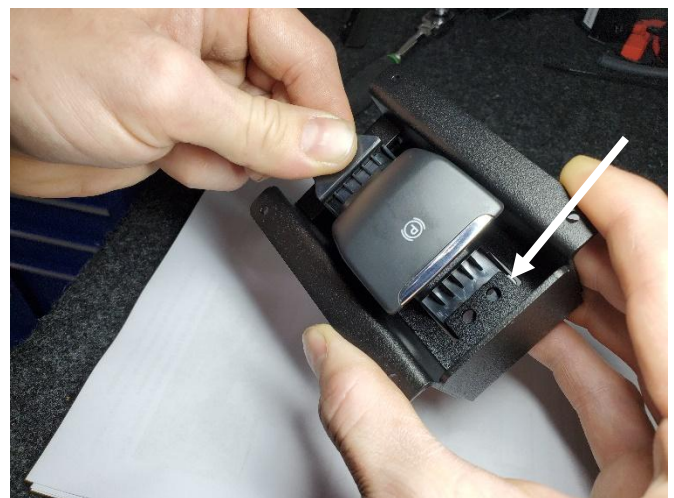

Install previously removed parking brake switch into
supplied relocation bracket. Angle the section with
the two holes under the lip of the bracket.



While pushing the brake switch forward, slide the rear of the switch under the lip of the bracket and lineup the holes.

It is important to make sure the plastic flange of the switch is under the metal tab of the bracket.




Attach switch to bracket using (3) 10-32 x 3/4" screws and Keps nuts.




Attach brake switch bracket to console using (4) #8 x 1/4" flat head screws.



Confirm correct operation of parking brake assembly.

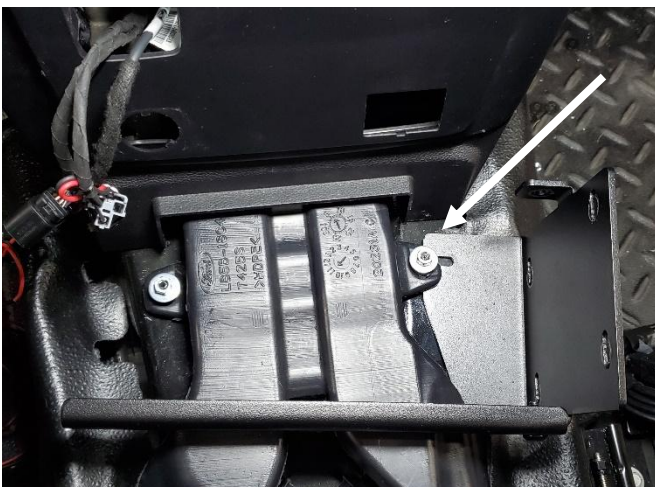

Loosen OEM nuts from front ductwork. (10mm socket) Slide front mounting brackets under ductwork from the sides onto OEM studs. **Note: Make sure brackets are below plastic vent and sitting on top of metal floor.**

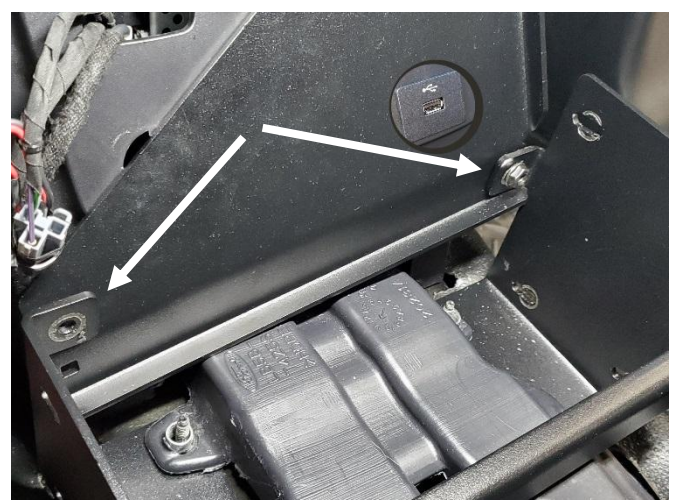

Attach front upper and lower cross supports to mount brackets with 1/4" x 3/4" Carriage bolts and serrated nuts.



Retighten OEM ductwork nuts and bracket hardware.



Attach rear mounting bracket to floor studs using previously removed OEM nuts. (10mm socket)



Place console over previously installed brackets attach with carriage bolts, serrated nuts, 1/4-20 X 3/4" screw hex head cap and 1/4" washer. Ensure console is tight to dash. Tighten all hardware.



Relocate OEM USB module into top of console. Wire and install equipment as needed.

