

INSTALLATION INSTRUCTIONS K9-A-128 OPTIONAL DIVIDER FOR K9-C26 INSERT

TOOLS REQUIRED:


Phillips screwdriver 7/16" open end wrench Awl tool

HARDWARE and PARTS:

QTY	DESCRIPTION	PART#
2	1/4" Serrated flange nut	GSM30170
2	1/4" X 3/4" Carriage bolt	GSM32024
3	1/4" Flat washer	GSM31048
3	1/4" X 3/4" Phillips head machine screw	GSM34102

INSTALLATION:

1. Install main K9 insert.
2. Place divider wall assembly inside K9 insert with swing door towards the front.
3. Use Awl or Phillips screwdriver to align the mounting holes.
4. Attach divider to rear bulkhead with 1/4" X 3/4" Phillips screws and flat washers.
5. Attach divider to front bulkhead with 1/4" X 3/4" Carriage bolts and nuts.
6. Tighten hardware and check emergency exit door operation.
7. Cut rubber mat if desired, on either side of divider.

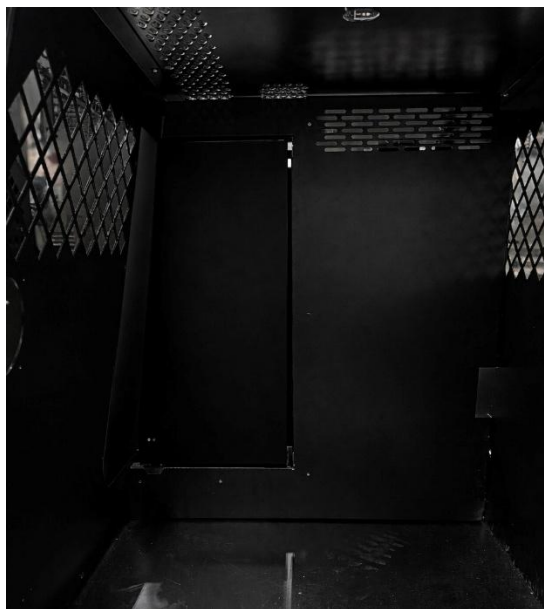

K9-A-128-B