

INSTALLATION INSTRUCTIONS C-TTP-TAH-106

2021-2022 Chevrolet Tahoe PPV

For Mounting C-SBX-1000 Series Drawers

With Havis Extra Length and K9-PT inserts

(K9-C26-XL, K9-C26-XL-B, K9-C26-PT and K9-C26-PT-B)

TOOLS REQUIRED:

Standard Socket Set Metric Socket Set 5/32" Allen Key/hex bit T50 Torx

C-TTP-TAH-104 (Main Box) PARTS and MOUNTING HARDWARE:

<u>QTY</u>	<u>DESCRIPTION</u>	<u>ITEM#</u>	
1	Main Box assembly	25730	
1	Lid – Full size	25732	
2	Rear Floor Bracket	24807	
2	Side top trim bracket	24802	
1	DS Front Floor Bracket	24803	
1	PS Front Floor Bracket	24804	
16	1/4 Star washer	16148	
16	1/4" x 3/4" Hex bolt	16326	
6	1" Hole plug	15803	
8	1/4" x 5/8" Button head screw	25661	
1	1/4-20 Serrated nut	16013	
4	1/4 x 3/4 HH SEMS	16359	
1	Equipment mounting tray (removable)	24819	included in main box
4	8-32 x 1/2" Machine screw	16378	for removable tray
4	# 8 Flat washer	16119	for removable tray

C-TTP-TAH-107 (7" Riser) PARTS and MOUNTING HARDWARE:

1	Driver side riser bracket	24982
1	Passenger side riser bracket	24983
1	Forward side riser bracket	25714
4	1/4" Flat washer	16122
4	5/16" Flat washer	16123
4	1/4" Lock washer	16142
4	5/16" Lock washer	16143
4	5/16" x 3/4" Thread-Forming Screw	16245
4	5/16" X 1 HHCS	16336
4	1/4" X 3/4 PPHMS	16404
3	#10 X 1/2 PPHSMS	16655

Always!

- Read all instructions before installing any Havis, Inc. products.
- Use hardware provided with install kit

**C-TTP-TAH-106
Assembly**

Front of
vehicle

C-TTP-TAH-107

25714

16655

16404

16142

16122

16245

16336

16143

16123

24983

24982

25661

25730

25732

C-TTP-TAH-104

24802

24819

24804

24803

24807

16518


For K9-PT model, attach passenger
side bracket to K9 bracket with one (1)
1/4" x 3/4" Hex bolt and serrated nut.
16326 and 16013



With K9-C26-XL or -PT installed, place driver and passenger side front floor brackets into vehicle.



Attach each front floor bracket to 1/4 x 3/4 bolts in K9 rear closeout bracket. Also attach to pre-drilled holes with two (2) 1/4 x 3/4 self-threading screws. **For K9-PT model, attach passenger side bracket with one (1) 1/4" x 3/4" Hex bolt and serrated nut.**

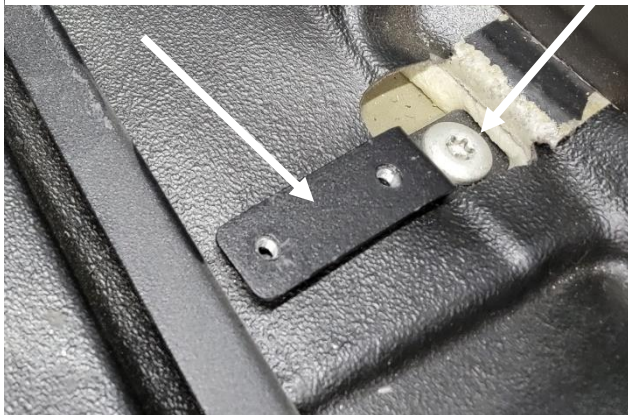


Locate OEM rear floor seat belt anchor bolts.
Loosely attach rear floor brackets to OEM rear seat belt anchors on each side with existing OEM 12mm Torx bolts.



Place main box assembly onto brackets and attach with (10) 1/4" x 3/4" Hex bolts and star washers.

Mount equipment onto removable tray as desired.

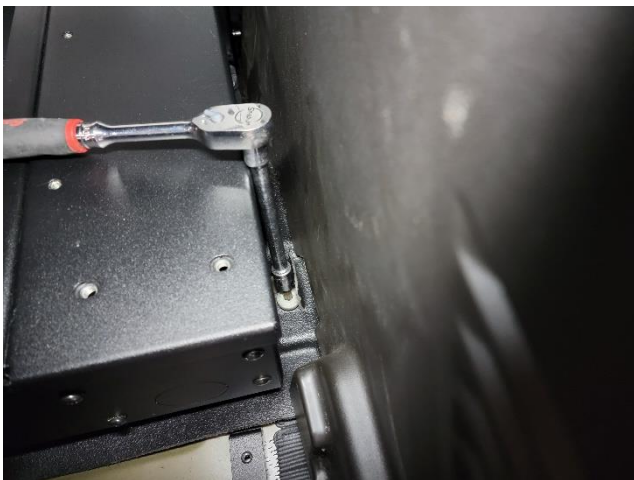

Tighten floor bracket hardware.
Attach side top trim brackets with 1/4" x 3/4" Hex bolts and star washers.



Attach main box lid with 1/4" x 5/8" Button head screws.
Attach risers to main box with 5/16" Hex bolts and washers.
Attach risers to drawer with 5/16" Thread-Forming Screws.
Attach backing plate to risers and drawer with 1/4" and #10 Phillips hardware.