

# INSTALLATION INSTRUCTIONS

## VERTICAL CARGO BARRIER CBR-MSTG-1

### For 2021-2024 FORD MUSTANG MACH-E

#### **TOOLS REQUIRED:**

Panel removal tool

Standard Socket set


T-50 Torx

#### **PARTS and MOUNTING HARDWARE:**

<b><u>QTY</u></b>	<b><u>DESCRIPTION</u></b>	<b><u>PART#</u></b>
1	Driver Side Lower Bracket	26695
1	Passenger Side Lower Bracket	26696
1	Driver Side Upper Bracket	26697
1	Passenger Side Upper Bracket	26698
1	Cargo Barrier	26699
12	1/4-20 Hex Flange Serrated Nut	16013
2	5/16" hex Flange Serrated Nut	16014
4	1/4" x 1/2" Carriage Bolt	16222
2	5/16" x 3/4" Carriage Bolt	16228

#### **Always!**

- Read all instructions before installing any Havis, Inc. products.
  - Use hardware provided with install kit

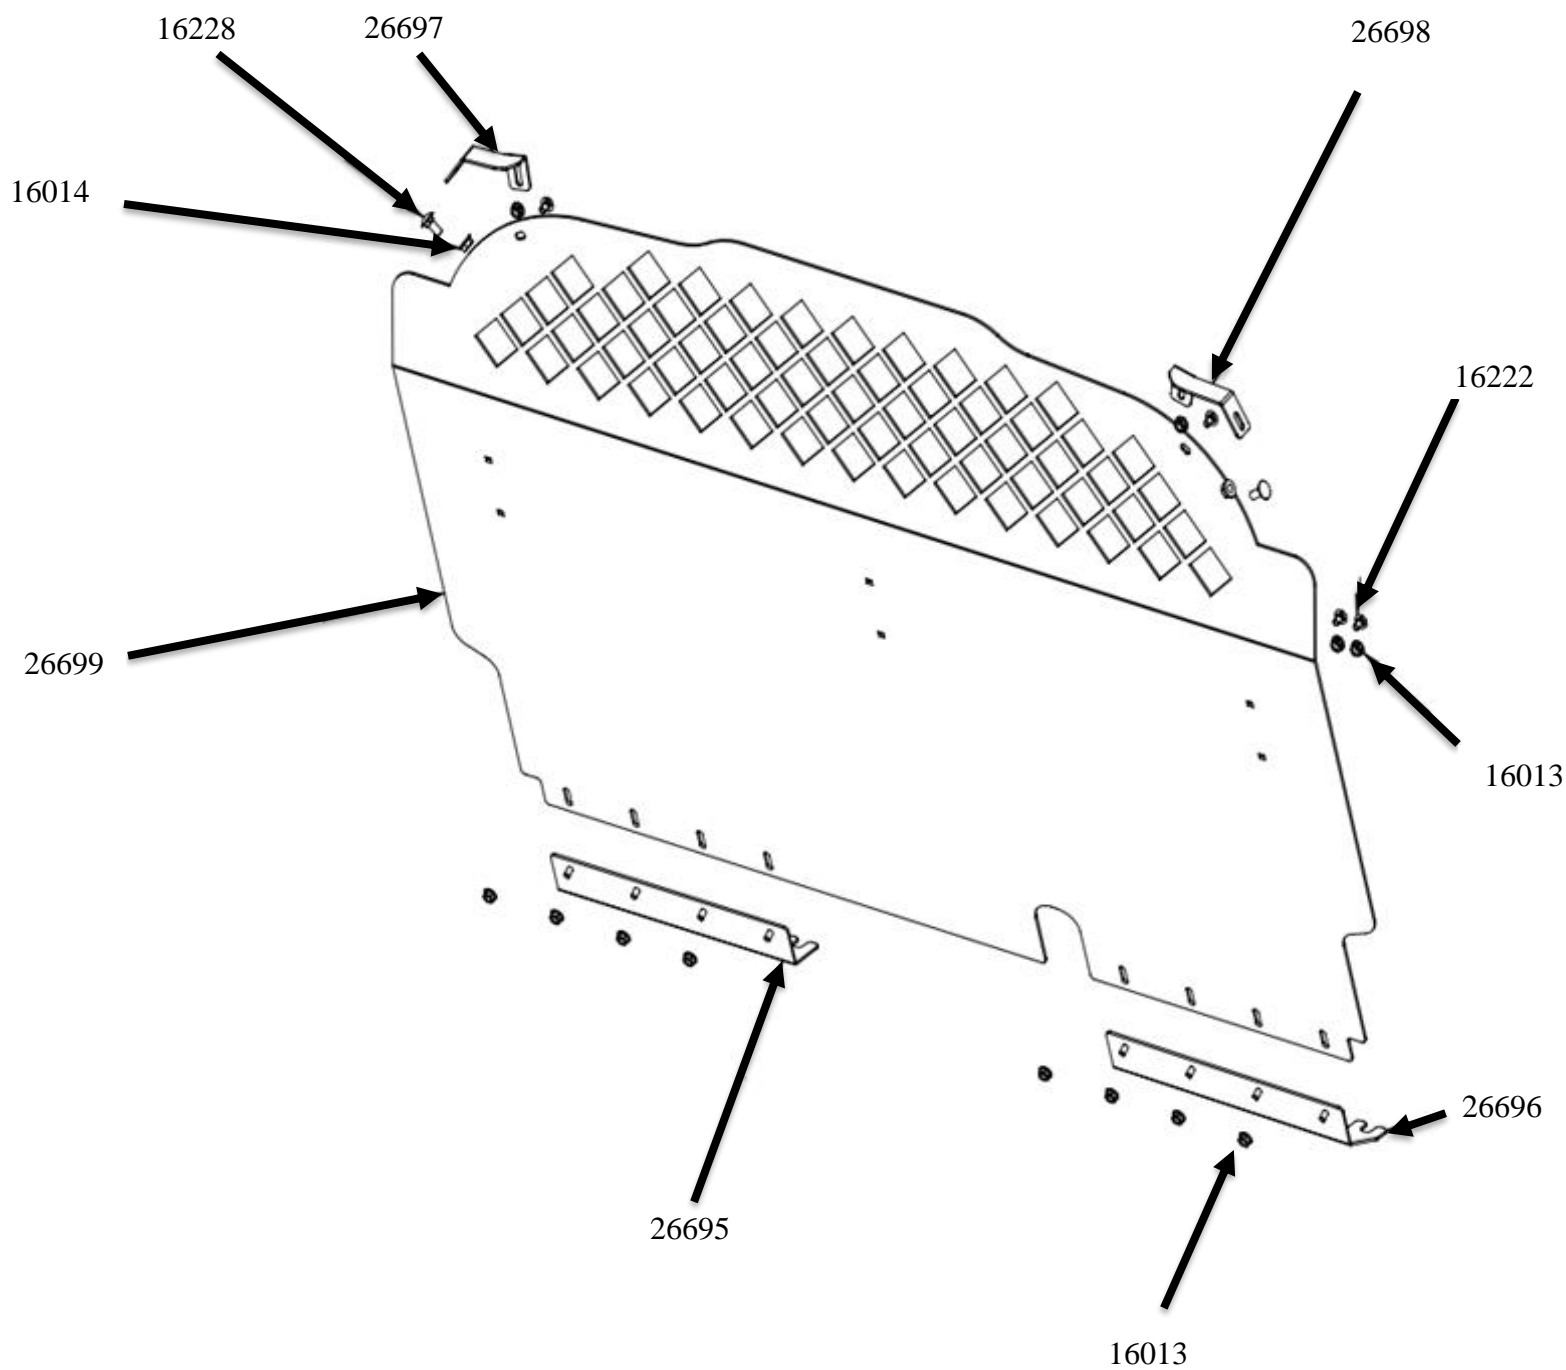




Carefully Remove Rear seat bottom by pulling up and then towards the front of the vehicle.



Remove T-50 Torx bolts from driver and passenger side lower seat back brackets.

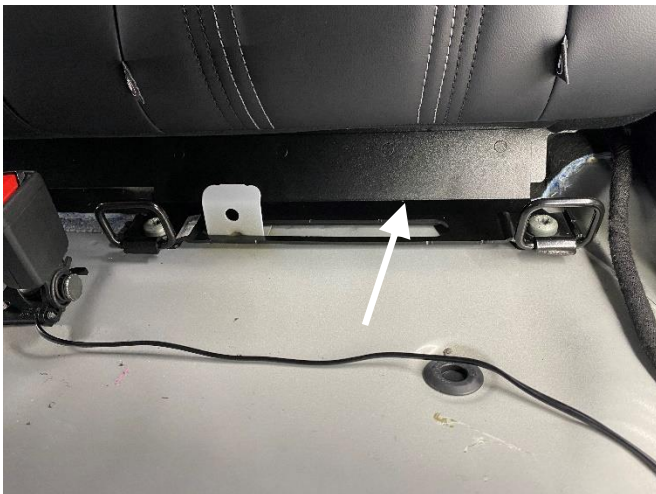

Install driver and passenger side lower brackets using OEM T-50 Torx.



Prior to placing barrier into the vehicle, remove C-pillar trim and install upper barrier brackets into OEM slot with 5/16 carriage bolt and serrated nut.



Place barrier into vehicle, attach bottom with (8) 1/4" serrated nuts.



Attach top corners with 5/16" x 3/4" carriage bolts and serrated nuts.  
Tighten all hardware.